

BEST PRACTICES

Protect your mixer from damage with these tips



When shutting down your Hobart mixer for extended periods of time follow these procedures to help protect your machine from damage and to provide easier start-up when your operations resume. For more detail on these procedures, refer to the operator manual or operator wall chart.



Shutting Down

- Disconnect the electrical power to the machine
- Clean and sanitize machines per owner's manual or cleaning card. Remove drip cup and wipe clean

Starting Up

- Disconnect the electrical power to the mixer
- 2. If any scheduled maintenance lapsed during storage, ensure it has been completed
- All specific details/instructions are included in the operator manual, perform checklist
- 4. Run mixer for a couple of minutes before cleaning and initial use with no agitators or accessories raise and lower the bowl, run through the motions without a batch
- 5. Clean and sanitize mixer before use per owner's manual or cleaning card
- 6. Listen for any unfamiliar noises. Call service if this occurs

Mixer Checklist

N50

□ Lubricate slideways (Lubriplate 630AA)

HL200, HMM20

- □ Lubricate slideways (Lubriplate 630AA)
- □ Work small amount of mineral oil under the lip of the planetary seal

HL300, HL400

- □ Lubricate slideways (Lubriplate 630AA)
- Work small amount of mineral oil under the lip of the planetary seal, at the agitator shaft above the attachment pin
- □ Check bowl lock lever (warm water and Lubriplate 630AA)

HL600, HL662, HL800

- □ Check transmission oil level
- □ Lubricate slideways (Lubriplate 630AA)
- □ Work small amount of mineral oil under the lip of the planetary seal
- □ Check bowl lock lever (warm water and Lubriplate 630AA)

HL1400, HL1400N**

- ☐ Check transmission oil level
- □ Check planetary oil level (sight glass)
- □ Lubricate slideways (Lubriplate 630AA)
- Work small amount of mineral oil under the lip of the planetary seal
- □ Check bowl lock lever (warm water and Lubriplate 630AA)
 - **For HL1400N, lubricate clamps



For service & information, contact 888-378-1338 | hobartcorp.com