

Deliming Your PW Prep Washer for Optimal Results

The Hobart PW Prep Washer is equipped with a delime notification that will appear on the display when deliming is recommended for the machine.




PREPARING Your PW Prep Washer for the Delime Cycle

1 REMOVE RACK, scrap basket and strainer screen(s) from the machine and **clean under warm soapy water,** removing any food soils; rinse thoroughly.




2 REINSTALL CLEANED STRAINER SCREEN(S), scrap basket and rack into the machine and close the door.

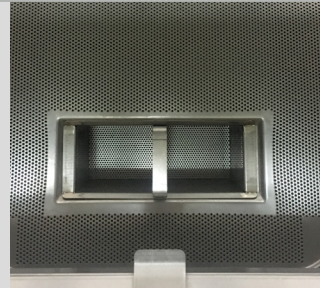

3 LOCATE YOUR DELIMING CHEMICAL (provided by your chemical supplier) for manual dosing into the tank, when prompted.



4 ⚠️ DISABLE THE DETERGENT FEEDER chemical system according to the chemical manufacturer's recommendation. This will prevent the addition of detergent during the deliming operation.

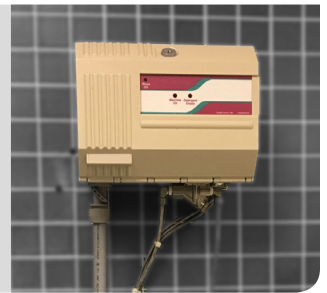

How to MANUALLY Activate the Delime Cycle


1 Press the button to begin.




2 Select "Manager Menu" by pressing button.



3 Enter the security code, "1001" for the machine using the following steps:
 for "1"
 for "0"
 for "0"
 for "1" to go to step 4

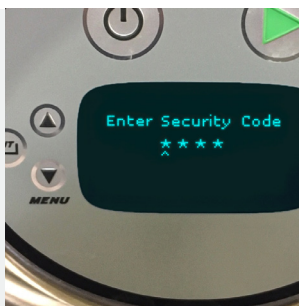


4 Use the button to select "Delime Now" from the Manager Menu. Follow steps 5-8 to complete process.

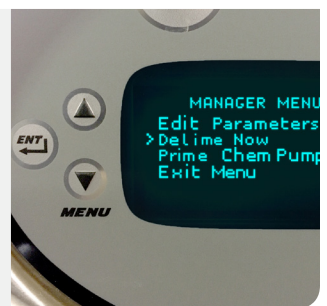


How to INITIATE the Delime Cycle When Prompted

5 The display will read, "DELIME RECOMMENDED – Would you like to delime now?" Select **YES** by pressing the button until the > symbol is shown to the left of **YES** and press the button.

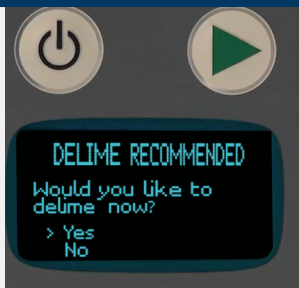

6 "DELIME INITIATED" will appear on the display. Press to enter the delime mode. The machine will drain and refill with fresh water. This will take some time to complete.

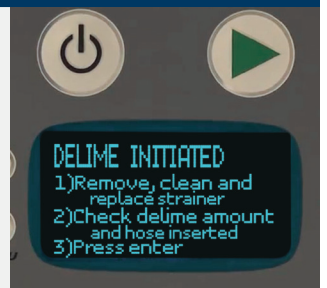

7 Open the door. Pour deliming chemical into the tank per supplier instructions for a 21 gallon tank (PW10) or for a 34 gallon tank (PW20). Close the door.
 Press button to continue the cycle.
 When the deliming cycle is complete, the machine will shut-off automatically.



8 Inspect the interior of the machine. If necessary, another delime cycle can be initiated by entering the **Manager Programming Mode (repeat steps 1-4 above)**. Reference your Hobart PW Owner's Manual for more information.

