

DAILY OPERATION

- Place strainer and scrap basket into the dishwasher. Make sure to line up arrows.
- Close both doors. Push **POWER** button.
- When fill is complete, the readout will display **READY**.
- Select the **WASH CYCLE**: 1, 2, 4, 6 minutes on both the upper and lower section.
- On the lower section select "U" for heavily soiled items. Watch video for more information.
NOTE: Use lower section control to turn on/off the lower section, be sure to turn this section off when not in use.
- To load a dishrack, open the door and slide the rack in the machine. Repeat on both sections.
- Close both doors, the machine will start automatically. The **PLAY** button turns blue, and a progress bar will appear behind both buttons.
- Once the screen shows a check mark and reads **CYCLE COMPLETED**, the dishrack may be removed. When using "U" cycle be sure the bottom of the screen reads cycle completed to ensure sanitization.
- To power off machine and drain, hold the **POWER** button down for 5 seconds.



Wash Cycle			Buttons	
Wash	Rinse	Complete	Lower Section On/Off	Sleep/Idle Mode
			I/O	

 
SCAN TO WATCH INSTRUCTIONAL VIDEO

hobartcorp.com/amtltraining

DAILY CLEANING


SCAN TO WATCH DAILY CLEANING VIDEO

hobartcorp.com/amtltraining

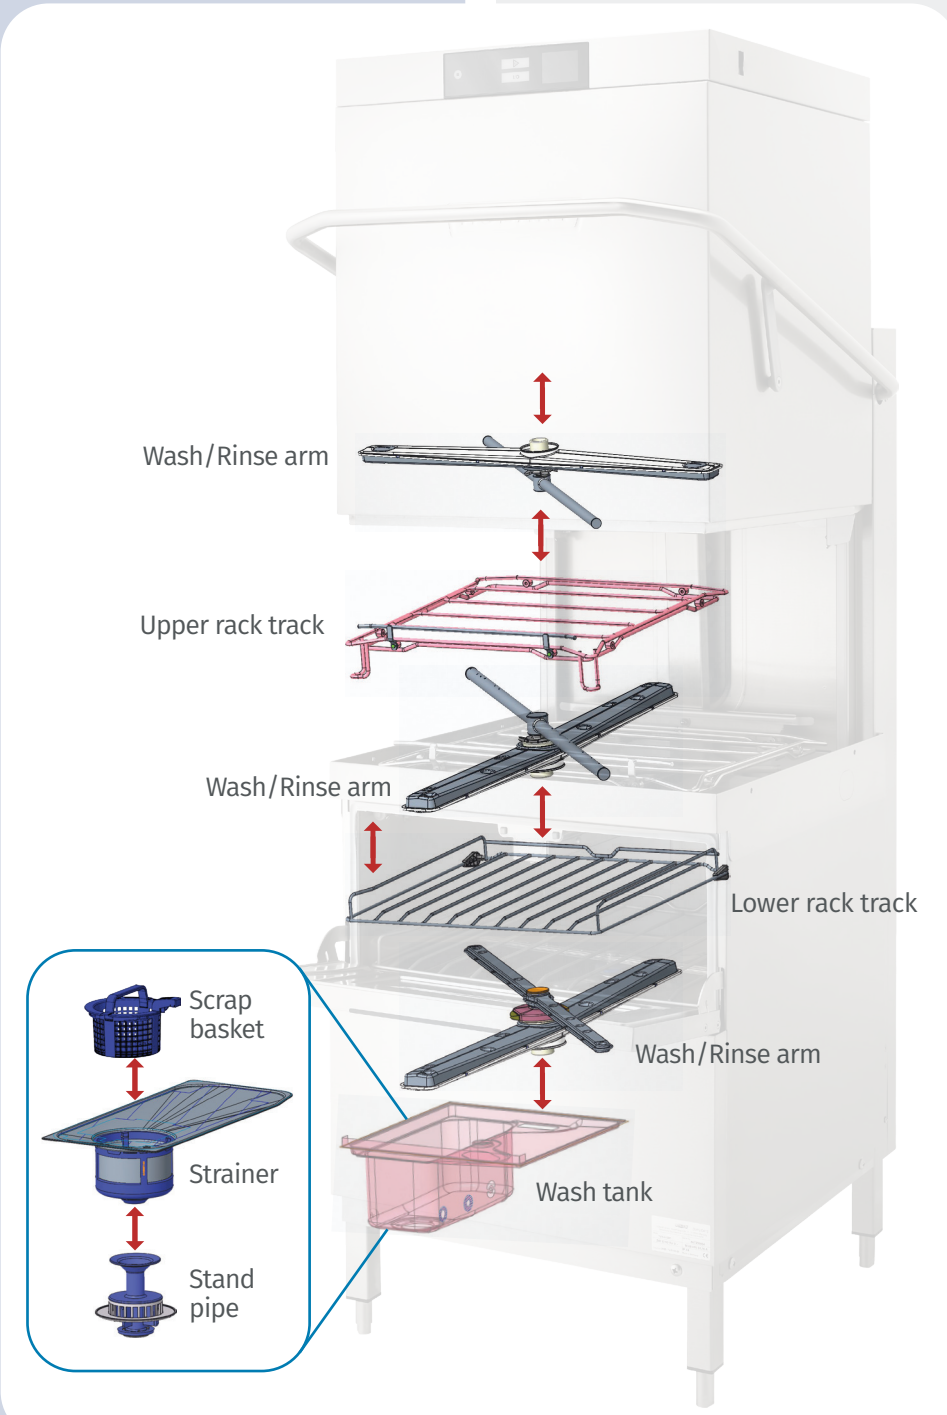

- Spray down the inside of the machine and scrub any hard-to-reach spots with a clean, damp cloth.
- Remove **upper section wash and rinse arms**. Remove both **rack tracks, level divider, strainer, and scrap basket** to clean and rinse.
- Make sure the **upper and lower wash and rinse arms in both sections**, rotate freely and are clear of any obstructions. In the lower section check fixed upper wash and rinse arms.
- Re-assemble the machine.
 - Replace **strainer and scrap basket**,
 - Replace **level divider**
 - Install **wash and rinse arms** (both sections, if removed)
 - Replace both **rack tracks**
- Close the door. Hold the **POWER** button for 5 seconds to shut down. Power button lights will turn off when machine is fully drained.
- After machine is drained, open hood and clean **inside of the machine** with a damp cloth.
- After cleaning, wipe down **machine exterior** with a damp cloth. Open machine door.

 Blue Bold Text = Clean Daily

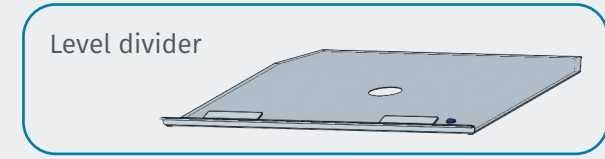


NOTE: If an error code is present on the screen, if available, press the "checkmark" to clear error.

OPERATIONAL TIPS - GET THE MOST OUT OF YOUR DISHWASHER

- PRE-SCRAP DISHES**
- USE COMMERCIAL DISHWASHER CHEMICALS ONLY**
Do not use any other chemicals with the dishwasher. Use PPE for handling.
- DELIME THE MACHINE**
The unit will alert you when deliming is required. When prompted, follow the instructions on the display.
NOTE: Add delimer based on your chemical providers instruction for an 8 gallon tank.

SCAN TO WATCH DELIME VIDEO

 PROPER RACKING WILL PROVIDE THE BEST CLEANING RESULTS.

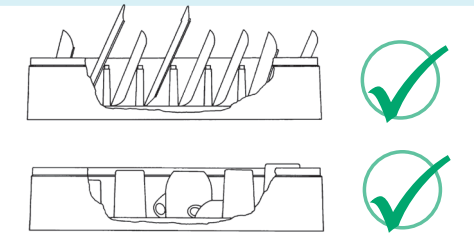

DO NOT OVERLOAD RACK
NOTE: You can load dishes directly on the lower section rack track if needed.