



# PW PREP WASHER | Daily Operation & Cleaning Guide


## DAILY START-UP:



[hobartcorp.com/PW](http://hobartcorp.com/PW)

### 1 INSPECT COMPONENTS

Before start up, make sure all components are clean and installed properly in the machine.  
*Note: PW20 has double the components as PW10.*

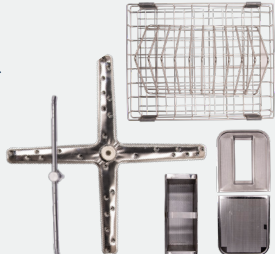

### 2 CHECK CHEMICAL BOTTLE LEVELS

Make sure you have sufficient chemicals for machine operation.



### 3 START UP

Close the door and press the power button.  
  
**FILL** and wash temperature will be displayed while machine is filling.



### 4 MACHINE READY

When fill is complete, the readout will display **READY** and the wash water temperature.  
**4A.** Select the wash cycle: 2, 4 or 6 (toggle through cycle options by pressing the **CYCLE** button).  
**4B.** Open door, pull out rack and load. Slide rack back into machine.



### 5 RUN WASH CYCLE

Close the door and press the **WASH** button  
  
*Note: For Advansys™ models, the door will lock and a cycle light will be displayed for the complete cycle.*



### 6 DO NOT OPEN THE DOOR UNTIL DISPLAY SHOWS **READY**

and sump temperature is displayed.  
  
*Note: For Advansys™ models: the cycle light will turn off, the door will unlock and the display will show **READY** along with the sump temperature.*



## DAILY CLEANING:



[hobartcorp.com/PW](http://hobartcorp.com/PW)

**1 SPRAY DOWN THE INSIDE OF THE MACHINE** with spray wand. Close machine door. Push the **POWER** button. The machine will drain and shut down.



**2 OPEN THE MACHINE DOOR**  
Remove rack, strainer screen(s) and scrap basket and rinse thoroughly.



**3 CHECK UPPER AND LOWER WASH /RINSE ARMS**  
Be sure they rotate freely and are clear of any obstructions. If not, remove arms and clean out obstructions. Spray down the sump with spray wand.



**4 RE-ASSEMBLE THE MACHINE**  
**4A.** Replace scrap screen(s) and scrap basket  
**4B.** Install wash and rinse arms if removed  
**4C.** Replace rack  
**4D.** Turn machine back on for 2 minutes to fill.



**5 TURN OFF MACHINE**  
Power off to flush sump. Wipe down machine interior and exterior with a clean, damp cloth.  
  
**⚠ DO NOT USE STEEL WOOL, A SCOURING PAD OR ABRASIVE MATERIAL TO CLEAN THE MACHINE.**



**6 PERIODIC MAINTENANCE**  
Remove & clean baffles on Advansys™ Models every 6-12 months (above the upper wash and rinse arms).  
  
*Note: For end of the day cleaning, complete steps 1-5 and leave the door open to allow the interior to air out and dry.*



## GET THE MOST OUT OF YOUR DISHWASHER



**PRE-SCRAP DISHES**  
Make sure to remove large food particles and debris before loading ware into the machine.



**USE ONLY COMMERCIAL CHEMICALS**  
Do not use any other non-commercial chemicals with the dishmachine.



**DO NOT OVERLOAD RACK**  
Load only one rack per cycle, and follow proper racking guidance.



**DELIME THE MACHINE**  
Deliming the machine is required when you see clear signs of limescale. The unit will alert you when deliming is required. When prompted, follow the instructions on the display.



SCAN TO WATCH DELIME VIDEO

[hobartcorp.com/PW](http://hobartcorp.com/PW)

## IMPORTANT DELIMING INFORMATION

- The dishwasher should be delimed on a regular basis as required. Consult a chemical professional for deliming chemicals.
- All Prep washers are equipped with an automatic delime cycle reminder. It is recommended that deliming be done when **DELIME RECOMMENDED** is lit.
- PW10eR and PW20eR models are equipped with an internal delime pump which will automatically pump the required amount of deliming agent into the unit.