



SERVICE KIT INSTRUCTION

SOLENOID VALVE

C24GA MODELS



- NOTICE -

This Manual is prepared for the use of trained Hobart Service Technicians and should not be used by those not properly qualified.

This manual is not intended to be all encompassing. If you have not attended a Hobart Service School for this product, you should read, in its entirety, the repair procedure you wish to perform to determine if you have the necessary tools, instruments and skills required to perform the procedure. Procedures for which you do not have the necessary tools, instruments and skills should be performed by a trained Hobart Service Technician.

The reproduction, transfer, sale or other use of this Manual, without the express written consent of Hobart, is prohibited.

INSTALLATION INSTRUCTIONS

SOLENOID VALVE ON SOLARONICS BURNER ASSEMBLY

SOLENOID VALVE 00-858579-00009



WARNING

Disconnect the electrical power to the machine and follow lockout / tagout procedures.

NOTE: The vendor has discontinued the coil style shown in Fig. 1. The replacement valve will now have a coil like Fig. 2.

Use top two vertical connections (1, Fig. 2) on current valve. The bottom horizontal connection (2, Fig. 2) is for ground is not used on the C24GA Solaronics burner.

PREVIOUS VALVE



Fig. 1

CURRENT VALVE

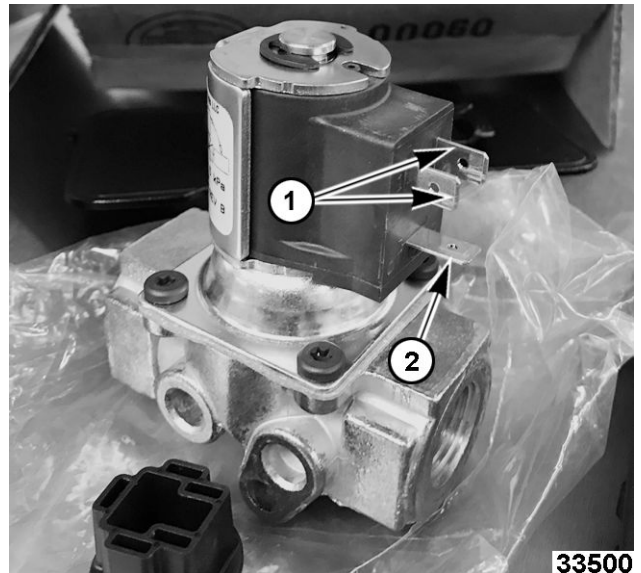


Fig. 2