## **HOBART** CL Installation Guidelines – Straight Installation



A HOBART RECOMMENDS MINIMUM 60" for clean table (not including rolled rim/end splash) to accommodate three racks.

**B TABLE LIMIT SWITCH** pauses operation when clean dish table is full, prolonging the life of the conveyor drive mechanism.

STANDARD TABLE HEIGHT 34" AFF (per spec sheets)

**C** 


## **D** ROOM CONSIDERATIONS

Delivery Path (Doorways/Elevators) should have a minimum clearance of 30  $^{7}\!\!/_8"$  W x 68  $^{1}\!\!/_2"$  H


## **E** DISH MACHINE TABLE TO TABLE CONNECTION DIMENSIONS

For **CL44**, inside tank dimension is 44" For **CL66**, inside tank dimension is 66"

## **Dishmachine Table Connections**

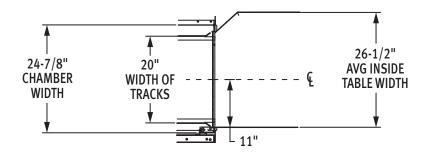

SUGGESTED TRACK AND TABLE LAYOUT

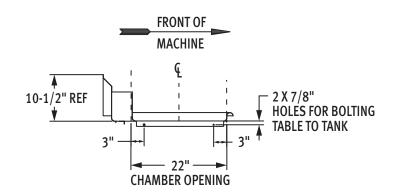

**VIEW SHOWING HOLE LOCATIONS IN** 

**TURNED DOWN PORTION OF TABLE** 

7/8" REF **USE SILICON BETWEEN** TABLE AND LIP OF TANK TO PREVENT LEAKAGE

SECTIONAL VIEW SHOWING TABLE CONNECTIONS

