





**CATALOG OF
REPLACEMENT
PARTS**

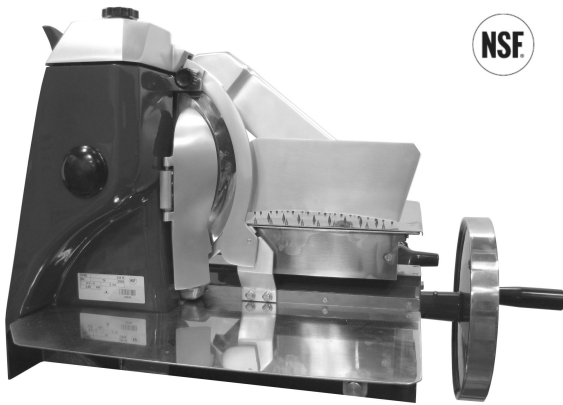

MODEL 330M SLICER

Table of Contents

5	BASE
7	TRANSMISSION
9	GUARDS
11	SLIDING PLATE
13	CARRIAGE
17	THICKNESS REGULATOR
19	SHARPENER
21	SLICER BASE

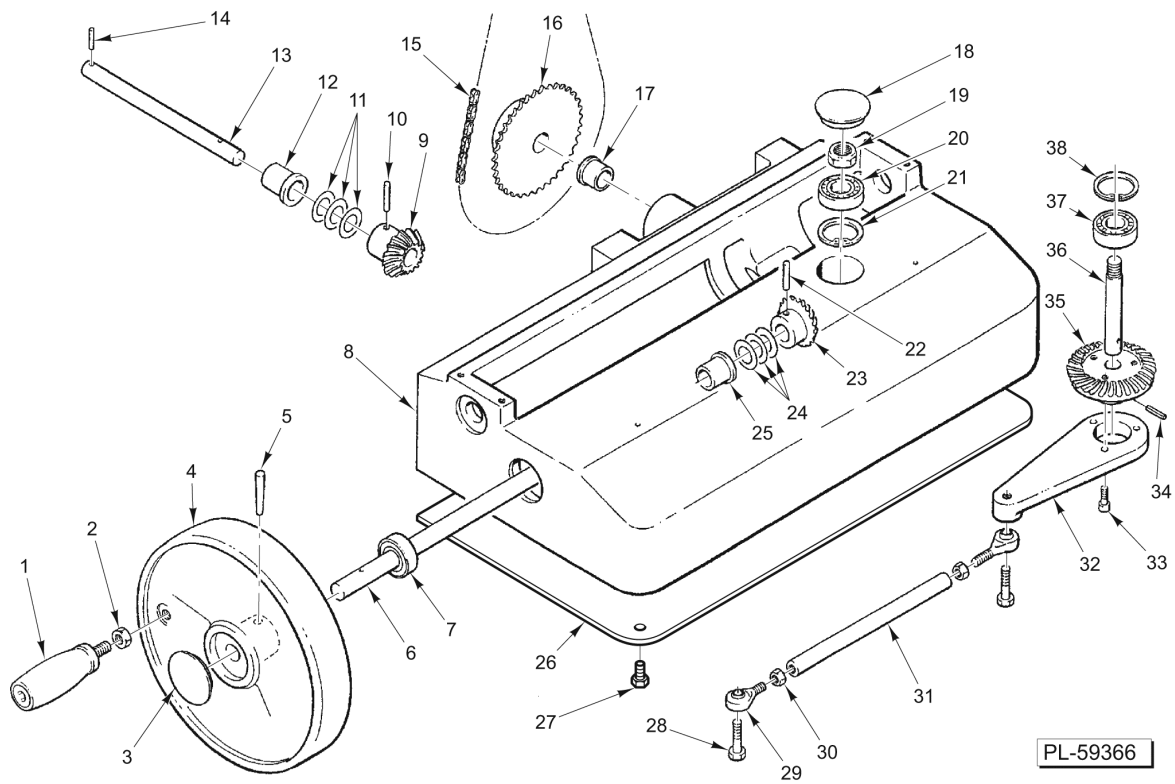


PL-59366

BASE

BASE


ILLUS.	PART NO.	NAME OF PART	AMT.
1	01-40330M-00001	Handle.....	1
2	01-40330M-00002	Nut.....	1
3	01-40330M-00003	Cover - Fly-Wheel.....	1
4	01-40330M-00004	Fly-Wheel.....	1
5	01-40330M-00005	Conic Pin.....	1
6	01-40330M-00007	Rod.....	1
7	01-40330M-00006	Bearing 6204.....	1
8	01-40330M-00008	Case.....	1
9	01-40330M-00013	Gear.....	1
10	01-40330M-00009	Springy Pin.....	1
11	01-40330M-00012	Ring.....	1
12	01-40330M-00011	Bushing 20 28 35.....	AR
13	01-40330M-00010	Shaft.....	1
14	01-40330M-00009	Springy Pin.....	1
15	01-40330M-00014	Chain.....	1
16	01-40330M-00015	Sprocket.....	1
17	01-40330M-00011	Bushing 20 28 35.....	1
18	01-40330M-00003	Cover - Fly-Wheel.....	1
19	01-40330M-00016	Nut.....	1
20	01-40330M-00017	Bearing 32004.....	1
21	01-40330M-00018	Circlip.....	1
22	01-40330M-00009	Springy Pin.....	1
23	01-40330M-00013	Gear.....	1
24	01-40330M-00012	Ring.....	1
25	01-40330M-00011	Bushing 20 28 35.....	1
26	01-40330M-00501	Plate.....	1
27	01-40330M-00137	Screw M4 x 8 (SST).....	1
28	01-40330M-00024	Screw.....	1
29	01-40330M-00027	Joint Ball.....	1
30	01-40330M-00025	Nut.....	1
31	01-40330M-00026	Connecting Rod.....	1
32	01-40330M-00023	Crankwheel.....	1
33	01-40330M-00022	Screw.....	1
34	01-40330M-00009	Springy Pin.....	1
35	01-40330M-00021	Gear.....	1
36	01-40330M-00020	Threaded Shaft.....	1
37	01-40330M-00019	Bearing 6004 2Z.....	1
38	01-40330M-00018	Circlip.....	1

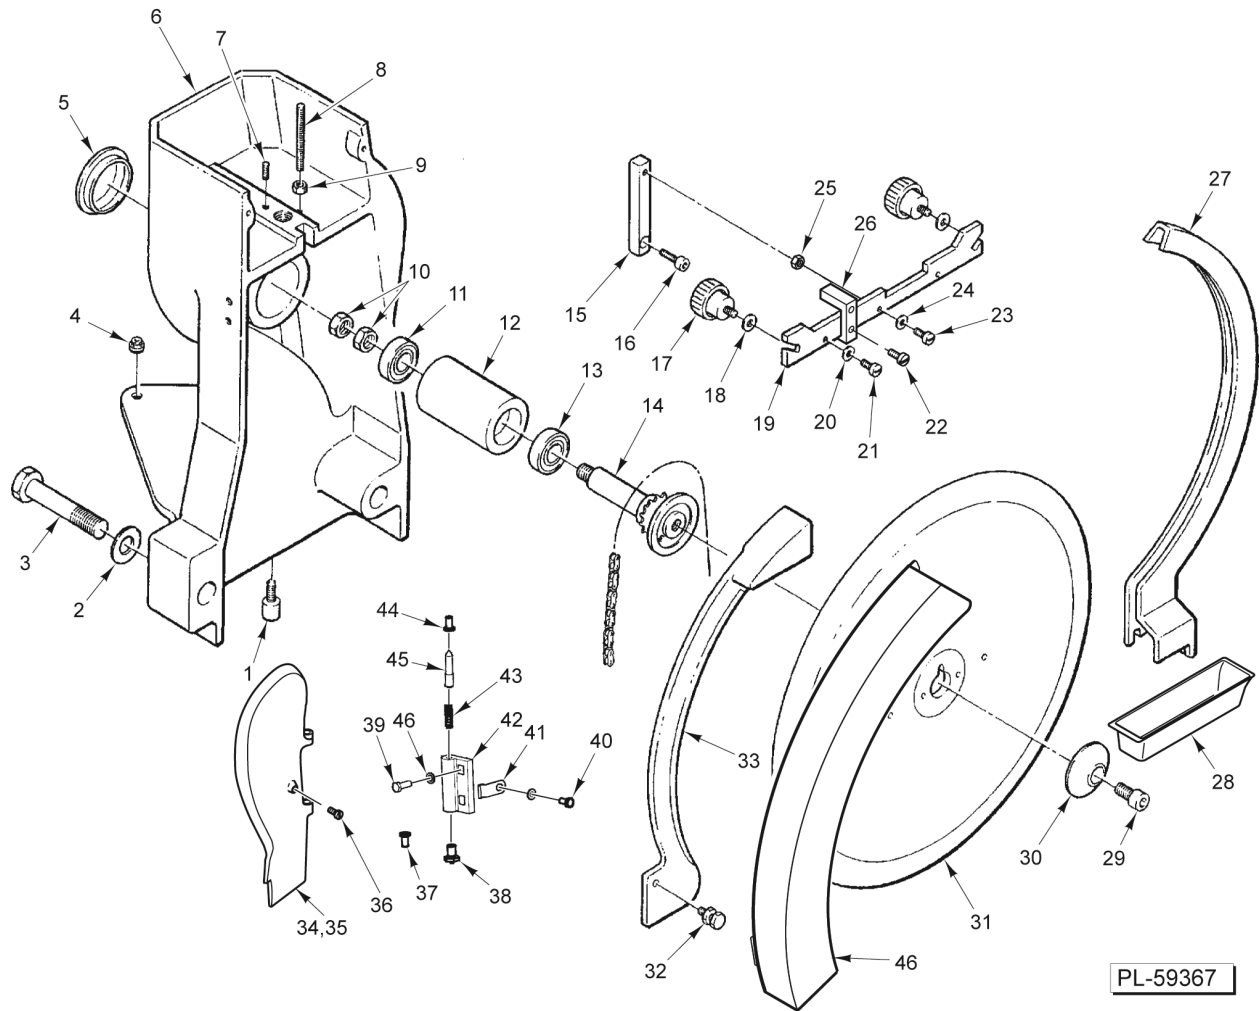

TRANSMISSION

TRANSMISSION


ILLUS. PL-59367	PART NO.	NAME OF PART	AMT.
1	01-40330M-00037	Foot.....	1
2	01-40330M-00036	Washer.....	2
3	01-40330M-00035	Screw.....	2
4	01-40330M-00038	Rubber Stop.....	1
5	01-40330M-00039	Cover.....	1
6	01-40330M-00040	Head.....	1
7	01-40330M-00041	Grub Screw.....	2
8	01-40330M-00042	Threaded Bar.....	1
9	01-40330M-00043	Nut.....	1
10	01-40330M-00043	Nut.....	2
11	01-40330M-00045	Bearing 72002B.....	1
12	01-40330M-00046	Hub.....	1
13	01-40330M-00045	Bearing 72002B.....	1
14	01-40330M-00047	Blade-Carrier Shaft.....	1
15	01-40330M-00048	Sharpener Slide.....	1
16	01-40330M-00049	Screw.....	1
17	01-40330M-00050	Knob.....	2
18	01-40330M-00051	Washer.....	2
19	01-40330M-00052	Sharpener Guard.....	1
20	01-40330M-00054	Washer.....	2
21	01-40330M-00053	Screw.....	2
22	01-40330M-00159	Screw M4 x 6 (SST).....	2
23	01-40330M-00053	Screw.....	1
24	01-40330M-00054	Washer.....	1
25	01-40330M-00055	Spacer - Nylon Nut.....	1
26	01-40330M-00507	Sharpener Release.....	1
27	01-40330M-00056	Back Blade Cover.....	1
28	01-40330M-00044	Tank.....	1
29	01-40330M-00057	Screw.....	1
30	01-40330M-00058	Flange.....	1
31	01-40330M-00059	Blade.....	1
32	01-40330M-00060	Screw - Thumb.....	1
33	01-40330M-00061	Front Blade Cover (Before SN EN1049916).....	1
34	01-40330M-00600	Front Blade Cover (Starting SN EN1049916).....	1
35	01-40330M-00519	Slice Deflector (NSF).....	1
36	01-40330M-00199	Screw M5 x 6 (SST).....	1
37	01-40330M-00509	Spacer.....	1
38	01-40330M-00510	Screw.....	2
39	01-40330M-00029	Screw M16 x 18 (SST).....	2
40	01-40330M-00081	Screw M5 x 10 (SST).....	1
41	01-40330M-00512	Slice Deflector - Stop.....	1
42	01-40330M-00513	Hinge.....	1
43	01-40330M-00514	Spring.....	1
44	01-40330M-00509	Spacer.....	1
45	01-40330M-00516	Slice Deflector - Shaft.....	1
46	01-40330M-00211	Washer.....	2
47	01-40330M-00592	Cover - Knife (Starting S/N EN 1044370).....	1

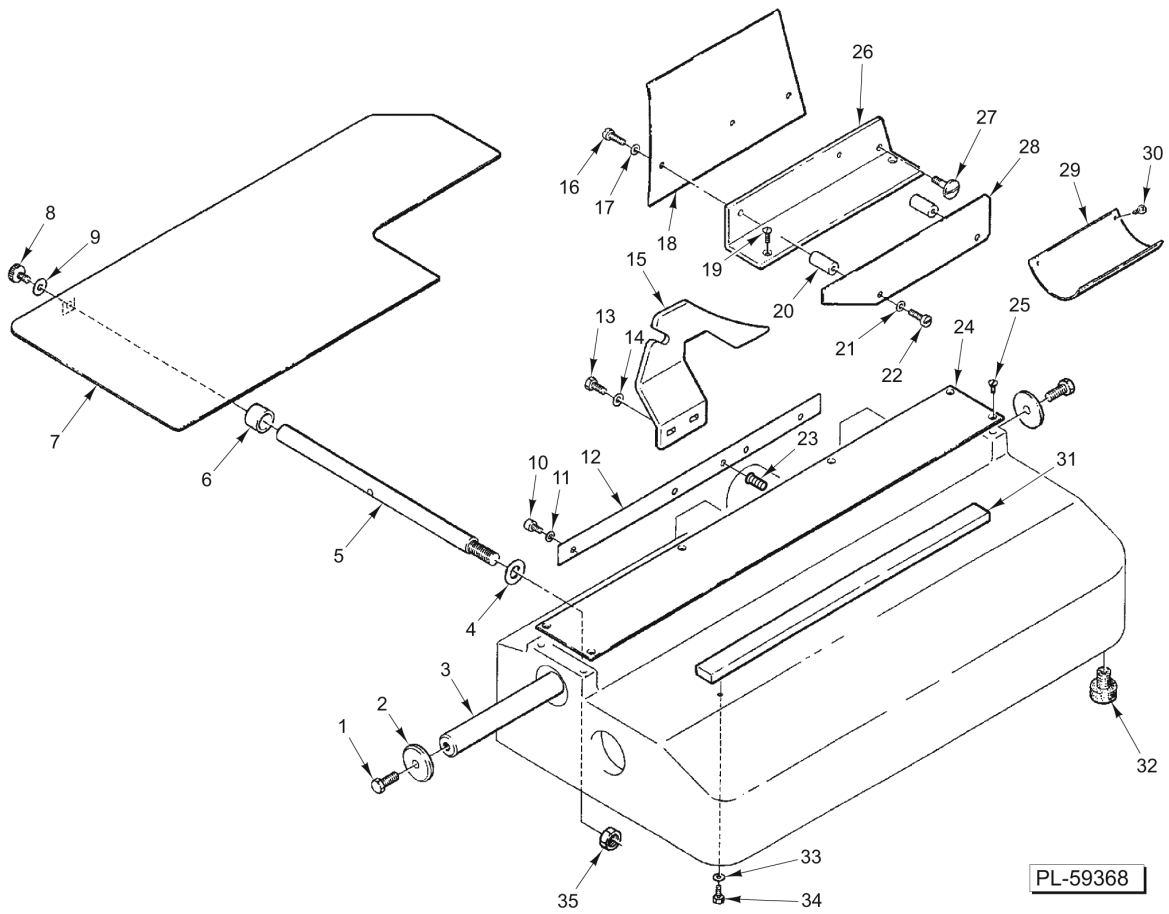

GUARDS

GUARDS


ILLUS. PL-59368	PART NO.	NAME OF PART	AMT.
1	01-40330M-00062	Screw.....	2
2	01-40330M-00063	Washer.....	2
3	01-40330M-00091	Bar.....	1
4	01-40330M-00064	Washer.....	1
5	01-40330M-00065	Pin.....	1
6	01-40330M-00066	Rubber Tube.....	1
7	01-40330M-00067	Tray.....	1
8	01-40330M-00069	Knob.....	1
9	01-40330M-00068	Washer.....	1
10	01-40330M-00073	Screw.....	3
11	01-40330M-00074	Washer.....	3
12	01-40330M-00075	Guard.....	1
13	01-40330M-00070	Screw.....	2
14	01-40330M-00071	Washer.....	2
15	01-40330M-00072	Shoe.....	1
16	01-40330M-00078	Screw.....	2
17	01-40330M-00074	Washer.....	1
18	01-40330M-00079	Chain Guard.....	1
19	01-40330M-00081	Screw M5 x 10 (SST).....	2
20	01-40330M-00082	Spacer.....	2
21	01-40330M-00074	Washer.....	2
22	01-40330M-00073	Screw.....	2
23	01-40330M-00503	Insert.....	2
24	01-40330M-00077	Rear Cover.....	1
25	01-40330M-00076	Screw.....	6
26	01-40330M-00080	Guard.....	1
27	01-40330M-00083	Screw.....	1
28	01-40330M-00084	Guard.....	1
29	01-40330M-00086	Gear Guard.....	1
30	01-40330M-00085	Screw.....	2
31	01-40330M-00092	Square Bar.....	1
32	01-40330M-00087	Rubber Foot.....	4
33	01-40330M-00090	Washer.....	2
34	01-40330M-00089	Screw.....	2
35	01-40330M-00002	Nut.....	1

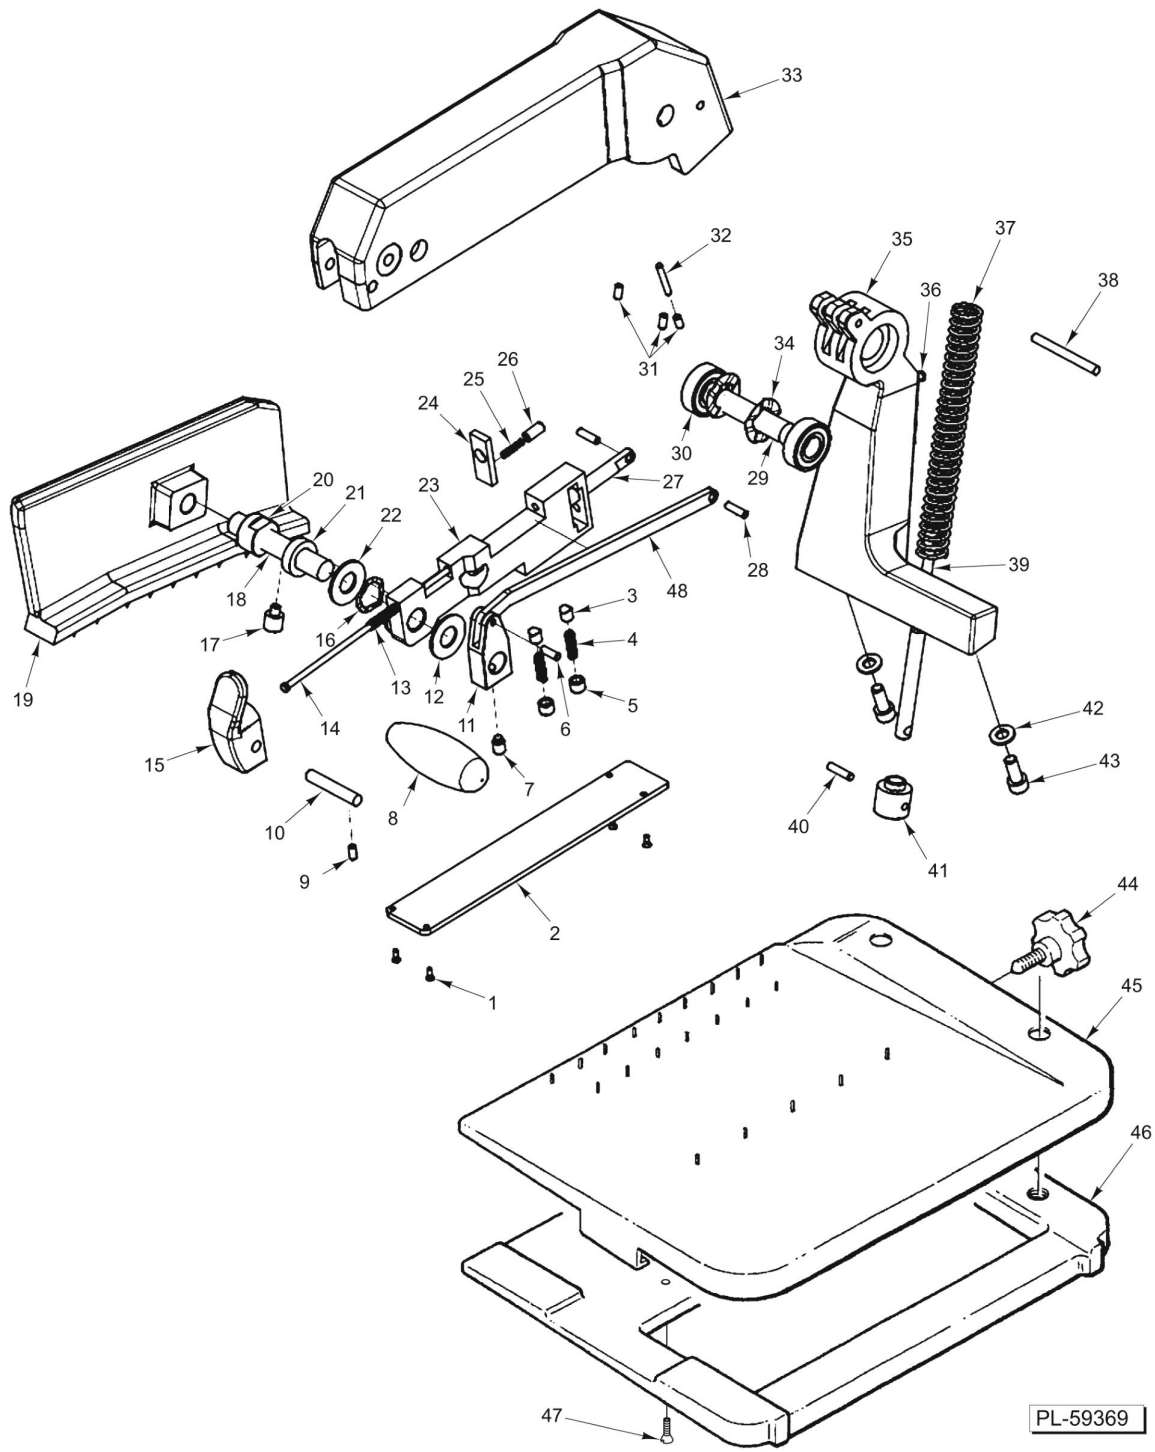

SLIDING PLATE

SLIDING PLATE

ILLUS. PL-59369	PART NO.	NAME OF PART	AMT.
1	01-40330M-00522	Screw.....	4
2	01-40330M-00523	Plate.....	1
3	01-40330M-00099	Tablet - Brass.....	2
4	01-40330M-00100	Spring.....	2
5	01-40330M-00101	NLA - Obsolete--Grub Screw.....	2
6	01-40330M-00527	Pin M5 x 15.....	1
7	01-40330M-00528	Screw.....	1
8	01-40330M-00529	Handle - Black.....	1
9	01-40330M-00218	Grub Screw.....	1
10	01-40330M-00531	Pin M8 x 50.....	1
11	01-40330M-00532	Brake Joint.....	1
12	01-40330M-00533	Washer.....	1
13	01-40330M-00096	Spring.....	1
14	01-40330M-00535	Rod.....	1
15	01-40330M-00536	Lever - Black.....	1
16	01-40330M-00537	Washer.....	1
17	01-40330M-00538	Pin - Nylon.....	1
18	01-40330M-00539	Pin.....	1
19	01-40330M-00540	Handgrip.....	1
20	01-40330M-00541	Bushing.....	1
21	01-40330M-00542	Spacer.....	2
22	01-40330M-00543	Washer.....	2
23	01-40330M-00544	Body - Brake.....	1
24	01-40330M-00545	Plate - Brake.....	1
25	01-40330M-00103	Spring.....	1
26	01-40330M-00104	NLA - Obsolete--Grub Screw.....	1
27	01-40330M-00548	Rod.....	1
28	01-40330M-00112	Pin 5 x 18.....	2
29	01-40330M-00550	Pin - Handgrip.....	1
30	01-40330M-00551	Bearing.....	2
31	01-40330M-00218	Grub Screw.....	3
32	01-40330M-00553	Pin.....	1
33	01-40330M-00554	Body - Handgrip.....	1
34	01-40330M-00555	Washer.....	2
35	01-40330M-00556	Support - Handgrip.....	1
36	01-40330M-00180	Tap - Plastic.....	1
37	01-40330M-00558	Spring.....	1
38	01-40330M-00559	Pin (SST).....	1
39	01-40330M-00560	Rod - Spring.....	1
40	01-40330M-00561	Pin.....	1
41	01-40330M-00562	Spacer.....	1
42	01-40330M-00186	Washer.....	2
43	01-40330M-00564	Screw M8 x 25 (SST).....	2
44	01-40330M-00124	Knob - Fixing Plate.....	1
45	01-40330M-00123	Cover - Plate (SST).....	1
46	01-40330M-00567	Plate - Aluminum.....	1
47	01-40330M-00081	Screw M5 x 10 (SST).....	1
48	01-40330M-00568	Rod - joint.....	AR

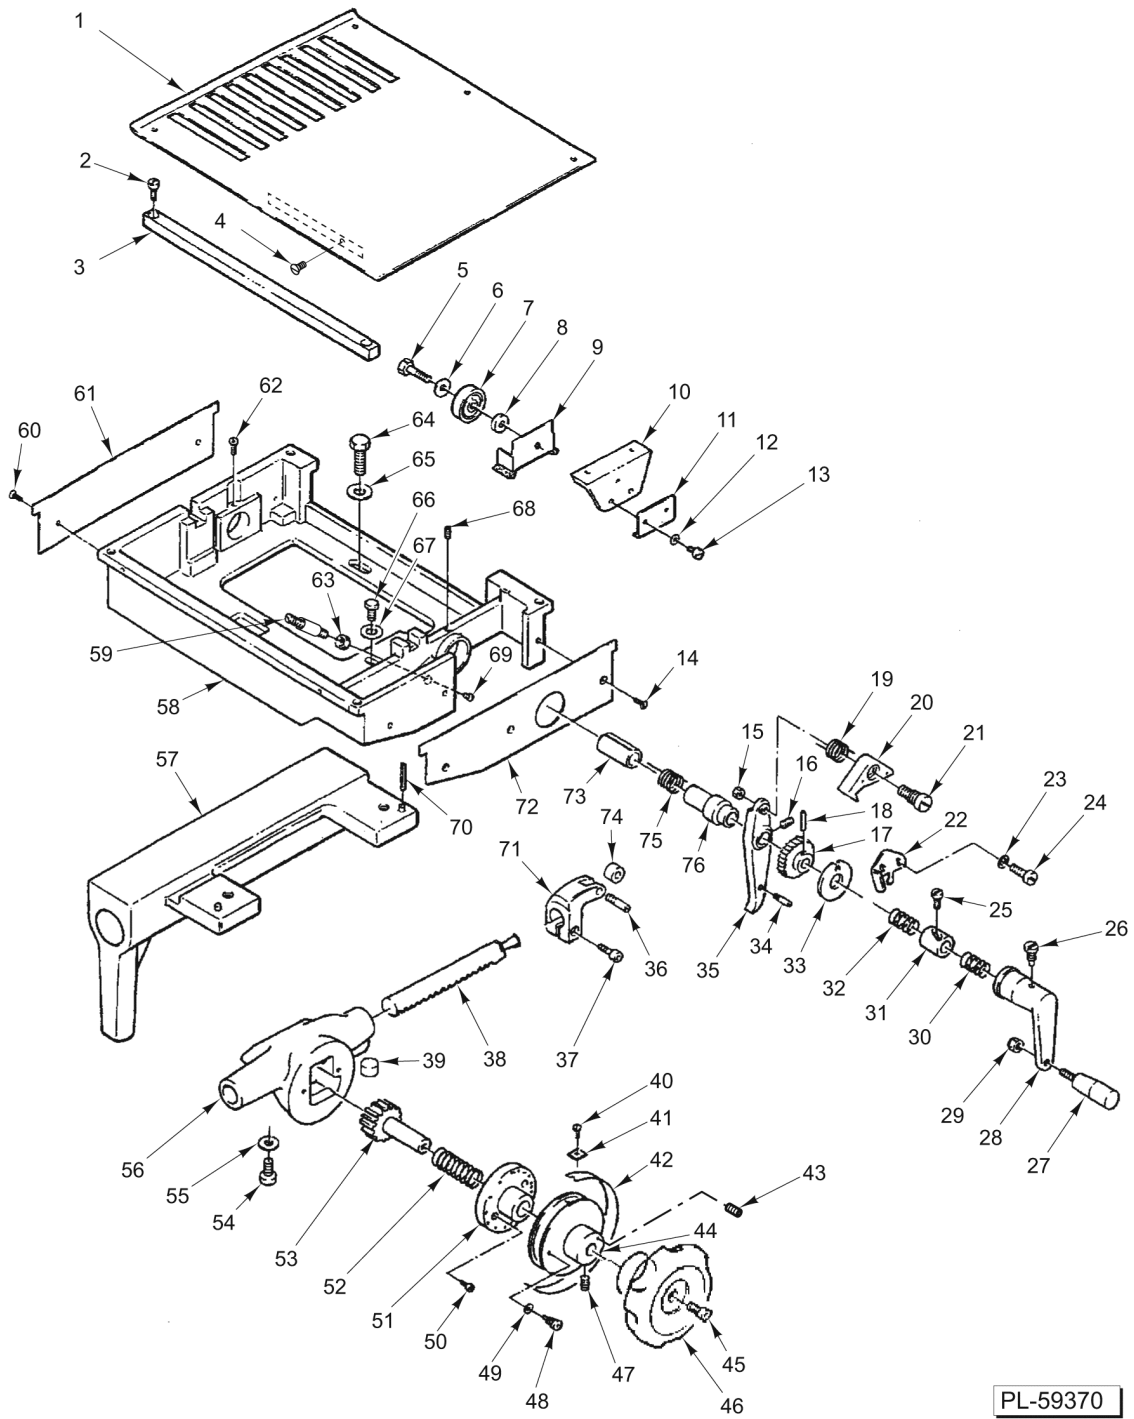

CARRIAGE


CARRIAGE

ILLUS. PL-59370	PART NO.	NAME OF PART	AMT.
1	01-40330M-00569	Plate Cover (SST).....	1
2	01-40330M-00138	Screw.....	2
3	01-40330M-00189	Carriage Bar.....	1
4	01-40330M-00190	Screw.....	5
5	01-40330M-00192	Screw.....	1
6	01-40330M-00193	Washer.....	1
7	01-40330M-00194	Bearing 626ZZ.....	1
8	01-40330M-00195	Washer.....	2
9	01-40330M-00196	Plate Cover (SST).....	1
10	01-40330M-00197	Bearing Support.....	1
11	01-40330M-00198	SS Plate Cover.....	1
12	01-40330M-00200	Washer.....	2
13	01-40330M-00199	Screw M5 x 6 (SST).....	2
14	01-40330M-00137	Screw M4 x 8 (SST).....	3
15	01-40330M-00173	Nut.....	1
16	01-40330M-00171	Grub Screw.....	2
17	01-40330M-00170	Pinion.....	1
18	01-40330M-00169	Springy Pin.....	1
19	01-40330M-00167	Spring.....	1
20	01-40330M-00166	Pawl.....	1
21	01-40330M-00165	Screw.....	1
22	01-40330M-00163	Plate.....	1
23	01-40330M-00162	Washer.....	1
24	01-40330M-00161	Screw.....	1
25	01-40330M-00159	Screw M4 x 6 (SST).....	1
26	01-40330M-00156	Screw.....	1
27	01-40330M-00153	Advancement Handle.....	1
28	01-40330M-00154	Advancement Knob.....	1
29	01-40330M-00155	Nut.....	1
30	01-40330M-00157	Spring.....	1
31	01-40330M-00158	Bushing.....	1
32	01-40330M-00160	Spring.....	1
33	01-40330M-00164	Washer.....	1
34	01-40330M-00168	Pin.....	1
35	01-40330M-00172	Lever.....	1
36	01-40330M-00149	Pin.....	1
37	01-40330M-00147	Screw.....	1
38	01-40330M-00146	Rack.....	1
39	01-40330M-00145	Grub Screw.....	1
40	01-40330M-00137	Screw M4 x 8 (SST).....	1
41	01-40330M-00136	Plate.....	1
42	01-40330M-00135	Graduated Badge.....	1
43	01-40330M-00584	Grub Screw.....	1
44	01-40330M-00134	Aluminum Flange Index Head.....	1
45	01-40330M-00570	Screw.....	1
46	01-40330M-00259	Knob.....	1
47	01-40330M-00131	Grub Screw.....	1
48	01-40330M-00132	Screw.....	1
49	01-40330M-00133	Washer.....	2
50	01-40330M-00138	Screw.....	2
69	01-40330M-00180	Tap - Plastic.....	AR
51	01-40330M-00139	Flange.....	1
52	01-40330M-00140	Spring.....	1
53	01-40330M-00141	Pinion.....	1
54	01-40330M-00142	Screw.....	2

CARRIAGE

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-59370			
55	01-40330M-00143	Washer.....	2
56	01-40330M-00144	NLA - Obsolete--Index Head.....	1
57	01-40330M-00151	Carriage.....	1
58	01-40330M-00178	Plate Carrier.....	1
59	01-40330M-00181	Threaded Pin (Incls. Spacer).....	1
60	01-40330M-00137	Screw M4 x 8 (SST).....	2
61	01-40330M-00179	Front Part (SST).....	1
62	01-40330M-00188	Screw.....	1
63	01-40330M-00182	Nut.....	1
64	01-40330M-00187	Screw.....	2
65	01-40330M-00186	Washer.....	2
66	01-40330M-00183	Screw.....	2
67	01-40330M-00184	Washer.....	2
68	01-40330M-00185	Screw.....	1
69	01-40330M-00180	Tap - Plastic.....	1
70	01-40330M-00152	Springy Pin.....	2
71	01-40330M-00148	Feeder.....	1
72	01-40330M-00177	Front Part (SST).....	1
73	01-40330M-00176	Bushing.....	1
74	01-40330M-00150	Retainer.....	1
75	01-40330M-00175	Spring.....	1
76	01-40330M-00174	Bushing.....	1

NOTES

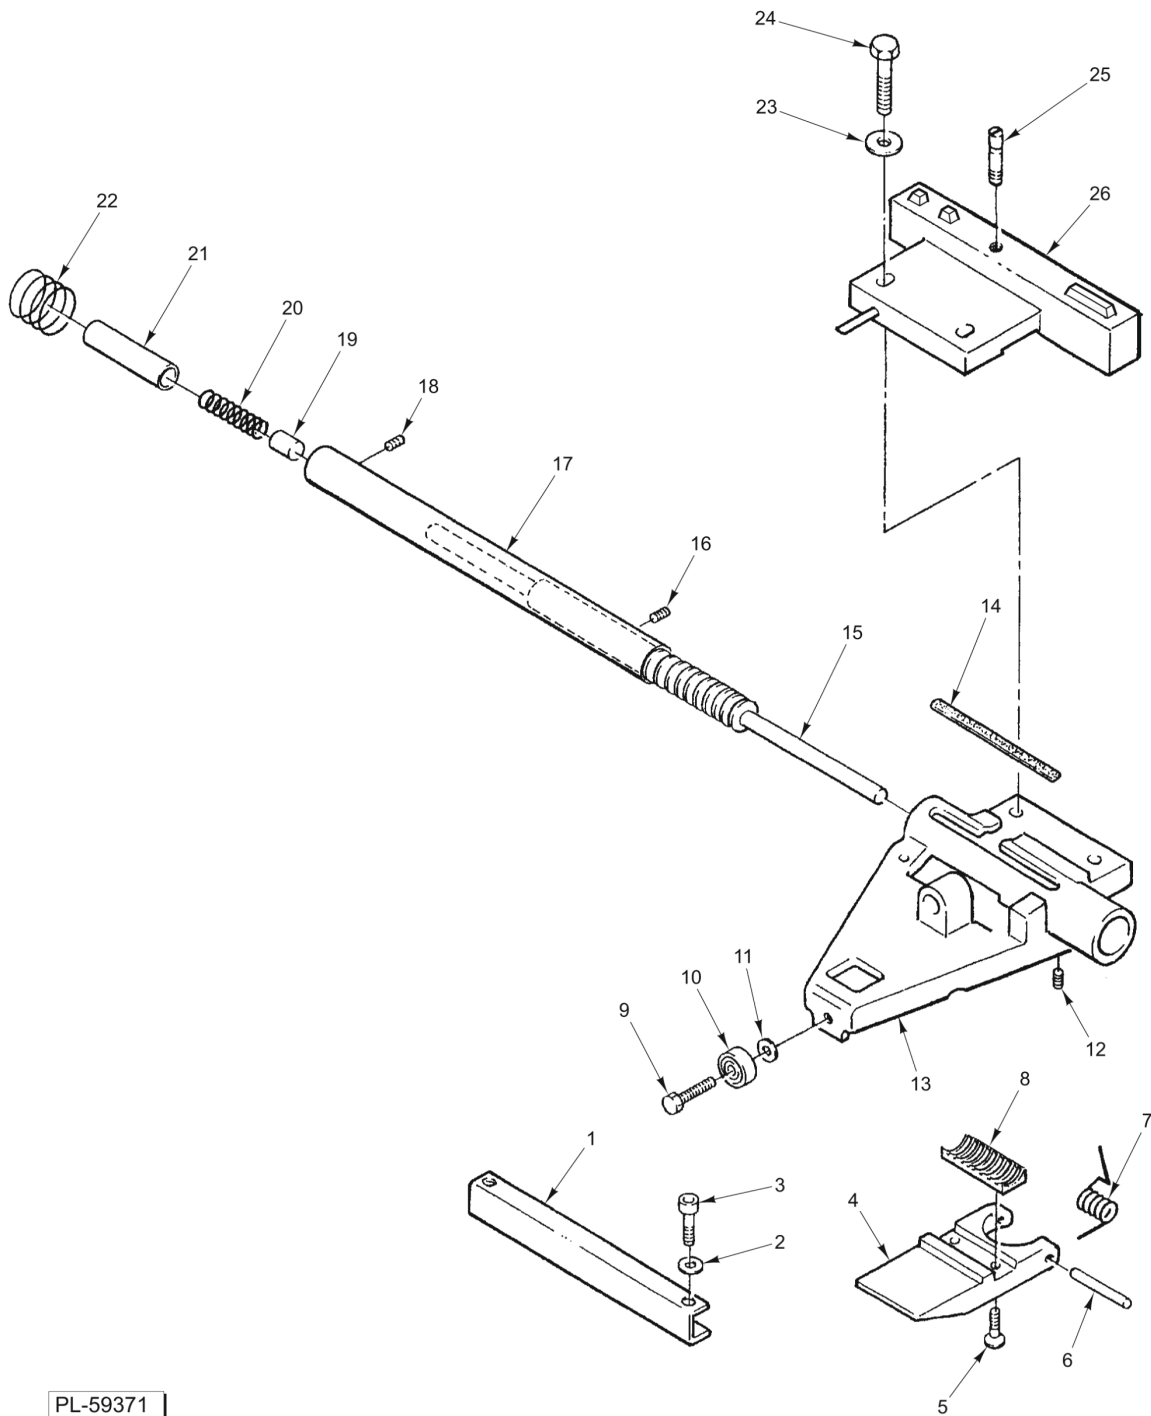


PL-59371

THICKNESS REGULATOR

THICKNESS REGULATOR

ILLUS. PL-59371	PART NO.	NAME OF PART	AMT.
1	01-40330M-00201	Sliding Guide.....	1
2	01-40330M-00202	Washer.....	2
3	01-40330M-00203	Screw.....	2
4	01-40330M-00204	Rack Support.....	1
5	01-40330M-00205	Screw.....	2
6	01-40330M-00206	Pin.....	1
7	01-40330M-00207	Spring.....	1
8	01-40330M-00208	Rack Support.....	1
9	01-40330M-00209	Screw.....	1
10	01-40330M-00210	Bearing 626 2RS.....	1
11	01-40330M-00211	Washer.....	1
12	01-40330M-00212	Grub Screw.....	1
13	01-40330M-00213	Feeding Carriage.....	1
14	01-40330M-00214	Felt.....	1
15	01-40330M-00215	Endless Screw.....	1
16	01-40330M-00216	Grub Screw.....	1
17	01-40330M-00217	Screw Guard Tube.....	1
18	01-40330M-00218	Grub Screw.....	1
19	01-40330M-00219	Spacer.....	1
20	01-40330M-00220	Spring.....	1
21	01-40330M-00221	Bushing.....	1
22	01-40330M-00220	Spring.....	1
23	01-40330M-00223	Washer.....	2
24	01-40330M-00224	Screw.....	2
25	01-40330M-00225	Block Table Pin.....	1
26	01-40330M-00226	Carriage Carrier Support.....	1

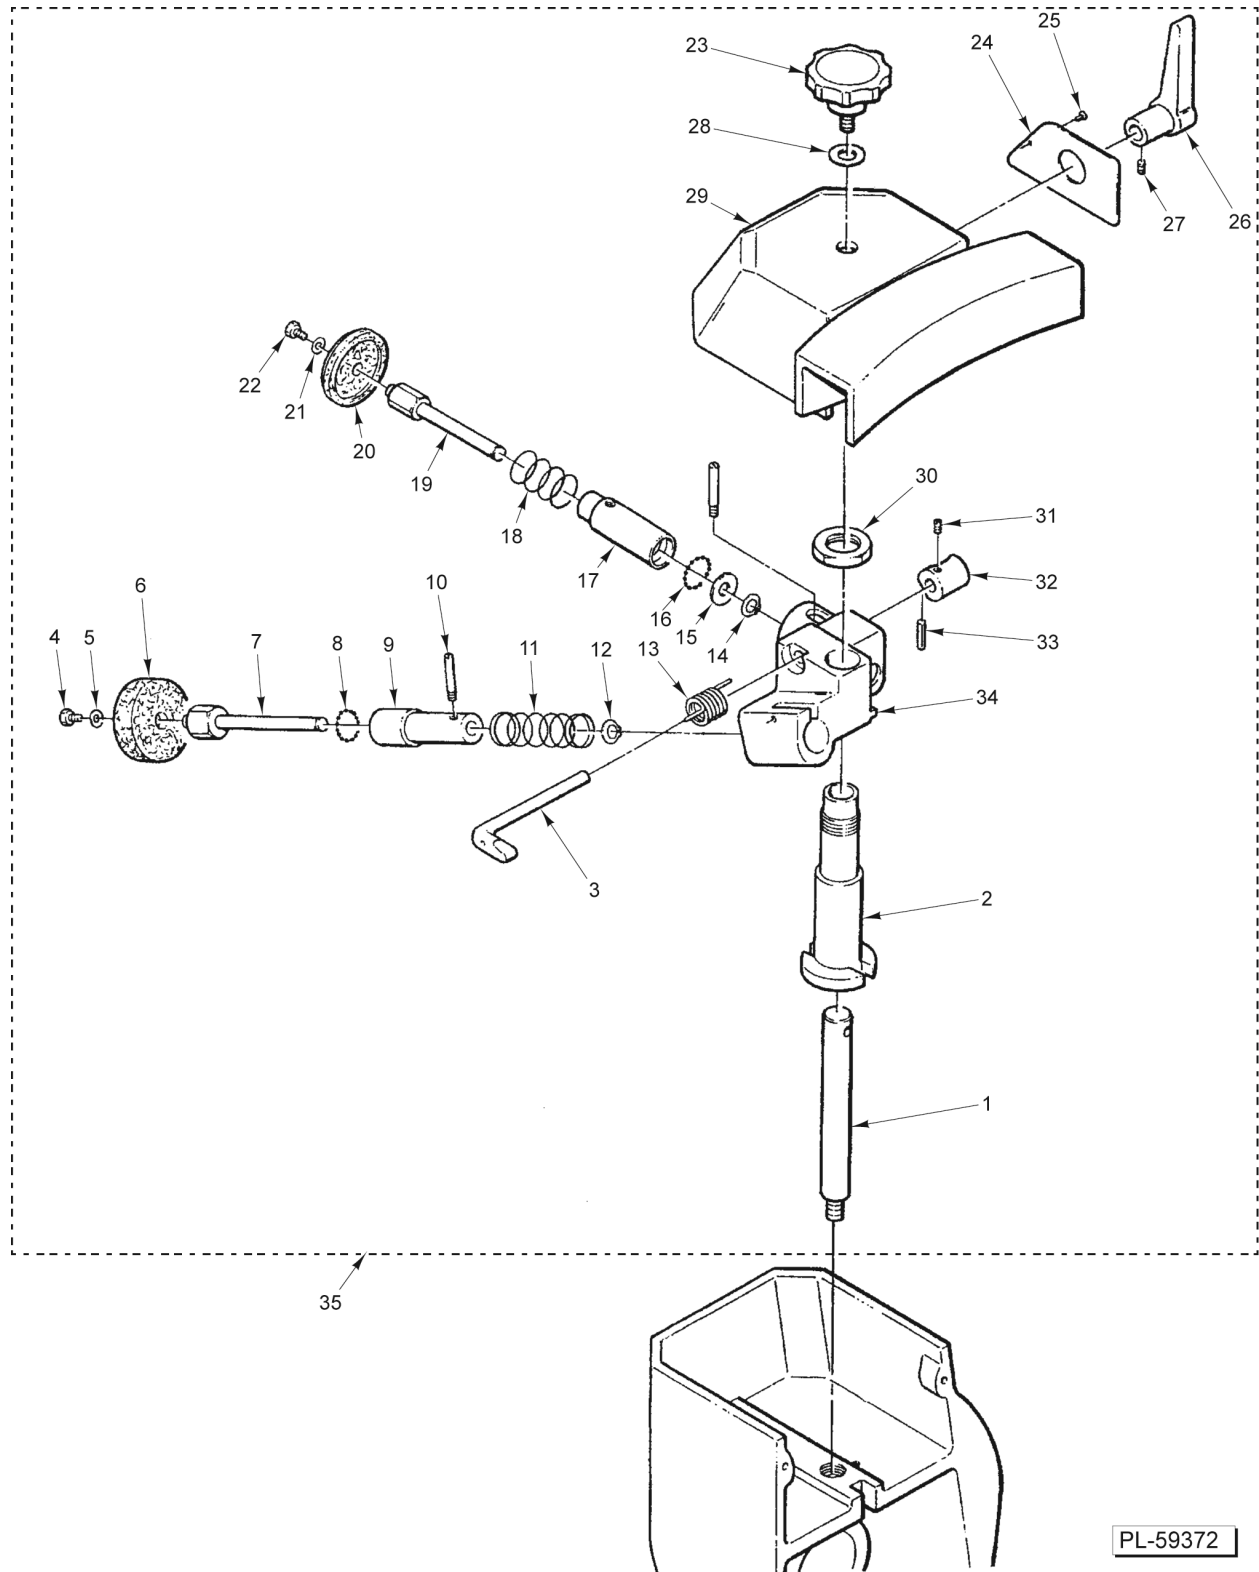


SHARPENER

PL-59372

SHARPENER

ILLUS. PL-59372	PART NO.	NAME OF PART	AMT.
1	01-40330M-00227	Sharpener Support Pin.....	1
2	01-40330M-00228	Sharpener Support.....	1
3	01-40330M-00229	Cam Lever.....	1
4	01-40330M-00230	Screw.....	1
5	01-40330M-00231	Washer.....	1
6	01-40330M-00232	Stone.....	1
7	01-40330M-00233	Threaded Shaft.....	1
8	01-40330M-00234	Balls.....	15
9	01-40330M-00235	Bushing.....	1
10	01-40330M-00236	Pin.....	2
11	01-40330M-00237	Spring.....	1
12	01-40330M-00238	Circlip.....	1
13	01-40330M-00239	Spring.....	1
14	01-40330M-00238	Circlip.....	1
15	01-40330M-00240	Washer.....	1
16	01-40330M-00234	Balls.....	15
17	01-40330M-00241	Bushing.....	1
18	01-40330M-00242	Spring.....	1
19	01-40330M-00243	Threaded Shaft.....	1
20	01-40330M-00244	Stone.....	1
21	01-40330M-00245	Washer.....	1
22	01-40330M-00246	Screw.....	1
23	01-40330M-00249	Knob.....	1
24	01-40330M-00250	Plate.....	1
25	01-40330M-00251	Rivet.....	2
26	01-40330M-00252	Sharpener Hand.....	1
27	01-40330M-00253	Grub Screw.....	1
28	01-40330M-00248	Washer.....	1
29	01-40330M-00247	Cover.....	1
30	01-40330M-00256	Nut.....	1
31	01-40330M-00253	Grub Screw.....	1
32	01-40330M-00254	Cam Lever.....	1
33	01-40330M-00255	Springy Pin.....	1
34	01-40330M-00257	Sharpener Body.....	1
35	01-40330M-00589	Sharpener Assy. (Includes Items 1 through 34).....	1

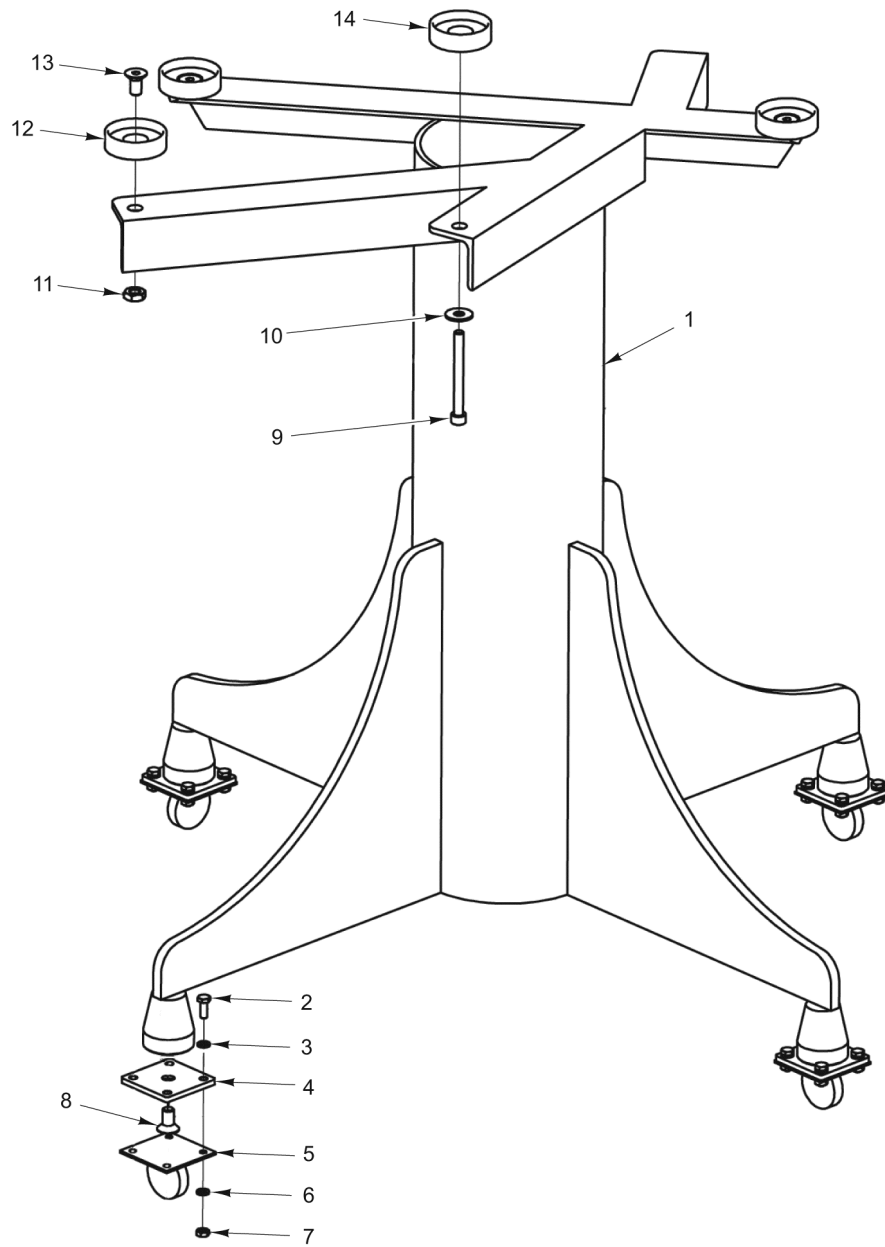

PL-59405

SLICER BASE

SLICER BASE

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-59405			
1	01-40330M-00574	Base.....	1
2	01-40330M-00575	Screw M6 x 16 (SST).....	16
3	01-40330M-00211	Washer.....	16
4	01-40330M-00576	Plate - Wheel.....	4
5	01-40330M-00577	Wheel.....	4
6	01-40330M-00211	Washer.....	16
7	01-40330M-00578	Nut M6 (SST).....	16
8	01-40330M-00579	Screw M10 x 20.....	4
9	01-40330M-00580	Screw M8 x 70.....	1
10	01-40330M-00581	Washer (SST).....	1
11	01-40330M-00582	Nut M10.....	3
12	01-40330M-00583	Cup - Foot.....	3
13	01-40330M-00579	Screw M10 x 20.....	3
14	01-40330M-00583	Cup - Foot.....	1
	01-40330M-00258	Caster.....	4

