

TRAULSEN TECHNICAL BULLETIN

PRODUCT SERVICE DEPARTMENT

FORT WORTH, TX 76106

HINGE ADJUSTMENT INSTRUCTIONS


Introduction:

This technical bulletin is intended to aid the field in hinge adjustment. This technical bulletin may not cover all situations that may arise in the field and final diagnosis of field based equipment is the sole responsibility of the technician contracted to perform any work required.

Reason for adjustment

Instructions

| | |
|---|--|
| <ul style="list-style-type: none"> Gasket not seated up against the cabinet face on the handle side of the door. | <ul style="list-style-type: none"> Remove the stainless steel hinge cover from the hinges on the door by using a thin screwdriver to pry the covers away. As seen in Figure 1. Loosen the 3 screws on each hinge. Adjust plate to desired fit and tighten the screws and replace hinge covers. |
| <ul style="list-style-type: none"> Gasket is not seated up against the hinge side of the door. | |

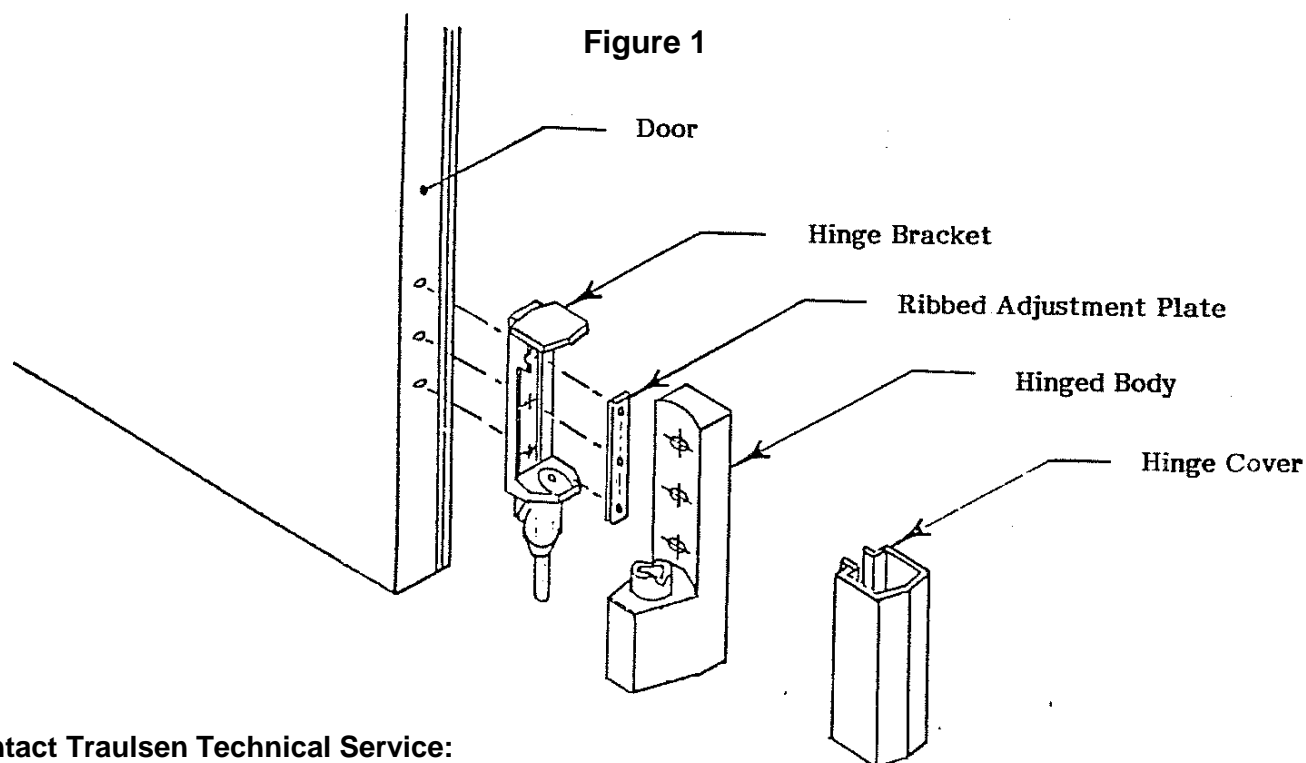

Contact Traulsen Technical Service:

If further assistance is needed feel free to contact Traulsen Technical Service at 800-825-8220 between the hours of 7:30am – 11:30am CST & 12:30pm – 4:30pm CST.