



# TRAULSEN TECHNICAL BULLETIN

PRODUCT SERVICE DEPARTMENT

FORT WORTH, TX 76106

## PREVENTATIVE MAINTENANCE

### Introduction:

This technical bulletin is to inform field of recommended preventative maintenance procedures. Depending on application PM schedule may vary.

### INSPECT AND CLEAN


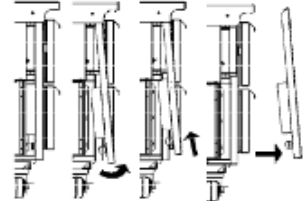
<b>Why</b>	Sanitation and prolong cabinet life	
<b>Frequency</b>	Daily	
<b>Time required</b>	5 minutes to prepare	10 minutes to complete
<b>Preparation</b>	Baking soda and water (mixed to a 1 TBSP baking soda to 1 pint water ratio) Soft Cloth	
<b>Cleaning</b>	Apply with a dampened cloth and wipe in the direction of the metal grain. (Avoid the use of strong detergents and gritty, abrasive cleaners as they may tend to mar and scratch the surface. Do NOT use cleansers containing chlorine, this may promote corrosion of the stainless steel.)	
<b>Inspection</b>	Visually inspect the unit for signs of wear that may require repair.	

### INSPECT DOOR GASKET

<b>Why</b>	Long reliable service life	
<b>Frequency</b>	Every 3 Months	
<b>Time required</b>	10 minutes to complete	
<b>Inspection</b>	Open cabinet door (s) to inspect gasket. Pull gasket with hand and visually inspect gasket (s) for tear, dirt, mold or worn gasket. Replace as needed. Model and serial number is required when placing a parts order Traulsen 800-825-8220	

## CLEAN CONDENSER COIL

**⚠ WARNING** Disconnect electrical power supply before cleaning any parts of the unit.

<b>Why</b>	Long reliable service life	
<b>Frequency</b>	Every 3 Months	
<b>Time required</b>	5 minutes to prepare	15 minutes to complete
<b>Preparation</b>	<p>For All Upright Cabinets, remove the two bottom screws securing the louver panel, then pivot this upwards allowing full access to the front facing condenser. For all TE Series, TU Series &amp; TS Series, place hands under the louver panel and pull out and up to get louver panel off bracket of the unit.</p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p><b>R &amp; A Series/G Series Louver</b></p>  <p>Screw Location</p> </div> <div style="text-align: center;"> <p><b>TE/TU/TS Series Louver</b></p>  </div> </div>	
<b>Cleaning</b>	<p>Vacuum or brush any dirt, lint or dust from the finned condenser coil, around the compressor and other cooling system parts as indicated. If significant dirt is clogging the condenser fins, use compressed air to blow this clear. When finished reverse the louver removal process as instructed above.</p>	

**Contact Traulsen Technical Service:**

If further assistance is needed feel free to contact Traulsen Technical Service at 800-825-8220 between the hours of 7:30am – 11:30am CST & 12:30pm – 4:30pm CST.