

INSTRUCTIONS

UW50 UTENSIL WASHER

MODEL

UW50

ML-27838



*(Electric
machines only)*



701 S. RIDGE AVENUE
TROY, OHIO 45374-0001

937 332-3000

www.hobartcorp.com

FORM 18241 Rev. K (Jan 2016)

TABLE OF CONTENTS

GENERAL	3
INSTALLATION	3
Unpacking	3
Installation Codes	3
Location	3
Installation Diagrams	4
Plumbing Connections	7
Gas Connection (When Specified).....	7
Steam Connection (When Specified).....	7
Venting Required With Gas Heat (Optional With Steam or Electric Heat)	8
Rate Of Exhaust Flow Calculations	9
Detergent Feeder (Optional By Others)	10
Rinse Agent Feeder (Optional By Others)	10
Vent Exit.....	10
Vent Fan Control (Optional); Power Vent (Optional)	10
Electrical Connection	10
OPERATION.....	11
Controls (Fig. 3)	11
General Operating Instructions	12
Cleaning the Utensil Washer.....	12
Dos and Don'ts For Your New Hobart Utensil Washer.....	13
MAINTENANCE	14
Motor.....	14
Wash and Rinse Arms.....	14
Deliming.....	14
TROUBLESHOOTING	15
Service	16

**Model UW50 Utensil
Washer With Booster**



INSTALLATION, OPERATION AND CARE OF MODEL UW50 UTENSIL WASHER

SAVE THESE INSTRUCTIONS

GENERAL

The UW50 Utensil Washer is the answer to volume utensil washing problems in your kitchen, bakery or supermarket operation. The UW50 occupies a minimum amount of floor space (under 48" x 43" with door open) and does not require separate dishtables. The upper portion of the door raises, while the lower portion swings out to provide a drain platform. The rack can then be pulled out for easy loading and unloading.

The program selector lets you select a 2-, 4- or 6-minute cycle; each wash cycle is followed by a dwell and a 15-second rinse. The two upper and two lower wash arms provide thorough cleaning. Four rinse arms provide a sanitizing rinse at the end of each cycle. The 5-horsepower pump produces 343 gallons per minute.

The UW50 may be ordered with steam coil, electric or gas tank heat. A top-mounted electric booster is also available. When equipped with a top-mounted electric booster, a spray hose and nozzle is provided on the left side of the machine. On models without top-mounted electric booster, the spray hose and nozzle can be installed in the field as an accessory. All machines are equipped with a pressure reducing valve to be adjusted during installation.

Features include: sloping strainer system, self-closing drain with overflow, timed fill, wash and rinse thermometers and rack with inserts for trays. The flat rack can accommodate a 140-quart Hobart mixer bowl.

INSTALLATION

UNPACKING

Immediately after unpacking the UW50, check for possible shipping damage. If the UW50 is found to be damaged, save the packaging material and contact the carrier within 5 days of delivery.

If the Utensil Washer is lifted with a lift truck, place the forks so the drain assembly under the tank is not damaged.

Prior to installation, test the electrical service to ensure that it agrees with the specifications on the data plate located below the controls (lower right front).

INSTALLATION CODES

Installation must be in accordance with state and local codes, with the national Fuel Code, ANSI Z223.1 (latest edition), if applicable, and the National Electrical Code ANSI/NFPA 70 (latest edition). In Canada, the installation codes are: CAN/CGA B149.1, CAN/CGA B149.2 and CSA 22.1 (latest edition).

LOCATION

Set the machine in place after the final floor covering is installed. Make sure the machine is level before making any plumbing connections. Machines equipped with gas heat require a minimum 3" clearance from the rear of the flue to any combustible construction. Allow at least 3" at the rear and 18" at the sides of the machine as a suggested minimum for service access. Allow 13" in front of the machine for the door to lower and sufficient additional space for the operator to work.

Electrical and grounding connections must comply with the applicable portions of the National Electrical Code and/or other local electrical codes.

Plumbing connections must comply with applicable sanitary, safety and plumbing codes. Drain and fill line configurations

Water hammer arrestor (meeting ASSE-1010 STANDARD or equivalent) to be supplied (by others) in common water supply line at service connection.

Recommended water hardness to be 3 grains or less for best results.

Recommended building flowing water pressure to the dishwasher is a minimum of 25 PSI.

Pressure regulator furnished.
For convenience when cleaning, water tap should be installed near machine with heavy duty hose and squeeze valve.



All dimensions taken from floor line may be increased by up to 1-1/8" with leg adjustment.

Not a single machine: 540 lbs. 10/1000

Net weight of machine: 640 lbs. w/o booster
Compressed air line: 700 lbs. w/o booster

Domestic shipping weight: 782 lbs. w/o booster

Net weight of machine: 691 lbs. w/booster

Domestic shipping weight: 833 lbs. w/booster

Shipping dimensions:

Shipping dimensions:
60" X 38" X 85" high

00 X 30 X 03 mm.


Size of racks: _____

40-7/8" X 22-7/8" X 4-1/8"

SINGLE POINT ELECTRIC CONNECTION UN-50 WITH 10kW ELECTRIC HEAT (CONTROLS AND 5HP PUMP MOTOR)			
ELEC. SPECS.	RATED AMPS	MINIMUM SUPPLY CIRCUIT CONDUCTOR CAPACITY	MAXIMUM OVERCURRENT PROTECTIVE DEVICE
208/60/3	50.3	70	70
240/60/3	45.2	60	60
480/60/3	23.5	30	30

SINGLE POINT ELECTRIC CONNECTION UW-50 WITH 10KW ELECTRIC HEAT AND 15KW ELECTRIC BOOSTER (CONTROLS AND 5HP PUMP MOTOR)				
ELEC. SPECS.	RATED CIRCUIT AMPS	MINIMUM SUPPLY CIRCUIT CONDUCTOR CAPACITY	MAXIMUM OVERCURRENT PROTECTIVE DEVICE	
208/60/3	93.9	100	100	
240/60/3	86.3	100	100	
480/60/3	43.8	50		50

① FOR SUPPLY CONNECTION USE WIRES SUITABLE FOR AT LEAST 90°C OR EQUIVALENT.

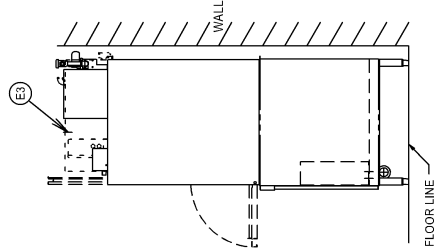

UW50 with 10KW Electric Tank Heat with or without 15KW Electric Booster – Installation Diagram: D-812969 sheet 1




WARNING

Electrical and grounding connections must comply with the applicable portions of the National Electrical Code and/or other local electrical codes.

Plumbing connections must comply with applicable sanitary, safety and plumbing codes. Drain and fill line configurations vary, some methods are shown on this drawing.

PLUMBING NOTES:


Water hammer arrestor (meeting ASSE-1010 STANDARD or equivalent) to be supplied (by others) in common water supply line at service connection. Recommended water hardness to be 3 grains or less for best results. Recommended building flowing water pressure to the dishwasher is a minimum of 25 PSI. Pressure regulator furnished. For convenience when cleaning, water tap should be installed near machine with heavy duty hose and squeeze valve.

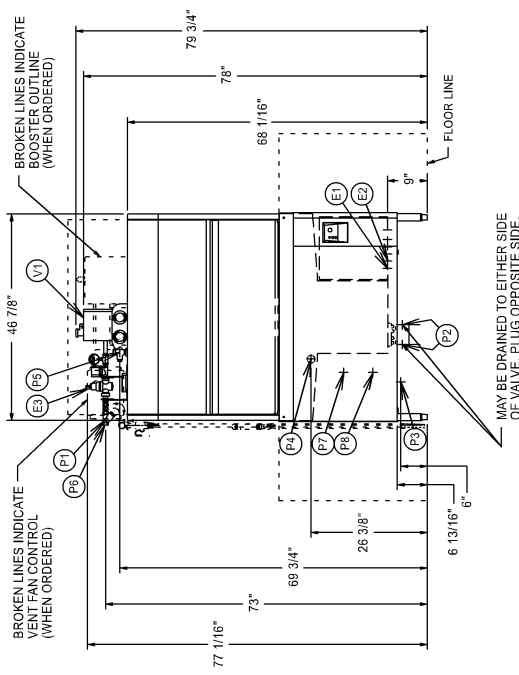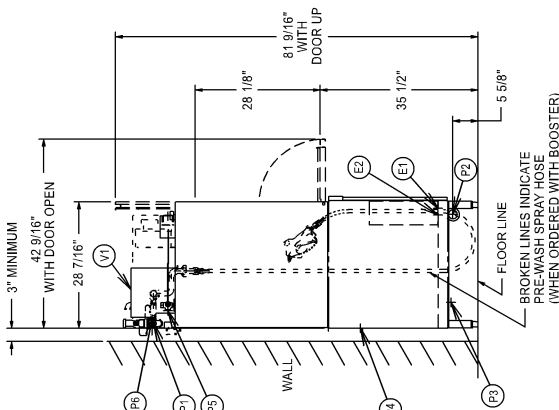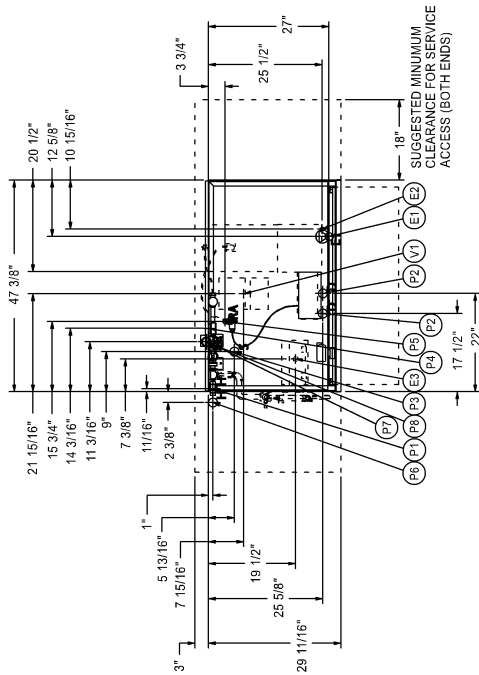

CONNECTION INFORMATION

(* AFF - ABOVE FINISHED FLOOR)

- LEGEND**
- E1 ELECTRICAL CONNECTION (MOTORS & CONTROLS); 1-1/4" CONDUIT HOLE, 9" AFF.
 - E2 ELECTRIC CONNECTION-DETERGENT/RINSE AGENT FEEDERS; 1/2" CONDUIT HOLE; 9" AFF.
 - E3 ELECTRIC CONNECTION-VENT FAN CONTROL (WHEN ORDERED); 3/4" CONDUIT HOLE; 77-1/16" AFF.
 - P1 COMMON WATER CONNECTION; 180°F WATER MIN. 1/2" FPT, 73" AFF.
 - P2 DRAIN; 2" FPT, 5-5/8" AFF TWO CONNECTIONS. ADAPTER (SUPPLIED BY OTHERS).
 - P3 STEAM INJECTOR; 10 TO 25 PSI FLOWING. 50 PSI MAX.; 3/4" FPT; 6" AFF.
 - P4 DETERGENT PROBE SENSOR; REMOVE CAP AND STUD ASSEMBLY TO ACCESS TAPPED HOLE; 26-3/8" AFF.
 - P5 RINSE AGENT FEEDER; 1/8" NPT. REMOVE 1/8" NPT PIPE PLUG TO ACCESS TAPPED HOLE; 69-3/4" AFF.
 - P6 COMMON WATER CONNECTION WITH ELECTRIC BOOSTER (WHEN ORDERED); 110°F MIN.; 1/2" FPT; 73" AFF. ADAPTER (SUPPLIED BY OTHERS).
 - P7 STEAM COIL; 10 TO 25 PSI FLOWING. 50 PSI MAX.; 3/4" FPT; 10" AFF.
 - P8 CONDENSATE RETURN; 10 TO 50 PSI FLOWING. 3/4" FPT; 12-3/8" AFF. (BUCKET TYPE TRAP FURNISHED).
 - V1 VENT EXIT; 7" X 11" X 10" HIGH TO ALLOW FOR EXPANSION OF AIR. (NEED NOT BE CONNECTED TO EXTERNAL VENT); IF REQUIRED, VENT HOOD TO PROVIDE 400 CFM EXHAUST.

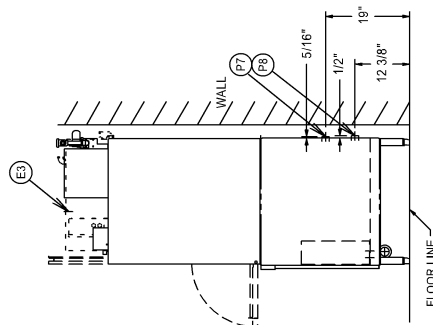

MISCELLANEOUS NOTES:

All dimensions taken from floor line may be increased by up to 1-1/8" with leg adjustment.
Net weight of machine: 640 lbs. w/o booster
Domestic shipping weight: 782 lbs. w/o booster
Net weight of machine: 691 lbs. w/booster
Domestic shipping weight: 833 lbs. w/booster
Shipping dimensions: 60" X 38" X 85" high.
Size of racks: 40-7/8" X 22-7/8" X 4-1/8"
Drain lever located inside of tank.

SINGLE POINT ELECTRIC CONNECTION UW-50 WITH 10KW STEAM HEAT (CONTROLS AND SHP PUMP MOTOR)				
ELEC. SPECS.	RATED AMPS	MINIMUM SUPPLY CIRCUIT CAPACITY	MAXIMUM OVERCURRENT PROTECTIVE DEVICE	
208/60/3	20.3	25	25	15
240/60/3	17.6	25	25	25
480/60/3	9.2	15	15	35

SINGLE POINT ELECTRIC CONNECTION UW-50 WITH STEAM HEAT AND 15KW ELECTRIC BOOSTER (CONTROLS AND SHP PUMP MOTOR)				
ELEC. SPECS.	RATED AMPS	MINIMUM SUPPLY CIRCUIT CAPACITY	MAXIMUM OVERCURRENT PROTECTIVE DEVICE	
208/60/3	64.7	80	80	35
240/60/3	59.4	70	70	70
480/60/3	29.9	35	35	35

MODEL: UW-50
STEAM
00-512969
REV E

UW50 with Steam Coil Tank Heat with or without 15KW Electric Booster – Installation Diagram: D-812969 sheet 2

WARNING

Electrical and grounding connections must comply with the applicable portions of the National Electrical Code and/or other local electrical codes.

Plumbing connections must comply with applicable sanitary, safety and plumbing codes. Drain and fill line configurations vary, some methods are shown on this drawing.

GAS HEATED DISHWASHERS



For natural gas, pressure to the burner (customer connection) should not exceed 7" W.C.

For liquefied petroleum gas, pressure to the burner (customer connection) should not exceed 11" W.C.

If gas pressure is higher than 7" or 11" W.C., a pressure regulating valve must be installed (by others) in the gas line to the dishwasher.

Gas heat BTU input - 47,000 Natural

When gas tank heat is specified, gas exhaust venting must be installed according to local code. Do not connect flue to power vent.

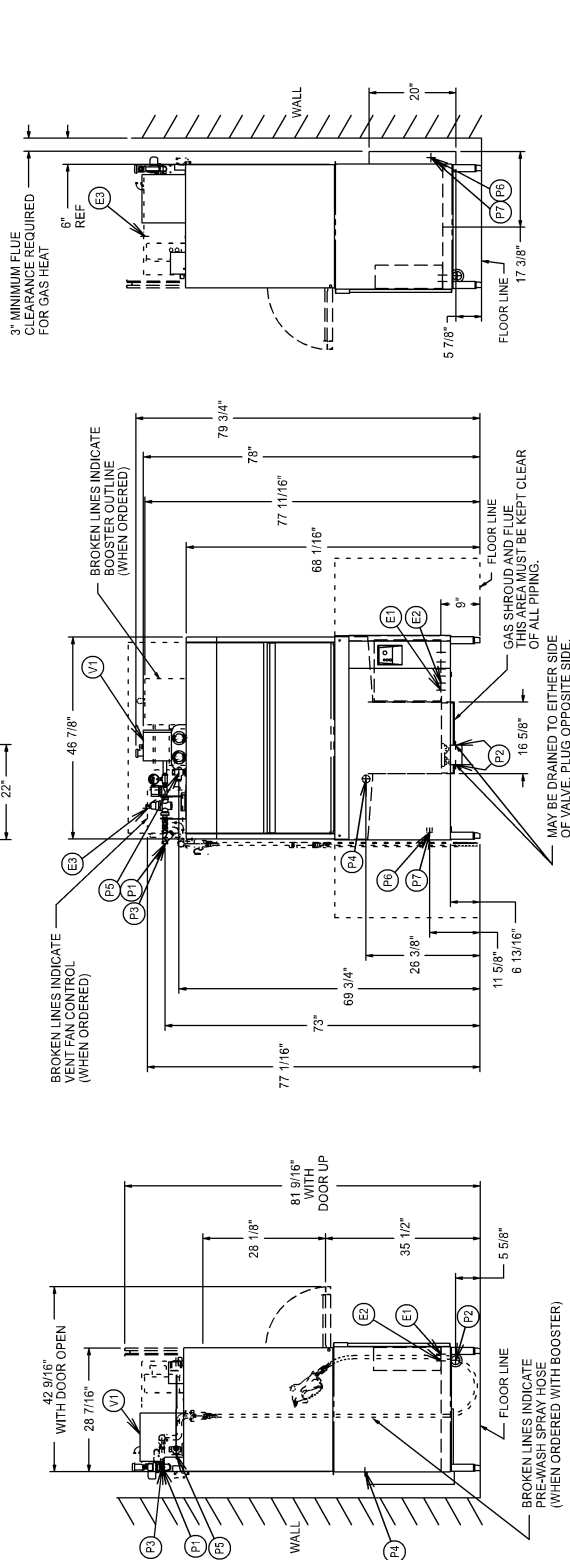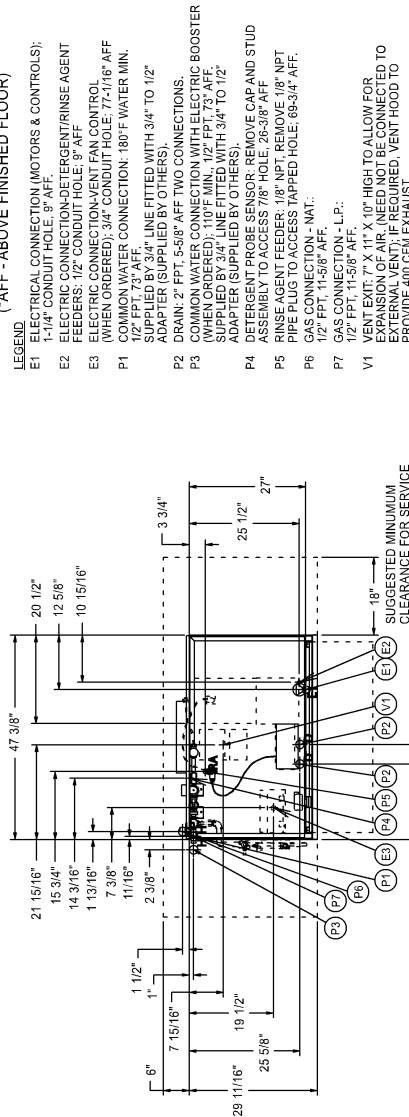

PLUMBING NOTES:

Water hammer arrestor (meeting ASSE-1010 STANDARD or equivalent) to be supplied (by others) in common water supply line at service connection.

Recommended water hardness to be 3 grains or less for best results.

Recommended building flowing water pressure to the dishwasher is a minimum of 25 PSI.

Pressure regulator furnished.

For convenience when cleaning, water tap should be installed near machine with heavy duty hose and squeeze valve.

MISCELLANEOUS NOTES:

All dimensions taken from floor line may be increased by up to 1-1/8" with leg adjustment.

Net weight of machine: 640 lbs. w/o booster

Domestic shipping weight: 782 lbs. w/o booster

Net weight of machine: 691 lbs. w/booster

Domestic shipping weight: 833 lbs. w/booster

Shipping dimensions: 60" X 38" X 85" high.

Size of racks: 40-7/8" X 22-7/8" X 4-1/8"

Drain lever located inside of tank.

SINGLE POINT ELECTRIC CONNECTION (CONTROLS AND SHP PUMP MOTOR)				
ELEC. SPECS.	RATED AMPS	MINIMUM SUPPLY CONDUCTOR AMPACITY	MAXIMUM OVERCURRENT PROTECTIVE DEVICE	
208/60/3	21.4	30	30	25
240/60/3	14.6	25	25	15
480/60/3	4.6	15	15	15

SINGLE POINT ELECTRIC CONNECTION (CONTROLS AND SHP PUMP MOTOR)				
ELEC. SPECS.	RATED AMPS	MINIMUM SUPPLY CONDUCTOR AMPACITY	MAXIMUM OVERCURRENT PROTECTIVE DEVICE	
208/60/3	64.7	80	80	80
240/60/3	59.4	70	70	70
480/60/3	24.9	35	35	35

MODEL: UW-50
GAS
00-812969
REV E

UW50 with Gas Tank Heat with or without 15KW Electric Booster – Installation Diagram: D-812969 sheet 3

Propane not factory built. Field conversion kit required.

PLUMBING CONNECTIONS

⚠ WARNING Plumbing connections must comply with applicable sanitary, safety and plumbing codes.

Water Supply Connection

Water must be proper hardness. Recommended water hardness is 3 grain or less. Higher hardness may cause excessive formation of lime scale. Chlorides must not exceed 50 ppm.

A water hammer arrestor (meeting ASSE-1010 Standard) should be provided (by others) in the water supply line ahead of its connection to the line strainer. The water supply line should be a $\frac{3}{4}$ " pipe fitted with a $\frac{3}{4}$ " to $\frac{1}{2}$ " NPT reducer (supplied by others).

A flowing pressure of 15 to 25 psig is required at the pressure gauge, provided. The pressure gauge may be connected to a petcock, if equipped, and should remain closed, except when the flowing pressure is being checked. A pressure-reducing valve with relief bypass is furnished with all machines.

NOTICE The water-pressure regulator must have a relief bypass. Failure to use the proper type of pressure regulator may result in damage to the unit.

The minimum water supply temperature per cycle time required to maintain 180°F final rinse temperature is shown at the right:

Cycle	Minimum Water Supply Temperatures	
	With Optional Booster Heater	Without Booster Heater
2 Minute	110°F	180°F
4 Minute	110°F	180°F
6 Minute	80°F	180°F

Drain Connection

A proper drain should be connected to the 2" internal threads at the "T" fitting underneath the machine. The drain can be connected on either the left or right side of the "T" fitting. The right side of the "T" fitting is plugged at the factory, allowing the drain to be connected on the left side. If it is more convenient to connect the drain on the right side, remove the plug from the right side of the "T" fitting, reinstall it on the left side and connect the drain to the right side.

GAS CONNECTION (WHEN SPECIFIED)

Check the gas data plate attached to the dishwasher or tag attached to the gas burner tubing for type of gas to be used.

Connect the gas supply to the machine. Field conversion required for propane gas.

The burner is not adjustable. If line pressure is above 7" W.C. (natural gas) or 11" W.C. (propane gas), an additional regulator valve (not supplied) must be installed in the supply line.

The burner is ignited by solid state electronic circuitry; there is no pilot light. Gas flow is regulated by the temperature control circuit via a blower and centrifugal switch system.

STEAM CONNECTION (WHEN SPECIFIED)

Machines equipped with steam coil tank heat have the steam supply connection ($\frac{3}{4}$ " female pipe thread) located at the rear of the wash tank, 19" above the floor, and a condensate return connection ($\frac{3}{4}$ " female pipe thread), located at the rear of the wash tank, 12 $\frac{3}{8}$ " above the floor (a bucket-type trap is furnished). Flowing steam pressure should be 15 to 25 psig (50 psig maximum). A manually operated steam control valve (supplied by others) should be installed at a convenient location ahead of the steam supply connection.

VENTING REQUIRED WITH GAS HEAT (OPTIONAL WITH STEAM OR ELECTRIC HEAT)

The Hobart UW50 Utensil Washer, equipped for gas tank heat, is not provided with a flue collar and is not intended to have the flue directly connected to a ventilation system. However, the products of combustion must be vented to the outside air. A vent hood over the entire utensil washer (Fig. 1) can be employed to vent both the moist air from the wash chamber and the flue gases from the gas tank heat. The volume of flue exhaust required for venting moist air and flue gases using a single vent hood over the entire utensil washer must be calculated using the formulas on the next page.

If a powered means of exhaust is used, an electrical interlock must be provided to allow the flow of gas to the utensil washer burner only when the exhaust system is in operation.

For additional information, refer to the National Fuel Gas Code, ANSI Z223.1, NFPA 54 (latest editions).

In all cases, local codes will prevail.

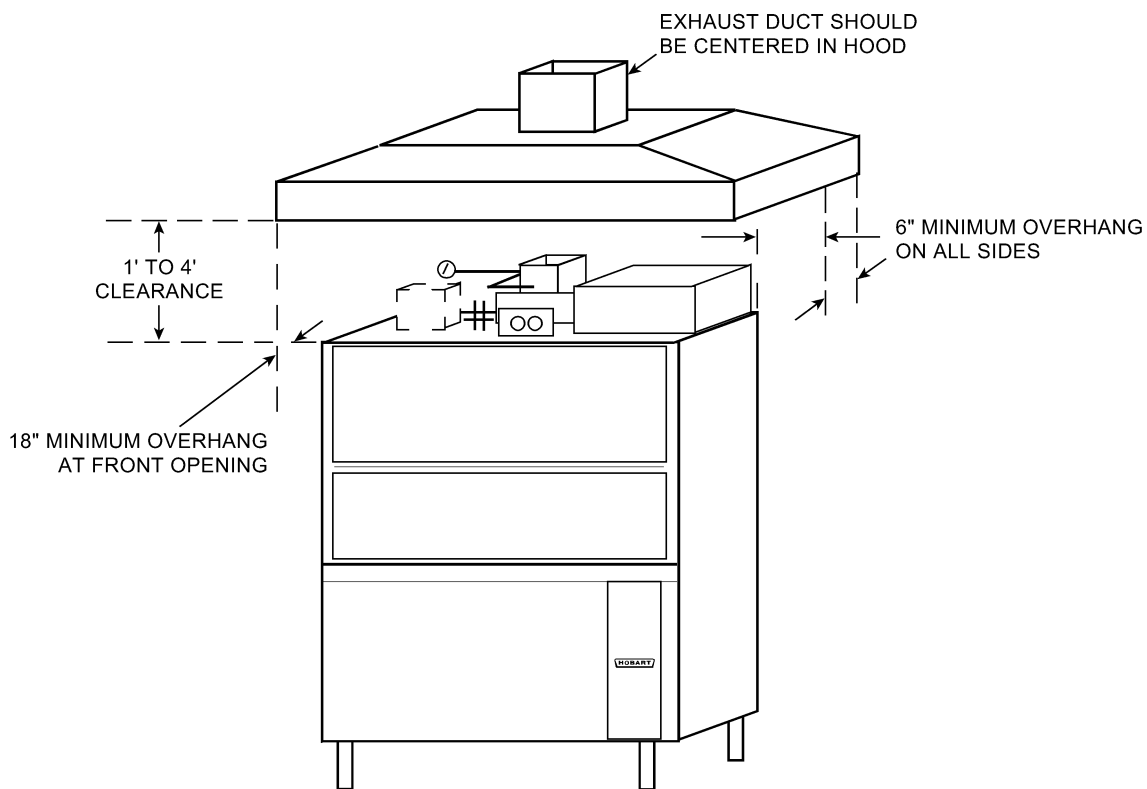


Fig. 1

Type I or Type II canopy hoods are recommended. A factory-built commercial exhaust hood may be listed as conforming to Underwriters Laboratory's standard 710, titled *Exhaust Hoods for Commercial Cooking Equipment*. Hoods must be installed according to the manufacturer's instructions. Make-up air must be provided so that the exhaust flow rate results in a positive building pressure in the room where the unit is located (more outside air than exhaust air). Factory-built hoods not tested to UL standard 710 and custom-built hoods must comply with the following specifications: Stainless steel should have a minimum thickness of 0.037 in. (0.94 mm) [No. 20 Gauge] or copper sheet weighing at least 24 ounces per square foot (7 Kg/m²); the hood must be secured in place by noncombustible supports and must meet the RATE OF EXHAUST FLOW CALCULATIONS on the next page.

RATE OF EXHAUST FLOW CALCULATIONS (FIG. 2)

Based on the International Mechanical Code (latest edition).

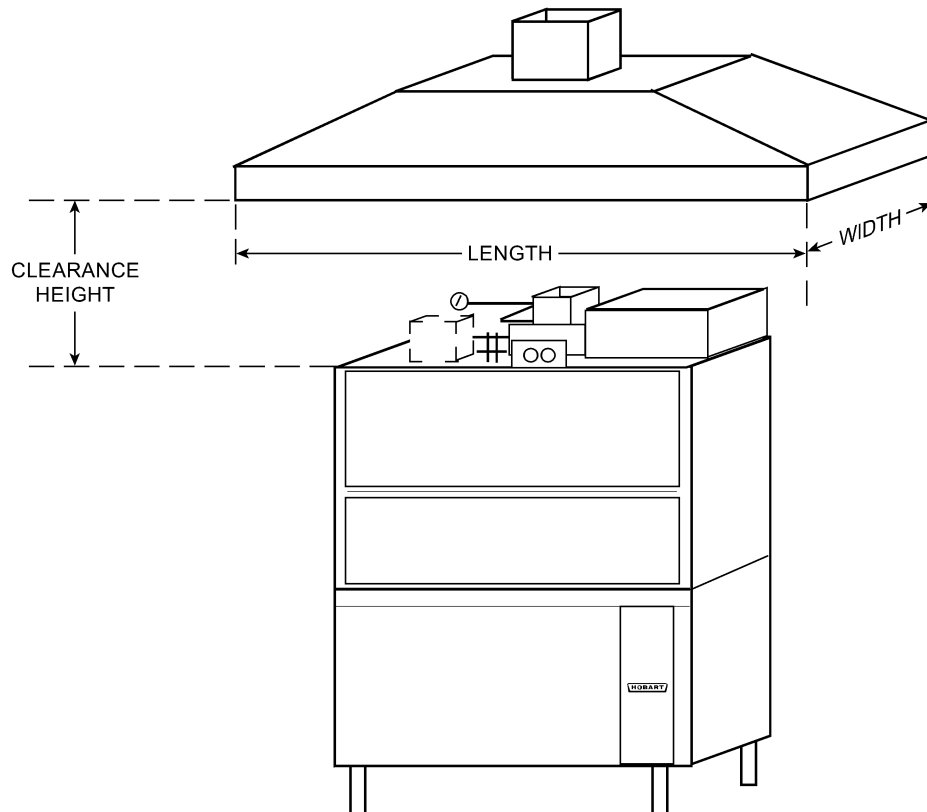


Fig. 2

Canopy size and location

The inside lower edge of canopy-type Type I and II commercial hoods shall overhang or extend a horizontal distance of not less than 6 inches (152 mm) beyond the edge of the top horizontal surface of the appliance on all open sides. The vertical distance between the front lower lip of the hood and such surface shall not exceed 4 feet (1219 mm).

The **RATE** of air flow required for a vent hood is a minimum of 100 CFM per linear foot of hood length.

DETERGENT FEEDER (OPTIONAL BY OTHERS)

If installing a detergent feeder (by others), remove cap to expose $\frac{7}{8}$ " diameter hole at rear of machine.

RINSE AGENT FEEDER (OPTIONAL BY OTHERS)

If a rinse agent feeder (by others) is being installed, remove the $\frac{1}{8}$ " NPT pipe plug to access the tapped hole in the incoming water line below the vacuum breaker on top of the machine.

VENT EXIT

A vent exit (7" x 11" x 10") is provided in the top of the machine to allow for expansion of air. It should not be directly connected to an external vent.

VENT FAN CONTROL (OPTIONAL); POWER VENT (OPTIONAL)

The Vent Fan Control option (factory- or field-installed) provides switching for a vent fan (by others). The vent hood comes on when the UW50 is on and goes off when the UW50 is off. This is appropriate for a hood over a UW50 with gas tank heat. The Vent Fan Control can be rewired by your Hobart service technician to control the Power Vent option (not available on UW50 with gas tank heat). Power Vent is used on UW50 with steam or electric tank heat to exhaust moist air from the chamber after the rinse cycle is finished. Power Vent operates for 45 seconds. Power Vent (field installed only) extends upward $13\frac{1}{8}$ " above the Vent Exit ($22\frac{7}{8}$ " above the top of the wash chamber) and terminates in a round duct connection for a $10\frac{1}{4}$ " O.D. duct.

ELECTRICAL CONNECTION

⚠ WARNING Electrical and grounding connection must comply with the applicable portions of the National Electrical Code and/or other local electrical codes.

⚠ WARNING Disconnect electrical power supply and follow lockout / tagout procedures.

Connect incoming power to the control box in accordance with the wiring diagram located inside the control box and the electrical data chart. The front trim rail and the front panel must be removed to access the control box.

ELECTRICAL DATA												
	10KW Electric Heat (Single Point Connections)		10KW Electric Heat With 15KW Electric Booster (Single Point Connections)		Steam Coil Tank Heat (Single Point Connections)		Steam Coil Tank Heat With 15KW Electric Booster (Single Point Connections)		Gas Tank Heat (Single Point Connections)		Gas Tank Heat With 15KW Electric Booster (Single Point Connections)	
Volts/Hz/Ph	Rated Amps	Circuit Size* (Amps)	Rated Amps	Circuit Size* (Amps)	Rated Amps	Circuit Size* (Amps)	Rated Amps	Circuit Size* (Amps)	Rated Amps	Circuit Size* (Amps)	Rated Amps	Circuit Size* (Amps)
208/60/3	50.3	70	93.9	**100	20.3	25	64.7	80	21.4	30	64.7	80
240/60/3	46.2	60	86.3	**100	17.6	25	59.4	70	18.6	25	59.4	70
480/60/3	23.5	30	43.8	50	9.2	15	29.9	35	9.6	15	29.9	35

* Minimum Circuit Size / Maximum Protective Device (Amps) compiled in accordance with the National Electrical Code (NFPA 70), latest edition.

** For supply connection, use wires suitable for at least 90°F or equivalent.

Rotation of Pump Motor

Before using the machine, check the pump motor rotation to be sure it is rotating in the right direction. From the front of the machine, the motor should rotate counterclockwise. Looking from the rear of the machine, the correct rotation is clockwise. Inspection is easiest from the right side using a flashlight and mirror to check the motor fan in front. Be aware that the mirror will reverse the perceived direction.

If the pump motor is rotating in the wrong direction, follow this procedure.

⚠ WARNING Disconnect electrical power supply and follow lockout / tagout procedures.

Reverse any two of the three incoming line wires (not the ground wire). Reconnect and recheck rotation of pump motor.

OPERATION

CONTROLS (FIG. 3)

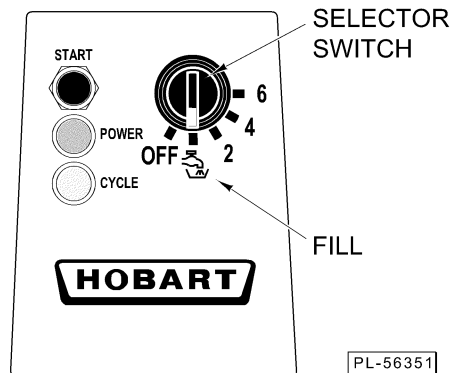


Fig. 3

SELECTOR SWITCH

- | | |
|------|--|
| OFF | Electric power to machine is off. POWER and CYCLE lights are off. |
| FILL | Timed fill requires about 3 minutes. Be sure Drain Lever (Fig. 4) is closed. Press the START button to begin a timed fill. |

SELECT WASH CYCLE and press START.

- | | |
|---|---|
| 2 | A 2-minute wash cycle is followed by a 15-second low water rinse. |
| 4 | A 4-minute wash cycle is followed by a 15-second low water rinse. |
| 6 | A 6-minute wash cycle is followed by a 15-second low water rinse. |
- All rinse cycles are followed by a 10 second pause, the white cycle light extinguishes after the pause indicating clean ware is ready for removal.

- | | |
|---------------------|--|
| START button | Begins a timed fill or starts a wash cycle. |
| POWER light (green) | Indicates the machine has power, and the Selector Switch is not off. |
| CYCLE light (white) | Indicates a timed fill or wash cycle is in process. |

NOTE: Opening the door during cycles will cause cycle to start over at the beginning.

DRAIN LEVER (Fig. 4)

Drain lever is located inside the wash chamber (middle front with door open). Lower the lever to close the drain before beginning a timed fill. Rotate lever upward to open the drain after turning the machine off at the end of the day.

DIAL THERMOMETERS (not shown)

Thermometers indicate the Wash Tank Temperature and the Rinse Temperature. Thermometers are located on top of the wash chamber and are clearly visible when the doors are shut. Minimum Wash Tank Temperature is 150°F. Minimum Rinse Temperature is 180°F.



Fig. 4

GENERAL OPERATING INSTRUCTIONS

Keep the utensil washer clean to provide best results. Do not allow foreign objects to enter the unit, especially metallic contaminants.

Do not wash aluminum utensils in the utensil washer. The caustic detergent and high water temperature will cause aluminum oxide formation (black). Copper utensils may require polishing to remove oxide formation after exposure to utensil washer cleaning for a period of time. Stainless steel utensils should clean quickly and easily if the food soil is not baked on.

It may be necessary to scrub or prewash some hard-to-remove substances which may not come clean in the utensil washer with even a 6-minute washing. For stubborn food soil, a plastic scraper, plastic abrasive pad, nylon bristle brush or sponge with abrasive surface (Scotch Brite) may be used before washing in the utensil washer. Never use steel wool on ware to be loaded into the utensil washer. Use only products formulated to be safe on stainless steel. Rinse items thoroughly after scrubbing to remove metallic debris.

CLEANING THE UTENSIL WASHER

⚠ WARNING Disconnect electrical power supply and follow lockout / tagout procedures.

The utensil washer must be thoroughly cleaned at the end of each working shift or at least daily. Never use steel wool to clean utensil washer surfaces.

Turn the Selector Switch OFF.

Open the doors and lift up on the drain lever to drain the tank.

Remove the strainer pan and strainer basket (Fig. 5), and empty into a waste disposer or garbage container. Wash and rinse strainer pan and strainer basket thoroughly. Do not bang strainer pan or basket on tables to remove food soil.

After the tank has drained completely, lower the overflow tube to close the drain. Reconnect the electrical power to the machine.

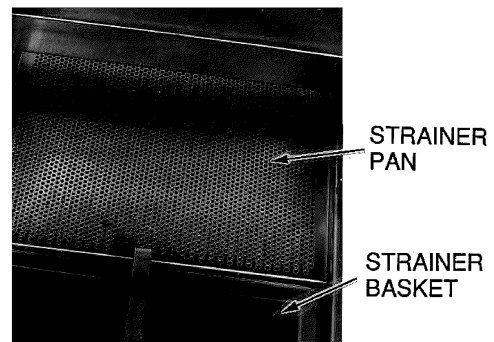


Fig. 5

Turn the Selector Switch to FILL and press the Start button. The machine will fill and rinse any debris into the tank.

After Fill is complete, turn the Selector Switch OFF, open the doors and lift up on the drain lever to drain the machine.

⚠ WARNING Disconnect electrical power supply and follow lockout / tagout procedures.

Remove the overflow cover and the overflow tube. Wash and rinse the overflow tube inside and out.

Thoroughly cleanse and flush the interior of the machine. Remove remaining soil with a soft cloth or brush and a mild cleanser. Rinse again. Do not allow food soil to accumulate in the tank bottom.

Reinstall the overflow tube.

Carefully reinstall the strainer pan, strainer basket and drain cover. The opening at the corner of the strainer pan allows the capillary tube to go into the tank.

NOTICE On machines with the capillary tube in the tank, use care when assembling strainer pan so the capillary tube is not damaged during assembly.

Make sure that the wash and rinse arms rotate freely and are free of any obstructions. If any obstructions are present, remove the wash and rinse arms. Clean the wash and rinse arms under running water in a sink.

The wash and rinse arms are easily removed for cleaning.

To remove upper, low water rinse arm and wash arm (Fig. 6):

- Unscrew the rinse arm by loosening the knurled ring at top of rinse arm.
- Remove both Rinse and Wash arms at the same time, being careful not to drop these arms.
- Reverse the process to replace.

To remove lower, low water rinse arm and wash arm (Fig.7):

- Unscrew the rinse arm by loosening the knurled ring at top of rinse arm.
- Remove both Rinse and Wash arms at the same time, being careful not to drop these arms.
- Reverse the process to replace.

Leave the doors open to allow the interior to dry and air out.



Fig. 6
(Low water rinse, upper assembly)

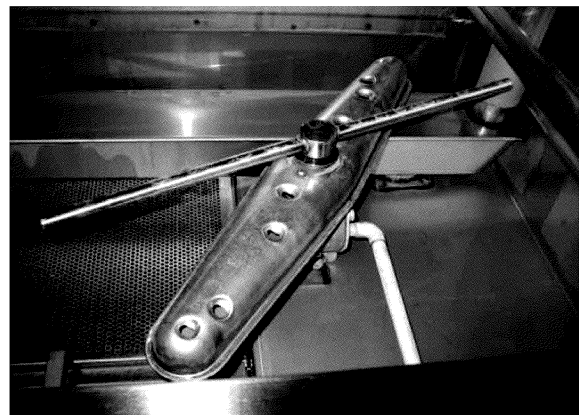


Fig. 7
(Low water rinse, lower assembly)

DOS AND DON'TS FOR YOUR NEW HOBART UTENSIL WASHER

DO ensure proper water hardness (3 grain or less). Total Dissolved Solids (TDS) must be 50 ppm or greater. Chlorides must not exceed 50 ppm.

DO pre-scrub dishes thoroughly.

DO use only detergents recommended by your chemical professional.

DO thoroughly cleanse, rinse and dry (leave door open) the machine at the end of the day.

DO closely follow your chemical professional's prescribed deliming schedule.

DO use only products formulated to be safe on stainless steel.

DO NOT use detergents formulated for residential dishwashers.

DO NOT allow food soil to accumulate on the tank bottom.

DO NOT exceed chemical manufacturer's recommended concentrations for detergent, sanitizer, rinse aid or lime scale remover.

DO NOT use steel wool to clean ware or warewasher surface.

DO NOT allow foreign objects to enter the unit, especially metallic contaminants.

NOTE: Failure to follow use, care and maintenance instructions may void your Hobart warewasher warranty.

MAINTENANCE

⚠ WARNING Disconnect electrical power supply and follow lockout / tagout procedures.

MOTOR

The motor has permanently sealed bearings and requires no lubrication.

WASH AND RINSE ARMS

All wash arms and rinse arms should turn freely and continue turning for a few seconds after being whirled by hand. To check, **DISCONNECT ELECTRICAL POWER SUPPLY**, rotate arms and remove any obstructions causing improper operation. Refer to CLEANING THE UTENSIL WASHER on pages 12 and 13.

If the slanted strainer pan and strainer basket are not properly in place, obstructions (such as food particles or toothpicks) may clog the wash arm nozzles.

DELIMING

⚠ WARNING Deliming solution must not come in contact with bleach or rinse solution containing bleach. Mixing may cause hazardous gas to form. This entire procedure must be followed step-by-step for safe and satisfactory results.

The dishwasher should be delimed on a regular basis as required. How often depends on the mineral content of the water. Deliming should be done when you can see clear signs of lime deposits (a white chalky substance) on the inside walls and on the wash and rinse arms.

Inspect the machine interior for lime deposits. If deliming is necessary, a deliming agent (available from your detergent representative) should be used for best results.

Delime as follows:

1. Lift drain lever and drain tank.
2. Remove rack from machine.
3. Close door.
4. Fill machine.
5. Open door and add deliming agent (carefully follow supplier's instructions).

NOTE: The sump holds 27 gallons of water.

6. Close door and allow machine to complete a 6-minute cycle.
7. Open door and lift drain lever to drain tank.
8. Inspect interior of machine for lime deposits. Repeat Steps 3 through 7 if necessary.

NOTICE Do not allow deliming agent to remain in the machine longer than recommended by the deliming agent manufacturer. After deliming, run the machine through two 6-minute cycles with no utensils in order to rinse and flush machine interior.

TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE
Utensils spotted or not clean	<p>Overloaded rack.</p> <p>Low water level.</p> <p>Water conditions:</p> <ul style="list-style-type: none"> — Incorrect rinse water temperature. Refer to WATER SUPPLY CONNECTION, page 7. — Excessive water hardness may indicate that a water softener is needed. — Incorrect detergent type or concentration for water conditions. — Incorrect rinse additive for water conditions. <p>Inadequate rinse.</p> <ul style="list-style-type: none"> — Dirty line strainer causing reduced water flow. Turn off water supply. Remove strainer cap. Withdraw and clean screen. Reassemble. — Low water pressure (supply line). — Excessive mineral deposits throughout wash and rinse system. Deliming may be necessary. <p>Check water level in tank. The machine won't clean well if there isn't enough water for the pump to maintain adequate wash pressure.</p> <ul style="list-style-type: none"> — Drain overflow tube may not be seated. — Worn or torn O-Ring may cause overflow tube not to seat. <p>Loss of water pressure due to pump obstruction.</p> <ul style="list-style-type: none"> — DISCONNECT ELECTRIC POWER SUPPLY. Drain tank and check for obstruction at the strainer, basket and pump intake. <p>Insufficient detergent dispensing.</p> <ul style="list-style-type: none"> — Check supply or detergent supplier. <p>Excessive mineral deposits throughout wash and rinse system.</p> <ul style="list-style-type: none"> — Deliming may be necessary. — Excessive water hardness may indicate that a water softener is needed. <p>Utensil washer was not cleaned properly. Refer to CLEANING THE UTENSIL WASHER, pages 12 and 13.</p> <p>Wash arm blocked with debris. Refer to WASH AND RINSE ARMS, page 14.</p>

SYMPTOM	POSSIBLE CAUSE
Machine won't operate.	<p>Fuse blown or circuit breaker tripped.</p> <p>Selector Switch is turned OFF.</p> <p>Check water level in tank.</p> <ul style="list-style-type: none"> — Drain overflow tube may not be seated. — Worn or torn O-Ring may cause overflow tube not to seat.
Leaking valves.	<p>Solenoid valves.</p> <ul style="list-style-type: none"> — Contact Service. <p>Vacuum breaker.</p> <ul style="list-style-type: none"> — Foreign material preventing proper valve operation. A critical period is soon after installation when pipe compound or metal shavings may lodge at the valve seat. DISCONNECT ELECTRICAL POWER SUPPLY. Shut off water supply line. Unscrew and lift bonnet from valve body. Clean valve and reassemble.
No wash tank heat.	<p>The low water detector will shut off heat if water level is too low.</p> <ul style="list-style-type: none"> — Check water level. The overflow tube may not be seated. <p>Fuse blown or circuit breaker tripped (if equipped with electric heat).</p> <p>Manual steam valve not open completely (if equipped with steam heat).</p> <p>Overtemperature protector tripped (gas or electric tank heat only).</p> <ul style="list-style-type: none"> — Contact Service.
No fill or slow fill.	<p>Dirty line strainer causing reduced water flow.</p> <ul style="list-style-type: none"> — Turn off water supply. Remove strainer cap. Withdraw and clean screen. Reassemble.

SERVICE

In the event a gas orifice fitting shall be adjusted or replaced, have it serviced by qualified personnel.

Contact your Hobart service office for any repairs or adjustments needed on this equipment. Long-term service contracts are available on this and other Hobart products.