



INSTALLATION INSTRUCTIONS

HBA & BXA SERIES RACK OVEN



7432

HBA2G MODEL SHOWN

HBA1G ML - 132358

HBA2G ML - 132280

BXA1G ML - 132359

BXA2G ML - 132281

HBA1E ML - 132361

HBA2E ML - 132355

BXA1E ML - 132362

BXA2E ML - 132356

GAS - FIRED



ANSI/NSF 4



ANSI/NSF 4

- NOTICE -

This Manual is prepared for the use of trained Hobart Service Technicians and should not be used by those not properly qualified. If you have attended a Hobart Service School for this product, you may be qualified to perform all the procedures described in this manual.

This manual is not intended to be all encompassing. If you have not attended a Hobart Service School for this product, you should read, in its entirety, the repair procedure you wish to perform to determine if you have the necessary tools, instruments and skills required to perform the procedure. Procedures for which you do not have the necessary tools, instruments and skills should be performed by a trained Hobart Service Technician.

Reproduction or other use of this Manual, without the express written consent of Hobart, is prohibited.

IMPORTANT FOR YOUR SAFETY

THIS MANUAL HAS BEEN PREPARED FOR PERSONNEL QUALIFIED TO INSTALL GAS EQUIPMENT, WHO SHOULD PERFORM THE INITIAL FIELD START-UP AND ADJUSTMENTS OF THE EQUIPMENT COVERED BY THIS MANUAL.

POST IN A PROMINENT LOCATION THE INSTRUCTIONS TO BE FOLLOWED IN THE EVENT THE SMELL OF GAS IS DETECTED. THIS INFORMATION CAN BE OBTAINED FROM THE LOCAL GAS SUPPLIER.

IMPORTANT

IN THE EVENT A GAS ODOR IS DETECTED, SHUT DOWN UNITS AT MAIN SHUTOFF VALVE AND CONTACT THE LOCAL GAS COMPANY OR GAS SUPPLIER FOR SERVICE.

FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

WARNING

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

IN THE EVENT OF A POWER FAILURE, DO NOT ATTEMPT TO OPERATE THIS DEVICE.

KEEP AREA AROUND OVEN CLEAR OF COMBUSTIBLES. DO NOT OBSTRUCT COMBUSTION AND VENTILATION OPENINGS ON THE OVEN.

TABLE OF CONTENTS

GENERAL 4

- Introduction 4
- Unpacking 4
- Location Updated October 2008 4
- Clearance Dimensions 4
- Testing the Gas Supply Piping System (Gas Ovens Only) 4
- Installation Codes and Standards 5
- Special Tools 5
- HBA1 & BXA1 Gas Oven Specifications Updated October 2008 6
- HBA2 & BXA2 Gas Oven Specifications Updated October 2008 8
- HBA1 & BXA1 Electric Oven Specifications Updated October 2008 10
- HBA2 & BXA2 Electric Oven Specifications Update October 2008 12

INSTALLING OVEN 14

- Oven Sections Updated October 2008 14
- Floor / Threshold Updated October 2008 22
- Steam System Updated October 2008 23
- Door Assembly Updated October 2008 26
- Door Sweep Updated November 2006 26
- Rack Carrier Updated October 2008 27
- Hood Assembly Updated November 2006 28
- Single Point Venting Updated October 2008 29
- Air Baffle & Grease Filters Updated October 2008 30
- Caulk Oven Updated November 2006 30
- Initial Start-Up Updated October 2008 30
- Final Checks 36

© Hobart 2008

GENERAL

INTRODUCTION

Before proceeding with oven installation review the pre-installation site inspection report and verify that all issues have been addressed.

As part of our continuing quest for product improvement changes may have occurred since your last installation. The latest changes will be noted with a date in the table of contents. If changes occur after the printing of this manual there will be an addendum sheet included in the installation packet. Review these changes before you start the installation.

These instructions are for Hobart & Baxter Baker's Advantage Rack Ovens. Photographs in this manual are taken of an HBA2G, unless otherwise stated. The oven will be shipped in two sections, requiring assembly, leveling and connection to utilities. In some cases HBA1 & BXA1 ovens may have the two oven sections preassembled at the factory.

UNPACKING

Remove the crating from the oven exterior, check for possible shipping damage. If the oven is found to be damaged after unpacking, save the packaging material and contact the carrier within 15 days of delivery.

NOTE: If the location has multiple ovens, keep the serial numbered crates together.

LOCATION UPDATED OCTOBER 2008

NOTICE To reduce the risk of fire, the appliance is to be installed on non-combustible surface only, with no combustible material within 18 inches of the appliance. The appliance is to be mounted on floors of non-combustible construction with non-combustible flooring and surface finish and with no combustible material against the underside, or on non-combustible slabs or arches having no combustible material against the underside. Such construction shall in all cases extend not less than 12 inches beyond the equipment on all sides.

The floor must be level with surrounding area with a maximum slope of 1/8" per foot up to 3/4" maximum in all directions. Floor anchors require a minimum 1" thick solid floor substrate.

A level floor area must be prepared before assembling oven. The floor area should be at least 104"D x 74"W for double rack oven and 94"D x 57"W for single rack oven, to accommodate the oven footprint and door swing. The prepared floor must be level with surrounding area.

Do not obstruct the flow of combustion and ventilation air. Keep the appliance area free and clear from combustibles.

Make sure there is an adequate supply of make up air in the room to allow for combustion.

The electrical diagram is located on the inside of the heat exchanger compartment door.

CLEARANCE DIMENSIONS

Oven is UL/CSA Listed for zero clearance for back and side walls. A 1" to 4" back clearance is recommended for plumbing rear drain connection.

Top of oven requires a minimum of 24" clearance for servicing accessibility.

TESTING THE GAS SUPPLY PIPING SYSTEM (GAS OVENS ONLY)

When test pressures exceed 1/2 psig (14" W.C.) (35.6cm W.C.) (3.5kPa), the oven and its individual shutoff valve must be disconnected from the gas supply piping system.

When test pressures are 1/2 psig (14" W.C.) (35.6cm W.C.) (3.5kPa) or less, the oven must be isolated from the gas supply piping system by closing its individual shutoff valve.

INSTALLATION CODES AND STANDARDS

HBA & BXA ovens must be installed in accordance with:

United States

1. State and local codes.
2. National Fuel Gas Codes, ANSIZ223.1 (latest edition), available from American Gas Association, 1515 Wilson Boulevard, Arlington, VA 22209.
3. ANSI/NFPA 96, Standard for Ventilation Control & Fire Protection of Commercial Cooking Operations (latest edition), available from National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.
4. National Electrical Code, ANSI/NFPA-70 (latest edition).

Canada

1. Local codes.
2. CAN/CGA-B149-1, Installation for Natural Gas Burning Appliances and Equipment (latest edition).
3. CAN/CGA-B149-2, Installation for Propane Burning Appliances and Equipment (latest edition).
4. Canadian Electrical Code, Part 2, CSA Standard C22.1 (latest edition).

Australia

1. Gas Installation AS 5601-AG601 and any other gas statutory regulations.
2. Local Authority.
3. Electrical connection codes.
4. Plumbing codes.
5. Venting requirements.

SPECIAL TOOLS

- Inclined manometer - Dwyer Cat. #1227 or equivalent.
- Combustion analyzer meter Bacharach Fyrite Pro 125 Bacharach model# 24-8105.
- Impact drill to drill holes in floor for anchor bolts.
- 3/8" masonry drill bit to drill holes in floor for anchor bolts.
- Temperature tester (thermocouple type) with 10' lead.
- Gauges for checking air shutters Part No. 01-1M5689-1 (shipped with oven).
- Draft meter BACHARACH Model 13-3000 DCL 24490 or equivalent.
- Dolly wheel Part No. 01-1M2335-1.
- Mini laser level self leveling with tripod Harbor Freight No. 92703-OVGA.
- 2 ton foldable shop hoist Harbor Freight No. 35915-4VGA for lifting oven section.
- 3/8" chain 20 ft. long with a 4700 lbs. load rating Harbor Freight No. 40461-7VGA used with hoist.
- Two 7/16" X 5-1/2" bolts used with hoist.
- Two 7/16" nuts used with hoist.
- Four 7/16" fender washers used with hoist.

HBA1 & BXA1 GAS OVEN SPECIFICATIONS UPDATED OCTOBER 2008

① WATER:

1/2" NPT, 30-75 PSI cold water required, customer to install in-line filter, shut off valve and line strainer.

② DRAIN:

6 1/4" (front) or 7" (rear) connection A.F.F. (See notes). Route to air-gap drain. Do not slope drain upwards. Plug the drain connection that is not in use.

Rear Drain: 1/2" NPTF

Front Drain: 1/2" NPTF

③ GAS:

Natural Gas (N.G.)

3/4" NPT, W.C.N.G. (N.G. rated 1025 BTU/CU. FT. SP. GR. 1.00)

Liquefied Propane Gas (L.P.G.)

3/4" NPT, W.C.L.P.G. (L.P.G. rated 2440 BTU/CU.FT., SP. GR. 1.52)

	Natural Gas	Liquefied Propane Gas
BTU/HR	180,000	180,000
W.C.	5.0" - 10.0"	12.0" - 14.0"

④ ELECTRICAL:

Two supplies required.

120/60/1 20 AMP dedicated circuit required and one of the following voltage options.

Voltage	Full Load AMPS
220/60/1	6.8 AMPS
208-230/60/3	4.4 - 4.2 AMPS
460/60/3	2.1 AMPS

⑤ HOOD VENT:

8" DIA connection collar. Customer to supply duct and ventilator fan per state and local codes. Air proving switch factory installed & integrated with burner system operation. Oven provided rely with max. 6 amp 1/3 H.P. @ 120V output for fan operation. If larger, use oven relay to control additional separately powered contactor / relay for hood fan. Chamber vents are factory ducted to this integral hood. 600 CFM required, 0.4" W.C. static pressure drop through standard Type 2 hood (steam & heat). 690 CFM required, 0.6" W.C. static pressure drop through optional Type 1 hood (grease filters). Hood is UL710 Listed when grease filters are installed. Type B gas vent can be used except when bake products are grease laden.

NOTES:

1. A.F.F.: Above finished floor.
2. Customer responsible to finish and install all utilities to and from oven.
3. All services must comply with all Federal, State and Local codes.
4. **[NOTICE]** To reduce the risk of fire, the appliance is to be installed on non-combustible surface only, with no combustible material within 18 inches above the appliance. The appliance is to be mounted on floors of non-combustible construction with non-combustible flooring and surface finish and with no combustible material against the underside, or on non-combustible slabs or arches having no combustible material against the underside. Such construction shall in all cases extend not less than 12 inches beyond the equipment on all sides.

5. The floor must be of non-combustible material, and must be level with surrounding area with a maximum slope of 1/8" per foot up to 3/4" maximum in all directions. Floor anchors require a minimum 1" thick solid floor substrate.
6. Oven is UL/C-UL classified and CSA (AGA/CGA) approved for 0" clearance on the side and rear walls. Unit requires 1" to 4" clearance for rear drain connection.
7. Top of oven requires a minimum of 24" for service accessibility.
8. Customer responsible to install flue piping. Flue must be vented outside of building.
9. Manufacturer reserves the right to make changes in sizes and specifications.

Export Ratings

① WATER:

1/2" NPT, 2.1-5.2 Bar cold water required, customer to install in-line filter, shut off valve and line strainer. Flow rate of 8 l/min..

③ GAS:

Natural Gas (N.G.)

3/4" NPT (N.G. Rated 38.2Mj/m³ or 9120 Kcal/m³ SP Gr 1.00)

Liquefied Propane Gas (LPG)

3/4" NPT (LPG Rated 90.9Mj/m³ or 21710 Kcal/m³ SP Gr 1.52)

	Natural Gas	Liquefied Propane Gas
kCAL/HR	45,400	45,400
cm W.C.	12.7 - 25.4	30.5 - 35.6
Mj/HR	190	190
kPa	1.25 - 2.50	3.00 - 3.50

NOTE: Pressure not to exceed 35.6 cm W.C. or 3.5 kPa

④ ELECTRICAL:

Single supply connection provided- 380V/3ph/50Hz, 400V/3ph/50Hz, or 415V/3ph/50Hz – 6 A circuit required

1 kVa Transformer supplied for control and operation voltage of 110V. This is a multifunction transformer, so output voltage should be verified before operation.

Oven fan (1.1kW) operates @ 380-415V 3ph 50 Hz 2.4- 2.2A




⑤ HOOD VENT:

20.3 cm DIA. Connection collar. Customer is to supply duct and ventilator fan per federal and/or local codes. Chamber vent (steam) and combustion exhaust are discharged into the hood. An air proving switch is factory installed and integrated with burner system operation. If proper ventilation is not provided, burner will not operate. Oven provides a relay to activate a customer supplied and powered contactor/relay, so that when oven is powered up external fan will operate. The hood requires a minimum of 19.5 m³/min for safe operation. For fan calculation purposes you should assume 0.15 kPa resistance through the hood. Grease filters (optional) may be installed in the hood instead of standard baffle.

HBA1 & BXA1 GAS OVEN

SINGLE POINT VENTING SHOWN
 POWERED ROOF VENTILATOR SUPPLIED AND INSTALLED BY OTHERS
 ROOF
 CEILING LINE
 SINGLE FLUE DUCT FOR SINGLE POINT VENTING

*Drawings shown are NOT to scale

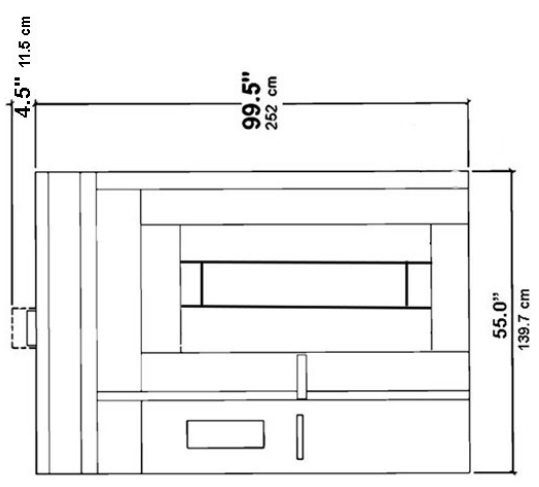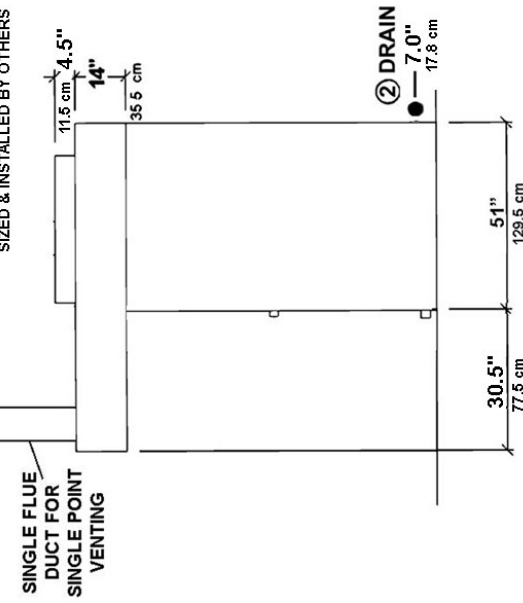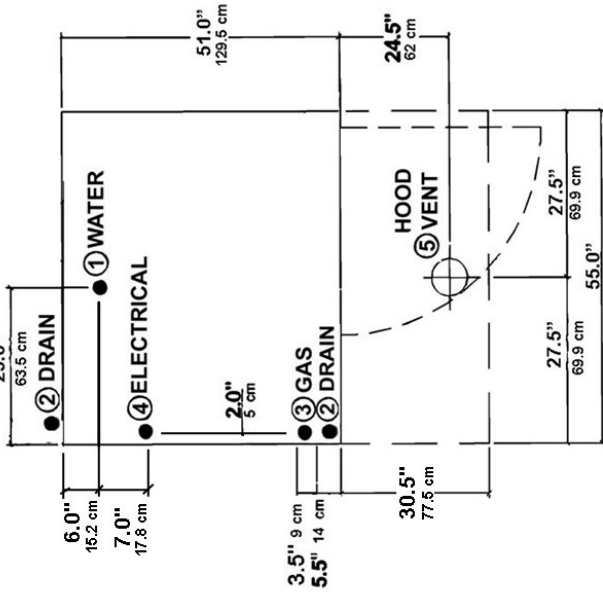

FRONT VIEW 18306

TOP VIEW

SIDE VIEW

HBA2 & BXA2 GAS OVEN SPECIFICATIONS UPDATED OCTOBER 2008

① WATER:

1/2" NPT, 30-75 PSI cold water required, customer to install in-line filter, shut off valve and line strainer.

② DRAIN:

2 3/4" (front) or 5 1/2" (rear) connection A.F.F. (See notes). Route to air-gap drain. Do not slope drain upwards. Plug the drain connection that is not in use. Kit provided to extend drain to either side of oven.

Rear Drain: 3/4" NPTF
Front Drain: 3/8" NPTF

③ GAS:

Natural Gas (N.G.)

1 1/4" NPT, W.C.N.G. (N.G. rated 1025 BTU/CU. FT. SP. GR. 1.00)

Liquefied Propane Gas (L.P.G.)

1 1/4" NPT, W.C.L.P.G. (L.P.G. rated 2440 BTU/CU.FT., SP. GR. 1.52)

	Natural Gas		Liquefied Propane Gas	
BTU/HR	300,000	350,000	300,000	350,000
W.C.	5.0 -14.0"	6.0 - 14.0"	10.0" - 14.0"	12.0 - 14.0"

④ ELECTRICAL:

Two supplies required.
120/60/1 20 AMP dedicated circuit required and one of the following voltage options.

Voltage	Full Load AMPS
220/60/1	6.8 AMPS
208-230/60/3	4.4 - 4.2 AMPS
460/60/3	2.1 AMPS

⑤ HOOD VENT:

10" DIA connection collar and optional 10" to 8" DIA duct adapter provided. Air proving switch factory installed & integrated with burner system operation. Oven provided rely with max. 6 amp 1/3 H.P. @ 120V output for fan operation. If larger, use oven relay to control additional separately powered contactor / relay for hood fan. Customer to supply duct and ventilator fan per state and local codes. Chamber vents are factory ducted to this integral hood. 750 CFM required, 0.4" W.C. static pressure drop through standard Type 2 hood (steam & heat). 900 CFM required, 0.6" W.C. static pressure drop through grease Type 1 hood (grease filters). Hood is UL710 Listed when grease filters are installed. Type B gas vent can be used except when bake products are grease laden.

NOTES:

1. A.F.F.: Above finished floor.
2. Customer responsible to finish and install all utilities to and from oven.
3. All services must comply with all Federal, State and Local codes.
4. **[NOTICE]** To reduce the risk of fire, the appliance is to be installed on non-combustible surface only, with no combustible material within 18 inches above the appliance. The appliance is to be mounted on floors of non-combustible construction with non-combustible flooring and surface finish and with no combustible material against the underside, or on non-combustible slabs or arches having no combustible material against the underside. Such construction shall in all cases extend not less than 12 inches beyond the equipment on all sides.

5. The floor must be of non-combustible material, and must be level with surrounding area with a maximum slope of 1/8" per foot up to 3/4" maximum in all directions. Floor anchors require a minimum 1" thick solid floor substrate.
6. Oven is UL/C-UL classified and CSA (AGA/CGA) approved for 0" clearance on the side and rear walls. Unit requires 1" to 4" clearance for rear drain connection.
7. Top of oven requires a minimum of 24" for service accessibility.
8. Customer responsible to install flue piping. Flue must be vented outside of building.
9. Manufacturer reserves the right to make changes in sizes and specifications.

Export Ratings

① WATER:

1/2" NPT, 2.1-5.2 Bar cold water required, customer to install in-line filter, shut off valve and line strainer. Flow rate of 8 l/min..

③ GAS:

Natural Gas (N.G.)

3/4" NPT (N.G. Rated 38.2Mj/m³ or 9120 Kcal/m³ SP Gr 1.00)

Liquefied Propane Gas (LPG)

3/4" NPT (LPG Rated 90.9Mj/m³ or 21710 Kcal/m³ SP Gr 1.52)

	Natural Gas	Liquefied Propane Gas
kCAL/HR	75,600	75,600
cm W.C.	12.7 - 25.4	30.5 - 35.6
Mj/HR	317	317
kPa	1.25 - 3.50	3.00 - 3.50

NOTE: Pressure not to exceed 35.6 cm W.C. or 3.5 kPa

④ ELECTRICAL:

Single supply connection provided- 380V/3ph/50Hz, 400V/3ph/50Hz, or 415V/3ph/50Hz – 6 A circuit required

1 kVa Transformer supplied for control and operation voltage of 110V. This is a multifunction transformer, so output voltage should be verified before operation.

Oven fan (1.1kW) operates @ 380-415V 3ph 50 Hz 2.4- 2.2A




⑤ HOOD VENT:

25.4 cm DIA. Connection collar. Customer is to supply duct and ventilator fan per federal and/or local codes. Chamber vent (steam) and combustion exhaust are discharged into the hood. An air proving switch is factory installed and integrated with burner system operation. If proper ventilation is not provided, burner will not operate. Oven provides a relay to activate a customer supplied and powered contactor/relay, so that when oven is powered up external fan will operate. The hood requires a minimum of 25.5 m³/min for safe operation. For fan calculation purposes you should assume 0.15 kPa resistance through the hood. Grease filters (optional) may be installed in the hood instead of standard baffle.

HBA2 & BXA2 GAS OVEN

SINGLE POINT VENTING SHOWN
 POWERED ROOF VENTILATOR SUPPLIED AND INSTALLED BY OTHERS
 ROOF
 CEILING LINE
 SINGLE FLUE DUCT FOR SINGLE POINT VENTING
 8" MINIMUM VENT PIPE SUPPLIED, SIZED & INSTALLED BY OTHERS

*Drawings shown are NOT to scale

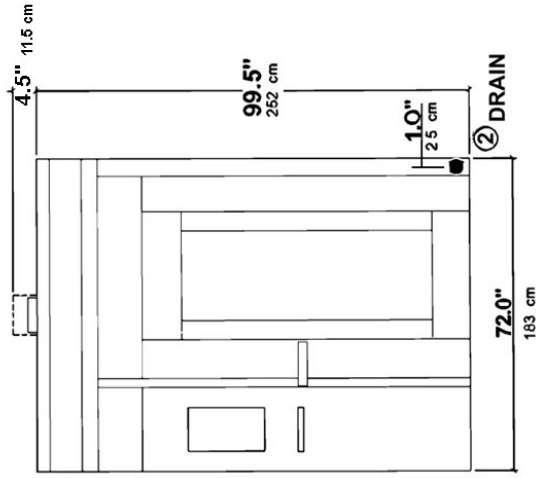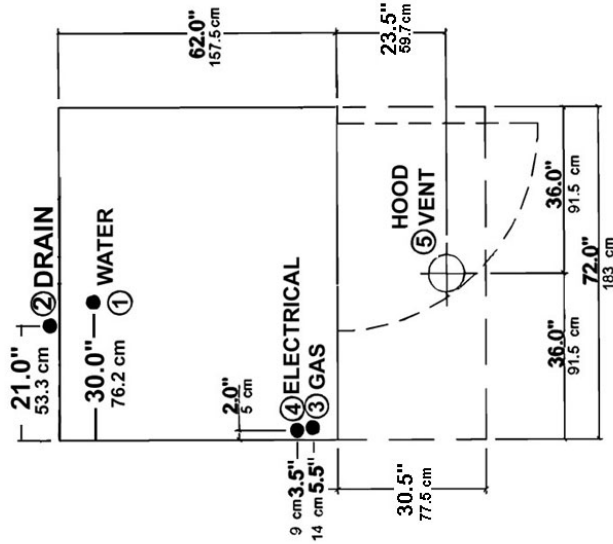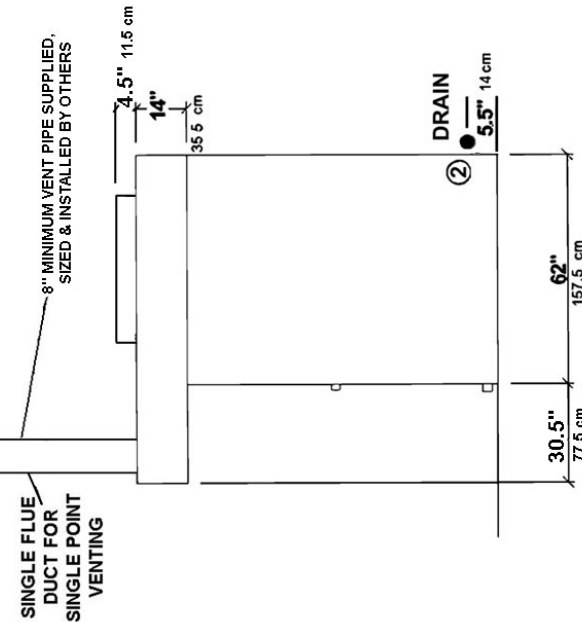

FRONT VIEW **18307**

**HBA1 & BXA1 ELECTRIC OVEN
SPECIFICATIONS
UPDATED OCTOBER 2008**

① WATER:

1/2" NPT, 30-75 PSI cold water required, customer to install in-line filter, shut off valve and line strainer.

② DRAIN:

6 1/4" (front) or 7" (rear) connection A.F.F. (See notes). Route to air-gap drain. Do not slope drain upwards. Plug the drain connection that is not in use.

Rear Drain: 1/2" NPTF

Front Drain: 1/2" NPTF

③ ELECTRICAL:

Two supplies required.

120/60/1 20 AMP dedicated circuit required and one of the following voltage options.

Heating Circuit: KW rating in following chart per supply voltage.

Blower Motor: 1 1/2 H.P.

Voltage	Full Load AMPS	Heaters Rating
208/60/3	99.5 AMPS	34.2 KW
208-240/60/3	75.4 - 86.2 AMPS	25.7 - 34.2 KW
440-480/60/3	40.2 - 43.0 AMPS	28.7 - 34.2 KW

④ HOOD VENT:

8" DIA connection collar. Customer to supply duct and ventilator fan per state and local codes. Oven provided rely with max. 6 amp 1/3 H.P. @ 120V output for fan operation. If larger, use oven relay to control additional separately powered contactor / relay for hood fan. Chamber vents are factory ducted to this integral hood. 600 CFM required, 0.4" W.C. static pressure drop through standard Type 2 hood (steam & heat). 690 CFM required, 0.6" W.C. static pressure drop through grease Type 1 hood (grease filters). Hood is UL710 Listed when grease filters are installed. Type B gas vent can be used except when bake products are grease laden.

NOTES:

1. A.F.F.: Above finished floor.
2. Customer responsible to finish and install all utilities to and from oven.
3. All services must comply with all Federal, State and Local codes.
4. **NOTICE** To reduce the risk of fire, the appliance is to be installed on non-combustible surface only, with no combustible material within 18 inches above the appliance. The appliance is to be mounted on floors of non-combustible construction with non-combustible flooring and surface finish and with no combustible material against the underside, or on non-combustible slabs or arches having no combustible material against the underside. Such construction shall in all cases extend not less than 12 inches beyond the equipment on all sides.

5. The floor must be of non-combustible material, and must be level with surrounding area with a maximum slope of 1/8" per foot up to 3/4" maximum in all directions. Floor anchors require a minimum 1" thick solid floor substrate.
6. Oven is UL/C-UL classified and CSA (AGA/CGA) approved for 0" clearance on the side and rear walls. Unit requires 1" to 4" clearance for rear drain connection.
7. Top of oven requires a minimum of 24" for service accessibility.
8. Customer responsible to install flue piping. Flue must be vented outside of building.
9. Manufacturer reserves the right to make changes in sizes and specifications.

Export Ratings

① WATER:

1/2" NPT, 2.1-5.2 Bar cold water required, customer to install in-line filter, shut off valve and line strainer. Flow rate of 8 l/min..

③ ELECTRICAL:

Single supply connection provided- 380V/3ph/50Hz, 400V/3ph/50Hz, or 415V/3ph/50Hz – 6 A circuit required

1 kVa Transformer supplied for control and operation voltage of 110V. This is a multifunction transformer, so output voltage should be verified before operation.

Oven fan (1.1kW) operates @ 380-415V 3ph 50 Hz 2.4- 2.2A

Voltage	Full Load AMPS	Heaters Rating
380V	47 AMPS	28.6 kW
400V	50 AMPS	31.4 kW
415V	52 AMPS	34.2 kW

④ HOOD VENT:

20.3 cm DIA. Connection collar. Customer is to supply duct and ventilator fan per federal and/or local codes. Chamber vent (steam) and combustion exhaust are discharged into the hood. An air proving switch is factory installed and integrated with heating system operation. If proper ventilation is not provided, heating system will not operate. Oven provides a relay to activate a customer supplied and powered contactor/relay, so that when oven is powered up external fan will operate. The hood requires a minimum of 19.5 m³/min for safe operation. For fan calculation purposes you should assume 0.15 kPa resistance through the hood. Grease filters (optional) may be installed in the hood instead of standard baffle.

HBA1 & BXA1 ELECTRIC OVEN

SINGLE POINT VENTING SHOWN

POWERED ROOF VENTILATOR SUPPLIED AND INSTALLED BY OTHERS



ROOF

CEILING LINE

8" MINIMUM VENT PIPE SUPPLIED, SIZED & INSTALLED BY OTHERS

SINGLE FLUE DUCT FOR SINGLE POINT VENTING

*Drawings shown are NOT to scale

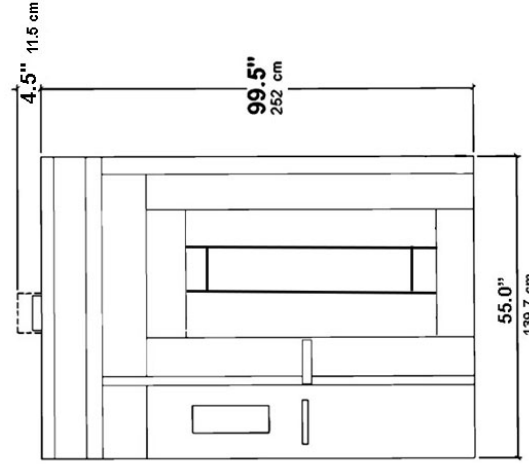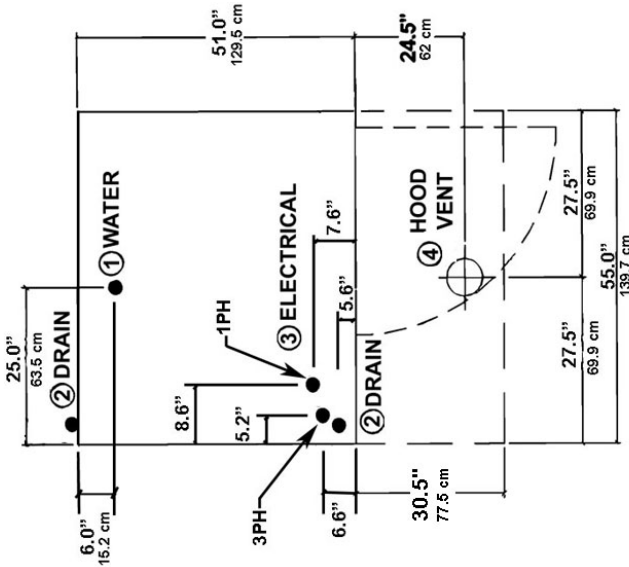

SIDE VIEW

TOP VIEW

FRONT VIEW

18308

**HBA2 & BXA2 ELECTRIC OVEN
SPECIFICATIONS
UPDATE OCTOBER 2008**

① **WATER:**

1/2" NPT, 30-75 PSI cold water required, customer to install in-line filter, shut off valve and line strainer.

② **DRAIN:**

2 3/4" (front) or 5 1/2" (rear) connection A.F.F. (See notes). Route to air-gap drain. Do not slope drain upwards. Plug the drain connection that is not in use. Kit provided to extend drain to either side of oven.

Rear Drain: 3/4" NPTF

Front Drain: 3/8" NPTF

③ **ELECTRICAL:**

Two supplies required.

120/60/1 20 AMP dedicated circuit required and one of the following voltage options.

Heating Circuit: KW rating in following chart per supply voltage.

Blower Motor: 1 1/2 H.P.

Voltage	Full Load AMPS	Heaters Rating
208/60/3	146.4 AMPS	51.3 KW
208-240/60/3	111.2 - 127.2 AMPS	38.5 - 51.3KW
440-480/60/3	59.1 - 64.1 AMPS	43 - 51.3 KW

④ **HOOD VENT:**

10"DIA connection collar and optional 10" to 8" DIA duct adapter provided. Customer to supply duct and ventilator fan per state and local codes. Oven provided rely with max. 6 amp 1/3 H.P. @ 120V output for fan operation. If larger, use oven relay to control additional separately powered contactor / relay for hood fan. Customer to supply duct and ventilator fan per state and local codes. Chamber vents are factory ducted to this integral hood. 750 CFM required, 0.4" W.C. static pressure drop through standard Type 2 hood (steam & heat). 900 CFM required, 0.6" W.C. static pressure drop through grease Type 1 hood (grease filters). Hood is UL710 Listed when grease filters are installed. Type B gas vent can be used except when bake products are grease laden.

NOTES:

1. A.F.F.: Above finished floor.
2. Customer responsible to finish and install all utilities to and from oven.
3. All services must comply with all Federal, State and Local codes.
4. **NOTICE** To reduce the risk of fire, the appliance is to be installed on non-combustible surface only, with no combustible material within 18 inches above the appliance. The appliance is to be mounted on floors of non-combustible construction with non-combustible flooring and surface finish and with no combustible material against the underside, or on non-combustible slabs or arches having no combustible material against the underside. Such construction shall in all cases extend not less than 12 inches beyond the equipment on all sides.

5. The floor must be of non-combustible material, and must be level with surrounding area with a maximum slope of 1/8" per foot up to 3/4" maximum in all directions. Floor anchors require a minimum 1" thick solid floor substrate.
6. Oven is UL/C-UL classified and CSA (AGA/CGA) approved for 0" clearance on the side and rear walls. Unit required 1" to 4" clearance for rear drain connection.
7. Top of oven requires a minimum of 24" for service accessibility.
8. Customer responsible to install flue piping. Flue must be vented outside of building.
9. Manufacturer reserves the right to make changes in sizes and specifications.

Export Ratings

① **WATER:**

1/2" NPT, 2.1-5.2 Bar cold water required, customer to install in-line filter, shut off valve and line strainer. Flow rate of 8 l/min..

③ **ELECTRICAL:**

Single supply connection provided- 380V/3ph/50Hz, 400V/3ph/50Hz, or 415V/3ph/50Hz – 6 A circuit required.

1 kVa Transformer supplied for control and operation voltage of 110V. This is a multifunction transformer, so output voltage should be verified before operation.

Oven fan (1.1kW) operates @ 380-415V 3ph 50 Hz 2.4- 2.2A

Voltage	Full Load AMPS	Heaters Rating
380V	70 AMPS	43.1 kW
400V	73 AMPS	47.1 kW
415V	76 AMPS	51.3 kW

④ **HOOD VENT:**

25.4 cm DIA. Connection collar. Customer is to supply duct and ventilator fan per federal and/or local codes. Chamber vent (steam) and combustion exhaust are discharged into the hood. An air proving switch is factory installed and integrated with heating system operation. If proper ventilation is not provided, heating system will not operate. Oven provides a relay to activate a customer supplied and powered contactor/relay, so that when oven is powered up external fan will operate. The hood requires a minimum of 25.5 m³/min for safe operation. For fan calculation purposes you should assume 0.15 kPa resistance through the hood. Grease filters (optional) may be installed in the hood instead of standard baffle.

HBA2 & BXA2 ELECTRIC OVEN


SINGLE POINT VENTING SHOWN

POWERED ROOF VENTILATOR SUPPLIED AND INSTALLED BY OTHERS




8" MINIMUM VENT PIPE SUPPLIED, SIZED & INSTALLED BY OTHERS

SINGLE FLUE DUCT FOR SINGLE POINT VENTING

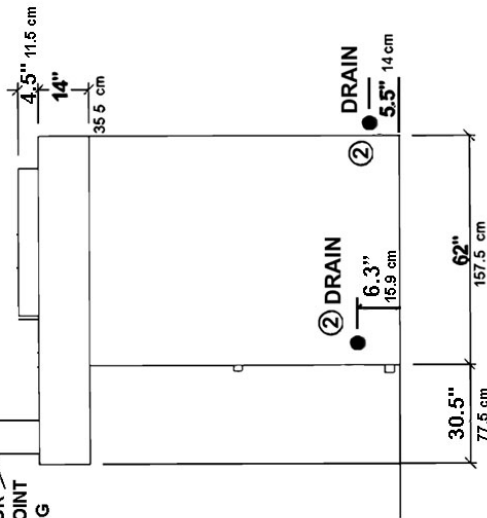


SIDE VIEW

*Drawings shown are NOT to scale

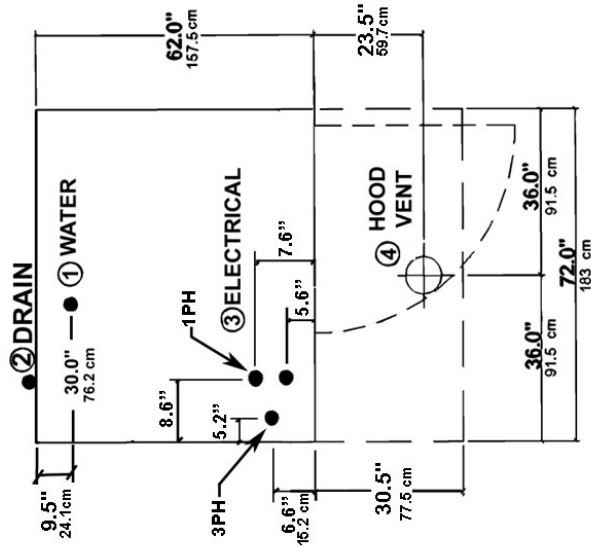

TOP VIEW

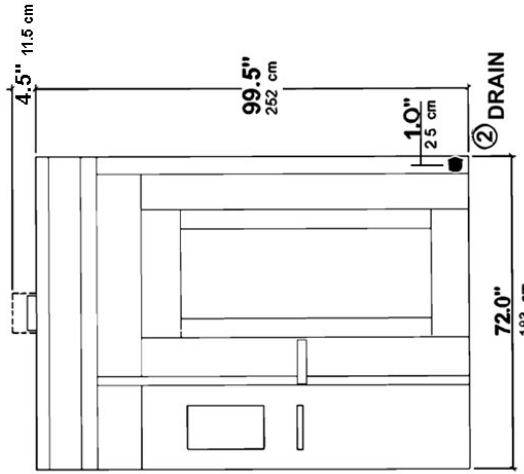

FRONT VIEW

18309

INSTALLING OVEN


This manual is written for a new installation where you can position the oven sections while the oven is on the shipping skids. Some installations may require that oven sections be taken off the skids and manipulated through doorways prior to positioning sections for installation.

Prior to installing the oven, check facilities floor for being level within a maximum of 1/8" per foot up to 3/4" in all directions using the laser level technique to determine if oven will need to be shimmed. Also check facilities floor area at the threshold and door swing opening location to determine if facilities floor will need to be reworked.


OVEN SECTIONS UPDATED OCTOBER 2008

For HBA1G & BXA1G oven shipped in sections, remove all assemblies except oven sections from skids prior to lifting oven sections.

1. Place the oven sections as close to the final position as possible, allowing enough room to work, with the sections positioned for lifting.
 - A. Check for ceiling clearance. The oven is tallest when it is approximately 45 degrees to the floor during the raising process. If oven section has been turned on its narrow side in order to navigate through a doorway, turn the oven section back to the shipping position prior to raising.
 - B. Remove the bottom hold down brackets from both pallets, but do not remove oven sections from pallets.
2. Lift the oven sections upright, using the hoist technique. Both oven sections should be as close as possible, but not touching.

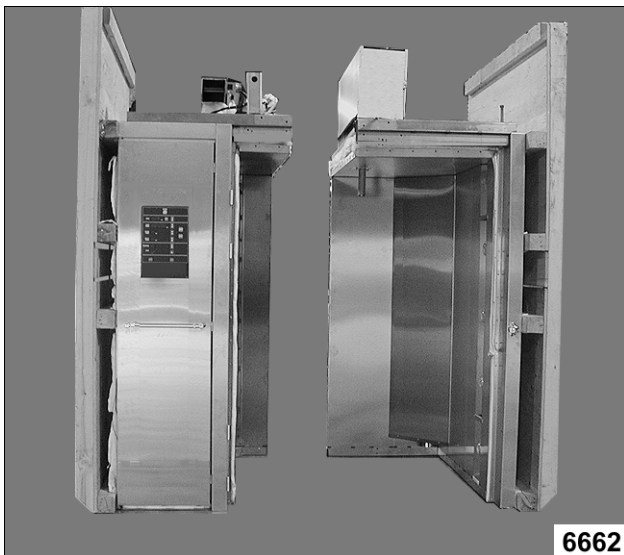


3. Remove the J bolts securing the skid to the oven section.

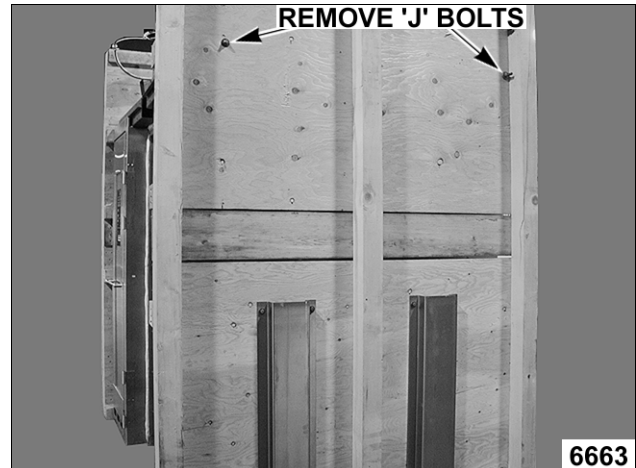


⚠ WARNING The z bracket location on the bottom of the skid must be disengaged before lowering the skid. If engaged when lowering the skid, the oven section could fall.

- A. Pull the bottom of the skid away from the oven to clear the Z channel.

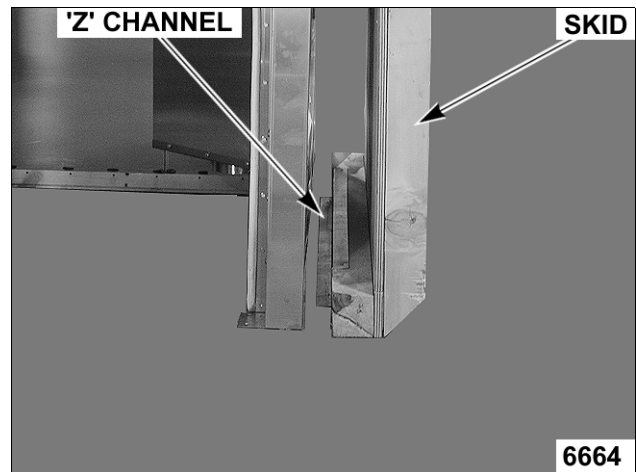


- B. Lower the skid to the floor making sure that the Z channel does not scratch the oven side.
- C. Perform the same procedure for other oven section.
4. Remove the header support bracket.
 - A. Remove the two screws from hinge side of bracket.

- B. Move bracket and reinstall the hinge screws.
- C. Remove the single screw from the header side of bracket and discard screw and bracket.

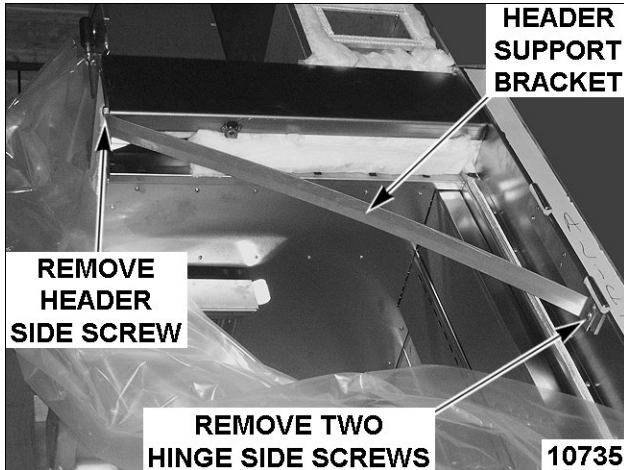

NOTE: If you have trouble aligning the holes in the rear frame, you may have to manipulate the oven sections using the levelers or by prying. Use care not to damage building floor.

- 5. Slide the oven sections together.
- NOTE:** Ensure ceiling offset flange slides under opposite oven section ceiling.
- 6. Install 1/2-13 x 1-1/2" bolt with lock washer and nut in rear frame connection points of oven, both top and bottom.

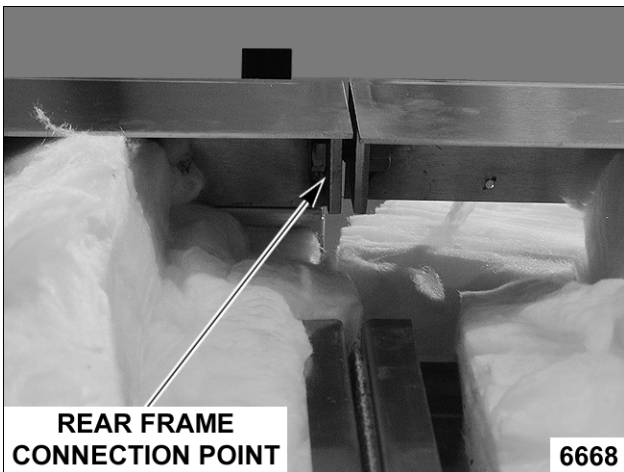

NOTE: You may have to move oven front corners to make the holes in the outer header align with the holes in the oven.

- 7. Install 1/2-13 x 1-1/2" bolts with lock washer and nut in ovens outer header and 5/16-18 x 1" gimlet screws in inner header connections.




8. Install 5/16-18 X1" gimlet screws in the flanges of the mating sections around the oven perimeter, both top and back (23 places for Single Rack oven and 26 places for double rack oven).


NOTE: Start a few screws at several locations around the flange to help align the flange holes.

9. Install all flange mating section screws and insure mating surfaces are flush in the interior of the oven before tightening the screws.

NOTE: If you have trouble aligning the mating holes in the flange, you may have to manipulate the oven sections using the levelers or by prying.

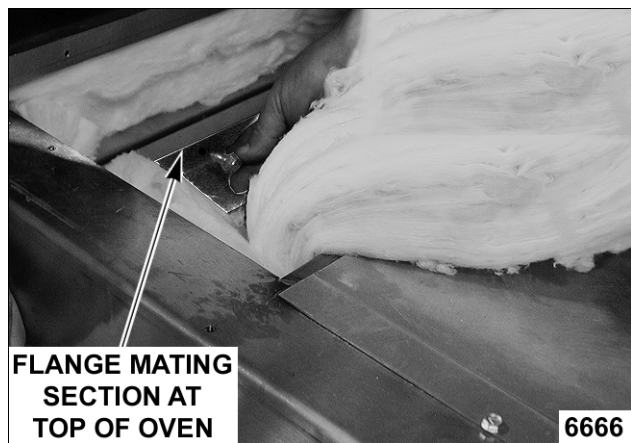

10. For HBA1 & BXA1 ovens only: Install lifter assembly onto top of oven.
 - A. Install rotator assembly onto lifter assembly.

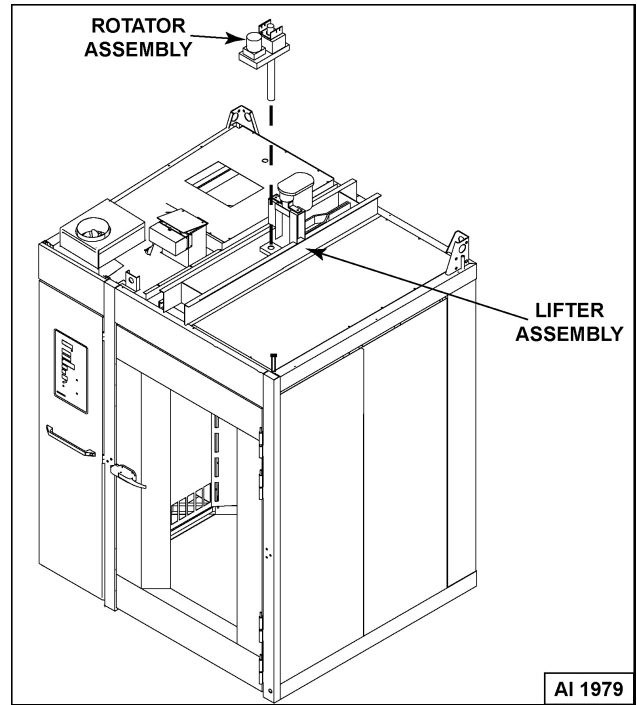

11. Install insulation behind outer header.




12. Install the header trim with #10 X 3/4" screws loose.




13. Fold both door gasket ends behind the upper door gasket trim.



- A. Install upper door gasket trim behind header trim and secure header trim screws.

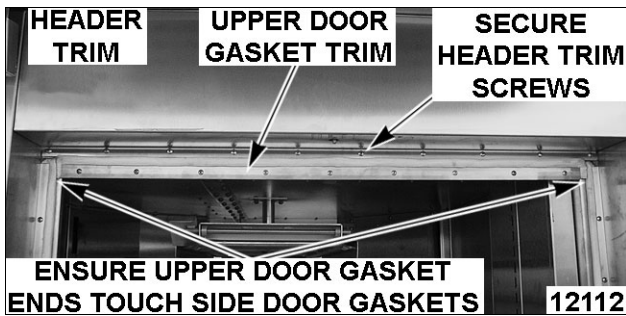

14. Install 1/4-20 X 3/4" hex head serrated flange screws onto ceiling offset inside baking compartment.

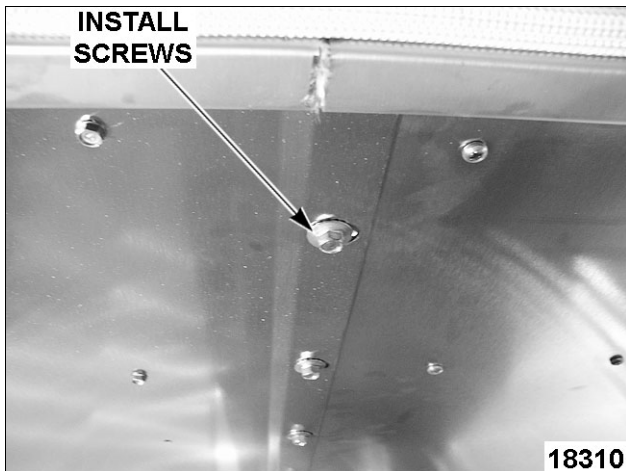


15. Install insulation pieces.
- A. On the rear seam, bend the copper studs so they are 90 degrees to the oven wall. When installing the insulation, make sure the insulation is held by these studs.



- B. Narrow insulation pieces fit between the existing insulation next to oven, 2 at the back and 3 on the top.
- C. Install insulation over the top and back seams of the oven sections.



- 1) At the rear wall, place the push nuts over the copper studs to secure the insulation.


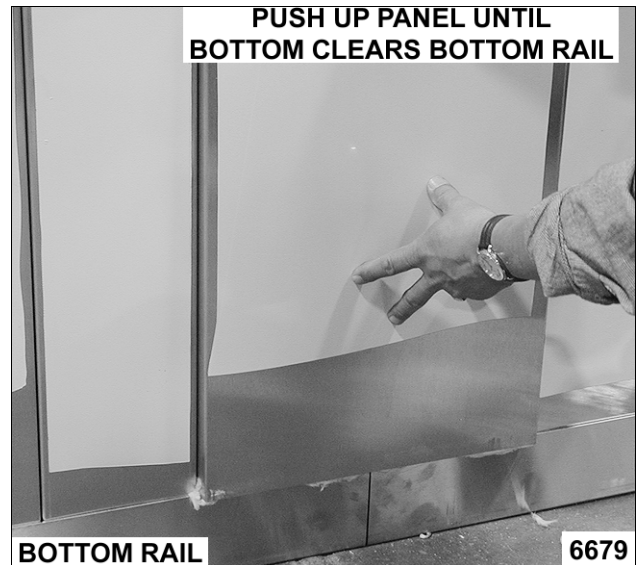


- C. Make sure that the panel is behind the rail of the lower frame and will rest against the stop when lowered into position.
- D. Push the panel down against the stop.

16. Install rear cover panel.


NOTE: This panel will also have a layer of insulation.

- A. Start the top of the panel behind the top rail of the upper frame.

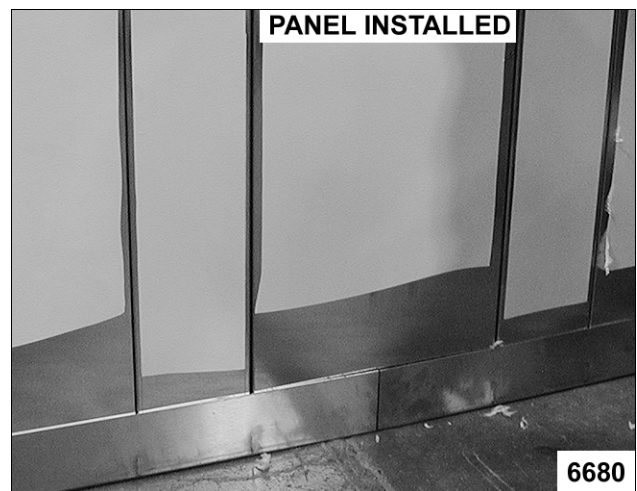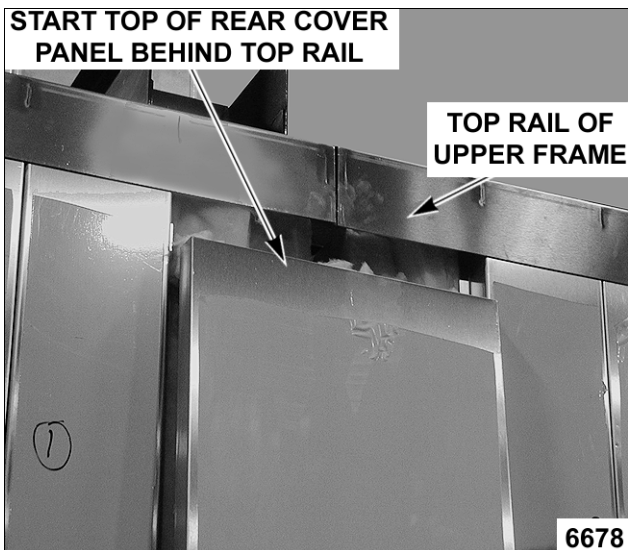

- B. Push the panel up until the bottom of the panel clears the bottom rail of the oven section frame.


- 17. Connect rear drain if required.
 - A. Using materials from provided drain kit (double rack ovens only), route the drain to either side of oven.
 - B. Ensure drain slopes downward 1/4" per ft.
- 18. Install ceiling cover with #10 Tek screws over the ceiling channel. Make sure the insulation is in place.

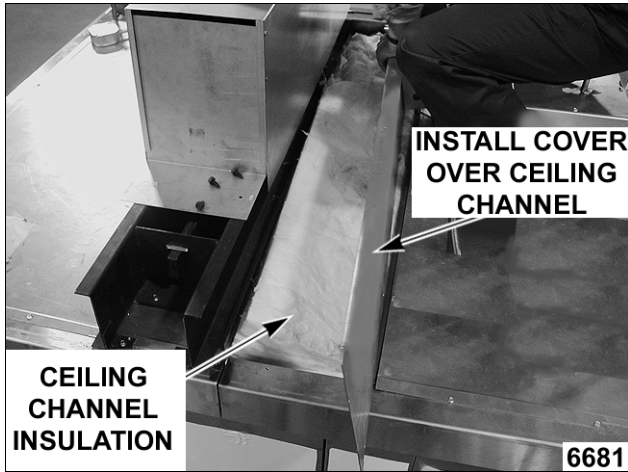


19. Remove raceway cover to access connection plugs for rack rotation and rack lift. Connect plugs together and install raceway to top of oven.

NOTE: Gas ovens will not have raceway, but conduit directly to component. Electric double rack ovens will have an additional cover to be installed over exposed wiring.


Gas Ovens

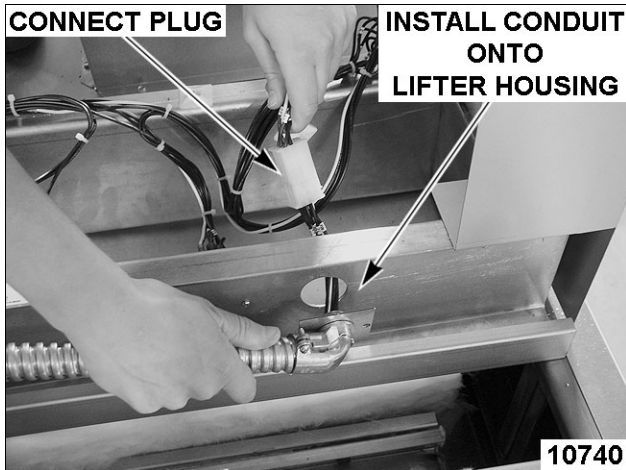

Electric Ovens

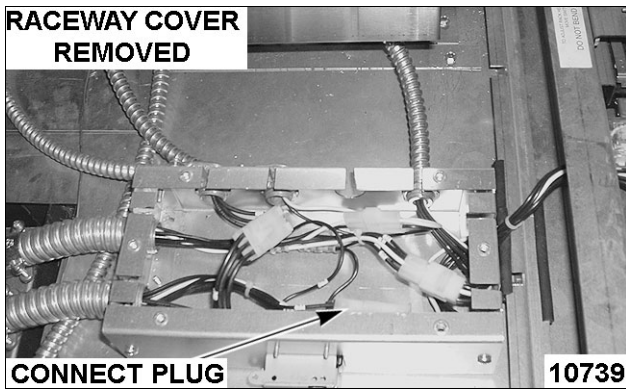

Electric Ovens

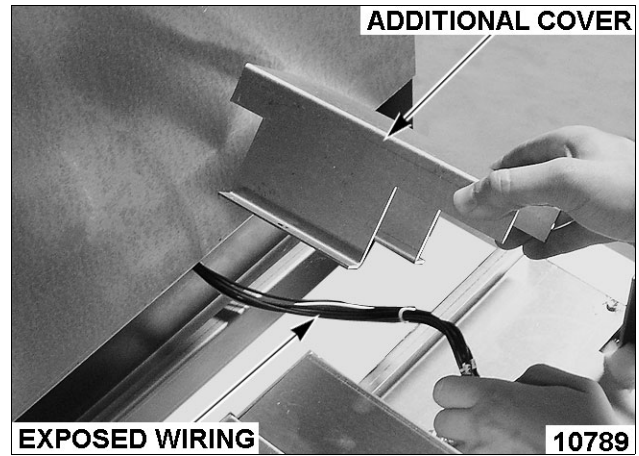

20. Remove right cover from lift assembly and insert door switch plunger through tube located next to the door switches.

21. Remove protective plastic from rear and sides of the oven that won't be accessible once the oven is in place.


NOTE: Do not damage building floor while installing dolly wheel or using front levelers.

22. Remove bolts from the left bottom door jamb and install the dolly wheel.




NOTE: You may have to use the front levelers to raise the front of the oven to install the dolly wheel. Use care not to damage building floor.

- A. Raise the front oven levelers so the weight of the oven is on the dolly wheel.

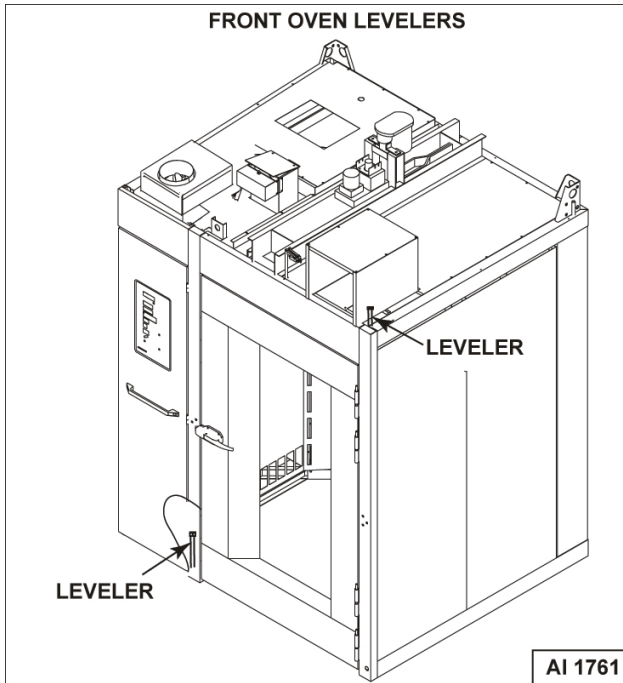

- B. Lower the rear wheels to raise the back of the oven from touching the floor.

NOTE: Raising the rear of the oven too much can cause the front of the oven to contact the floor.

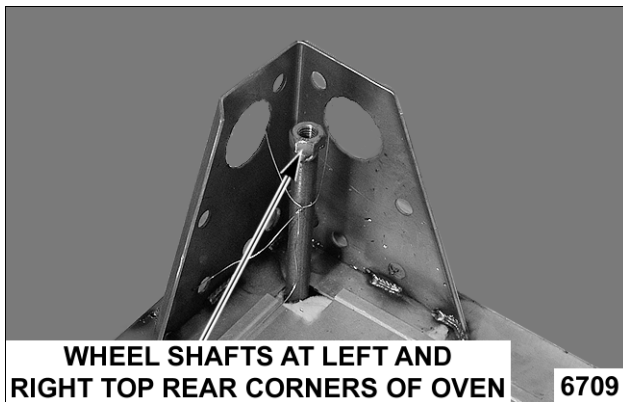

23. Move the oven into the final position before lowering.
24. Level the oven by using the four levelers, place shim(s) per the height determined by the laser level technique.


NOTE: Review HOST course for laser level technique.

- A. Temporarily position the threshold in place.
- B. Verify oven to be level front to back and side to side.

NOTE: If shims are required to level the oven at the front right corner, shims(s) will need to be placed on top of threshold underneath the door jamb.

NOTE: If shims are required to level the oven at the rear corners, place shim(s) in front of the back wheels. If the rear of the oven is not accessible, place shims under heat exchanger floor and inner wall base angle.

NOTE: After oven is leveled and shimmed, raise the levelers to take the oven weight off all the levelers.

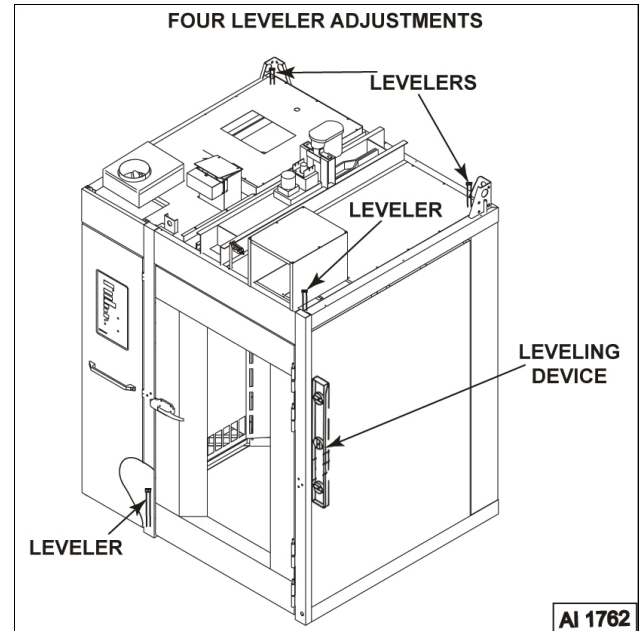

25. Raise the back wheels to lower the oven. Weight of oven should be completely off back wheels.

26. Remove the dolly wheel and replace screws.


NOTE: Retain the dolly wheel for future oven installations.

27. Place threshold into door jamb.


NOTE: Do not anchor threshold at this time.

28. Verify door opening is square.

- A. Measure diagonal 'X' from top right innermost hinge screw to the bottom innermost hinge screw on the left door jamb.

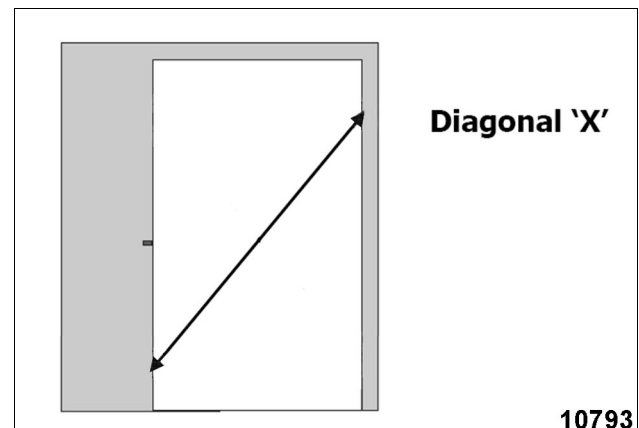


- B. Measure diagonal 'Y' from the top left innermost hinge screw to the bottom innermost hinge screw on the right door jamb.

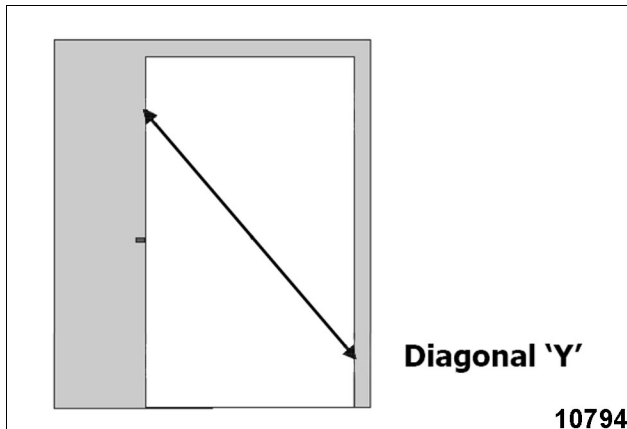


- C. If diagonal measurements are not within 1/8" of each other add additional shims as needed.

- 1) If diagonal 'Y' measurement is greater than diagonal 'X' measurement add shims under the right front door jamb. Place shims on top of threshold underneath the door jamb.

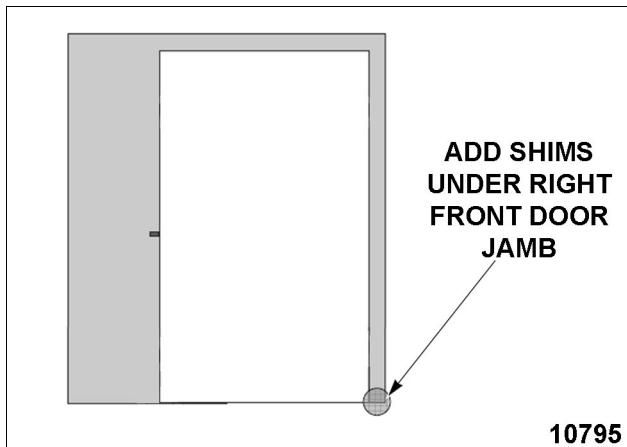

- 2) If diagonal 'X' measurement is greater than diagonal 'Y' measurement add shims under the left front door jamb.

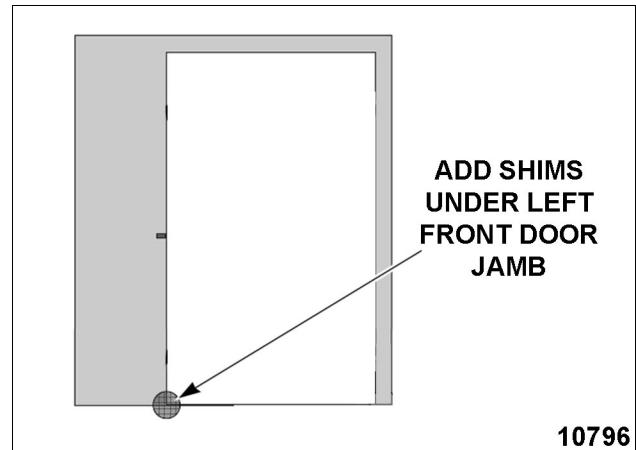

- D. Repeat procedure until diagonal measurements are within 1/8" of each other.

29. Install the door.

- A. Position the door at 90 degrees to the oven near the door opening.

NOTICE Do not lift the door too high, it will hit the hood.

- B. Use a J bar to lift the door from center bottom.

- C. Position the door over the hinges and then lower onto the hinge pins.

30. With the door open, visually check if door swings towards oven (closed position) on its own.

- A. If door swings towards oven, add shims to back corners of oven until door stops swinging on its own.

31. Check door rod for proper operation and adjust plunger as needed.

32. Remove threshold from oven.



**FLOOR / THRESHOLD
UPDATED OCTOBER 2008**

1. Caulk around baking compartment to facility floor seam.



2. Run a bead of red RTV silicone on the entire outer edge of both floor panels.
3. Install floor panel without offset. Edge goes up.
4. Run two beads of red RTV silicone on the flange of floor panel without offset.
5. Install the floor panel with the offset. The floor panel with offset fits over the floor panel without offset.

NOTE: Single rack oven have a one piece floor. Right front corner of oven may need to be lifted for floor clearance when installing a one piece floor.

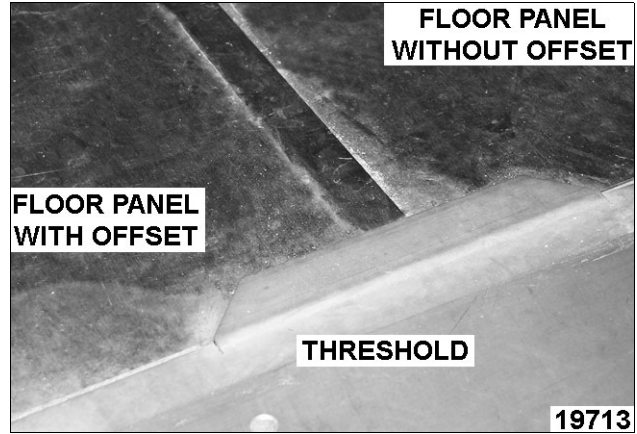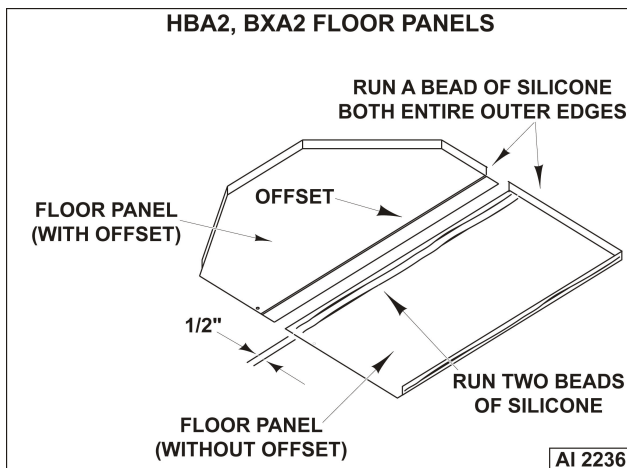


6. Raise front of oven with front levelers for threshold clearance.
7. Install threshold under door jamb.


NOTE: Use a hammer and 2X4 to tap threshold against oven floor. A 1/8" gap between oven floor and threshold is acceptable.

NOTE: If shims were required to level oven and square the door jamb at the front right corner, place shim(s) on top of threshold underneath the door jamb.

8. Lower front of oven with front levelers. Raise the front levelers to take the oven weight off the levelers.
9. Install floor trim. Wait until later in the procedure to tighten screws.
10. Install a shim between outer flange of threshold and door jamb, as needed.

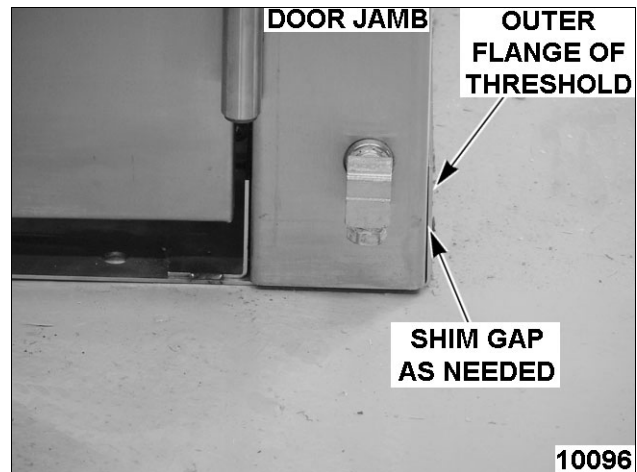

11. Drill & tap into door jamb at threshold clearance holes.
 - A. Secure threshold to door jamb with 10-32 X 1/2" screws, secure left side first.

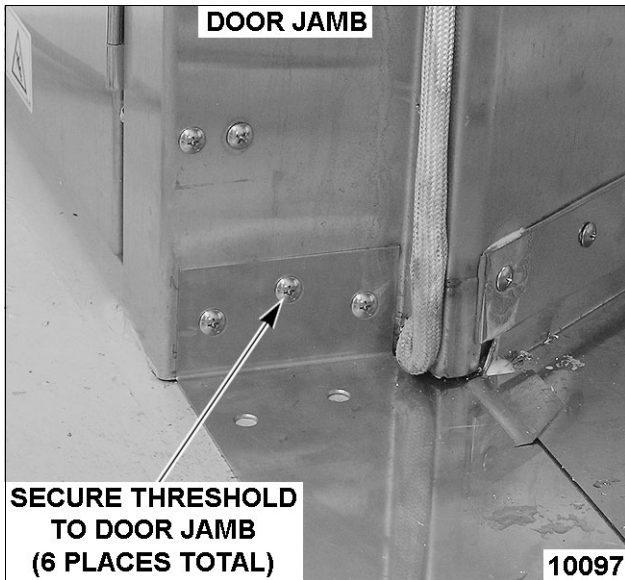


12. Anchor threshold to facility floor.



13. Tighten floor trim screws.

14. Caulk gap between oven floor and threshold with gray silicone.

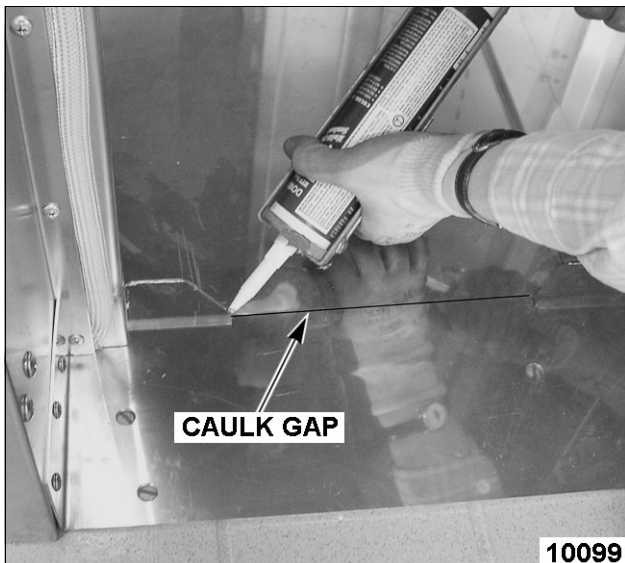


15. Caulk door jamb gaps with gray RTV silicone.




STEAM SYSTEM UPDATED OCTOBER 2008


1. Install the steam generator.
 - A. Remove the angled steamer panel and left baking compartment panel.
 - B. Remove both corner air guides from left oven wall.
 - C. Run a bead of red RTV silicone between drain pan and rear oven wall.
 - D. Start by setting the first steam ball assembly on the oven baking compartment floor (left rear corner).

NOTE: For HBA1 & BXA1 ovens, place first steam ball assembly on spacers to obtain correct height.

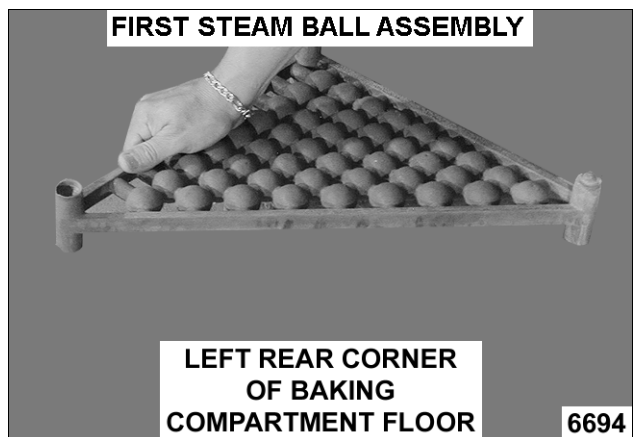

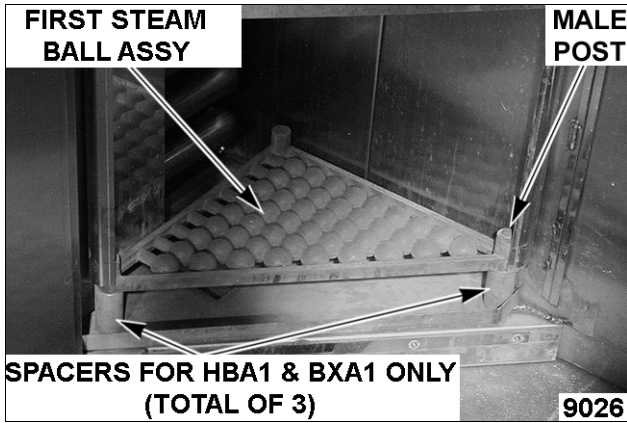


E. Install baffle with angled ledge on top of first steam ball assembly and the baffle supported by the back wall.

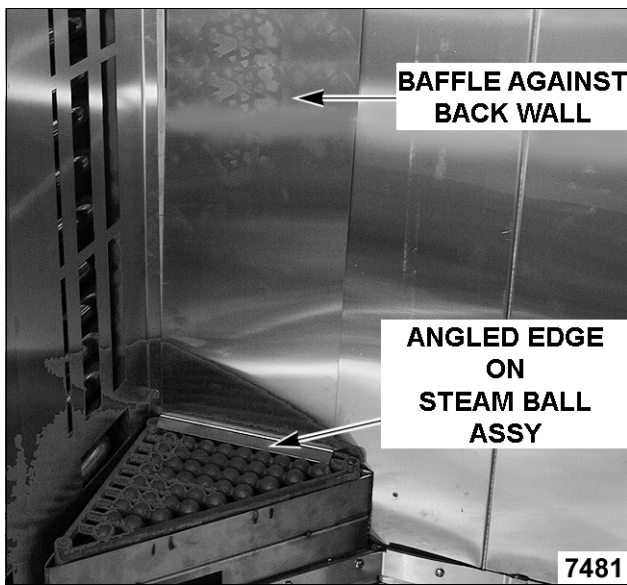


F. The next steam ball assembly must be put in place matching the female post with male post of previous assembly (total of 30 or 38 sections for HBA2 & BXA2 ovens, and total of 15 sections for HBA1 & BXA1 ovens to install).


NOTE: The assemblies will not set level if the sections are not oriented correctly.

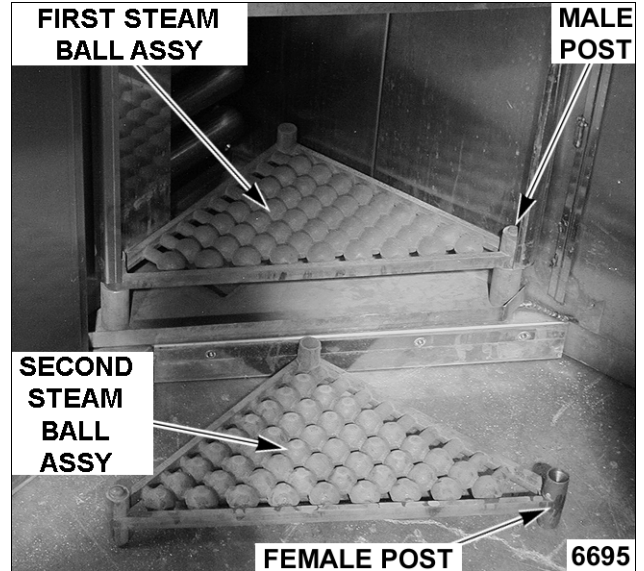

- G. After all assemblies are installed, install splash guards to edge of assemblies.
- H. Begin with the top assembly and install splash guards over front rim of the top, then every other assembly (total of 15 or 19 splash guards for HBA2 & BXA2 ovens, and total of 7 splash guards for HBA1 & BXA1 ovens).

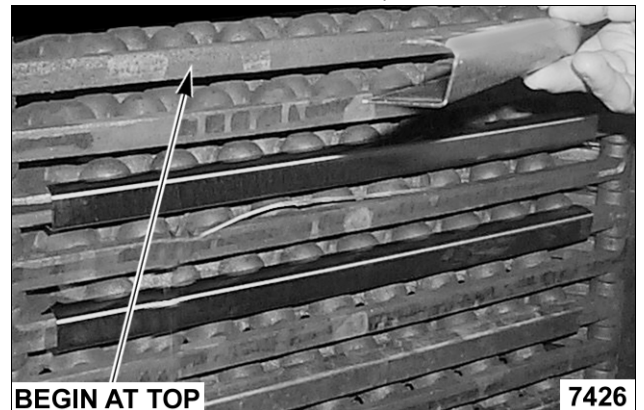


- I. Install both corner air guides.

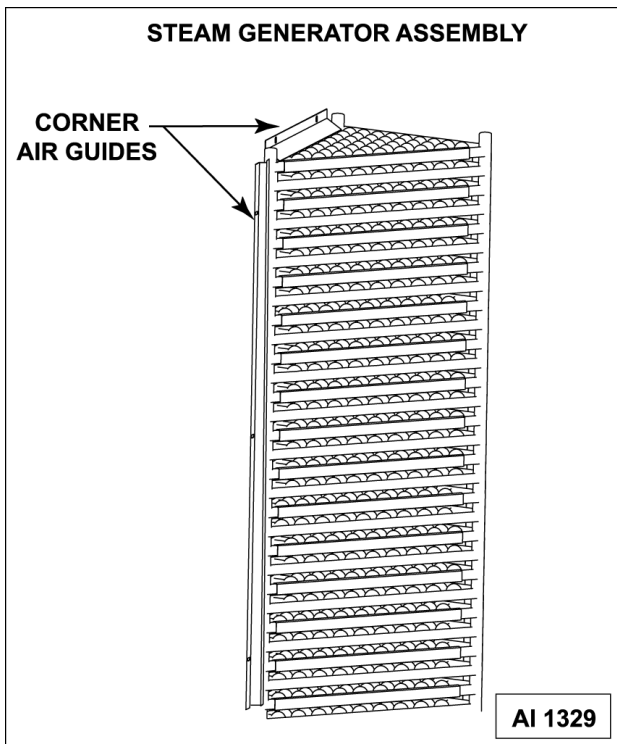

- L. Install left baking compartment panel.
 M. Align steam panel with screw inserts in baking compartment ceiling (left rear corner) and loosely secure panel to ceiling with 1/4-20 X 3/4" hex head serrated flange screws.



- J. Slide spray guard onto manifold. Connect manifold to coupler and align manifold with steam ball assemblies.

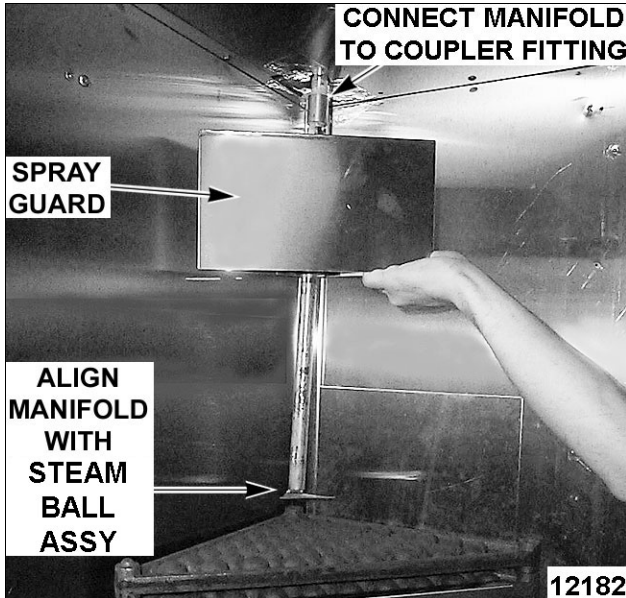

- N. Secure steam panel to rear baking compartment panel with 1/4-20 X 3/4" hex head serrated flange screws.



- K. Position spray guard to rest on top of steam ball assemblies.


- O. Secure steam panel to left baking compartment panel with 1/4-20 X 3/4" hex head serrated flange screws.



P. Tighten screws at top of steam panel.

DOOR ASSEMBLY UPDATED OCTOBER 2008

1. Observe the following:
 - A. With door closed, visually check door strike to door handle catch vertical alignment.
 - B. With the door closed, visually check gap around door jamb and edge of door.

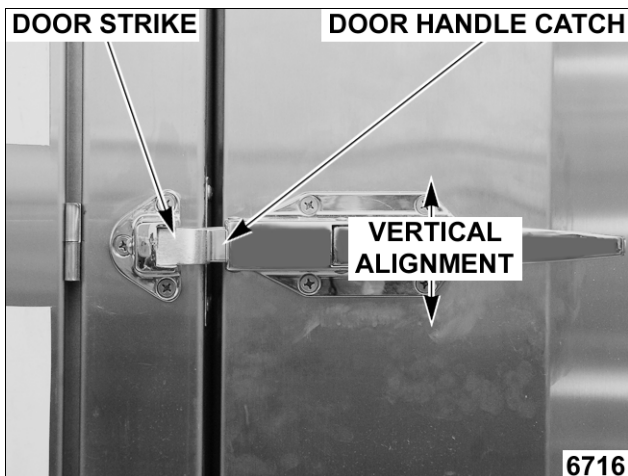

- C. Catch and strike should be vertically aligned within 3/16" of each other and gap should be equal on all sides and top.


NOTE: Obtaining the handle to strike is more important than an equal gap. However, if the door rubs against the jamb or drags the facility floor when opening, call Bakery Service Support.

NOTE: Door handle adjustment can assist in obtaining the handle to strike vertical alignment.

- D. Adjust door hinge inward or outward until door has an air tight seal against door gasket.

NOTE: Only rack ovens with wide view window in the loading door will have the adjustable door hinges.

NOTE: Remove a door handle shim if catch is too tight to release from strike.

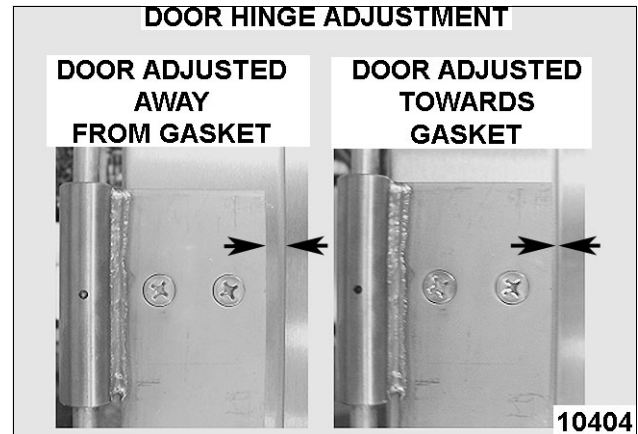


DOOR SWEEP UPDATED NOVEMBER 2006



1. Install door sweep.

NOTE: Door sweep shipped taped to the door assembly.

- A. Adjust the door sweep so the metal door seal plate is 3/16" from the highest point on the floor.

NOTE: Door sweep has slots for adjustment.

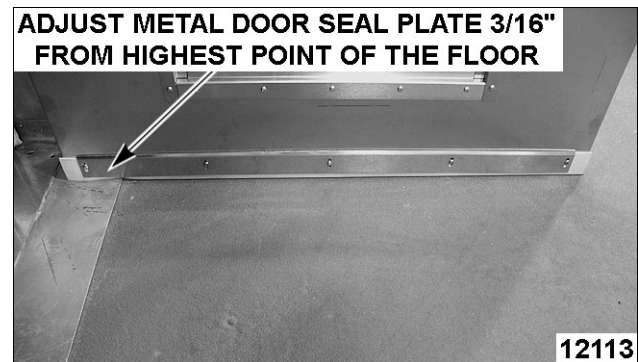

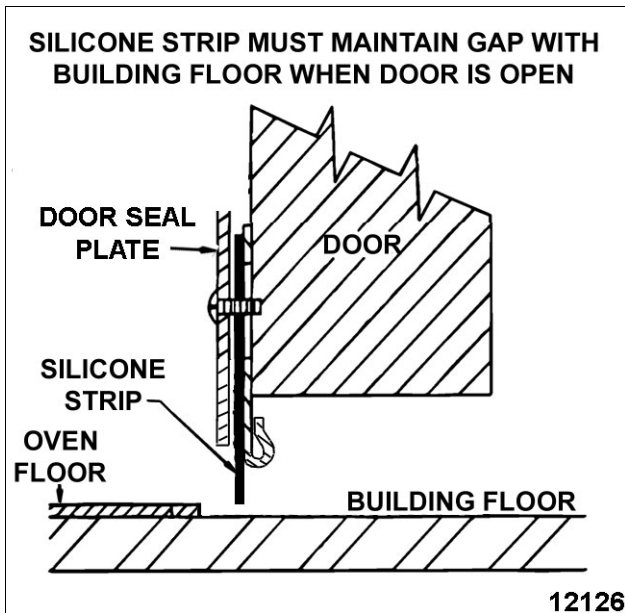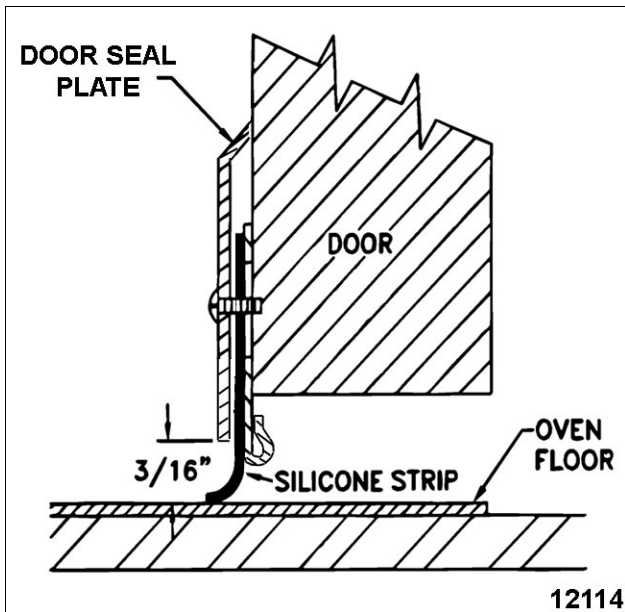


**RACK CARRIER
UPDATED OCTOBER 2008**

NOTICE Pushing up on lift shaft could damage the rotation switches.


1. Plumb carrier shaft.
 - A. Remove snap ring, shipping washer and protector sleeve from lift shaft. Discard shipping washer and protector sleeve.



- B. Plumb the carrier shaft. To plumb, loosen rotator housing clamp screws and adjust shaft until plumb. Tighten screws.

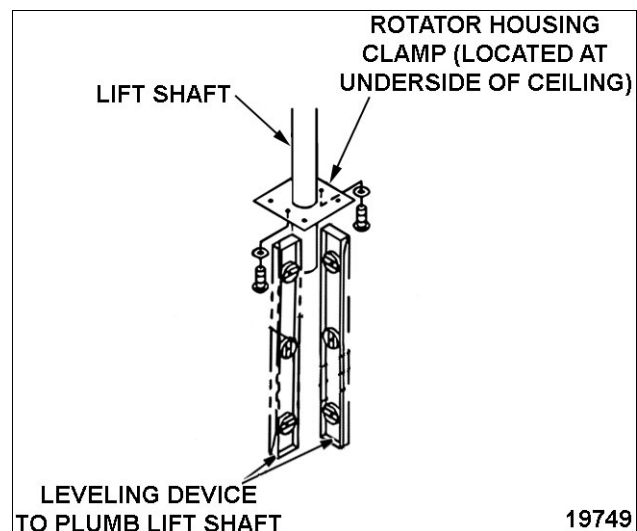




- C. Mark or scribe both of the unused holes in the rotator housing clamp.
- D. Remove the carrier from the lift shaft.
- E. Drill and tap both holes in rotator housing clamp. Install a 1/4-20 locking bolt, lock washer, & washer in each hole to lock down housing clamp.

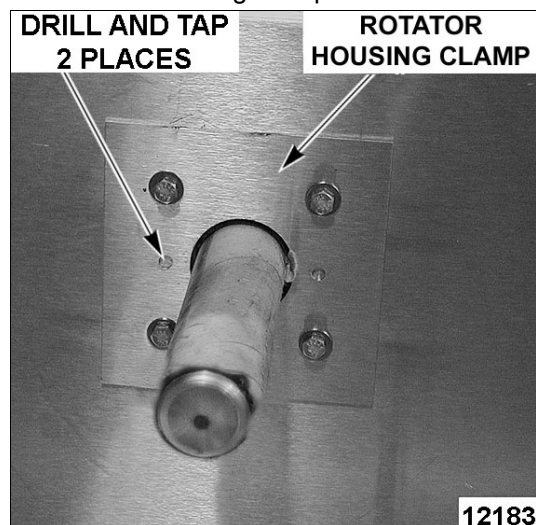

2. Install the rack carrier.

- A. Start the set screws into the carrier.

NOTICE Pushing up on lift shaft could damage the rotation switches.

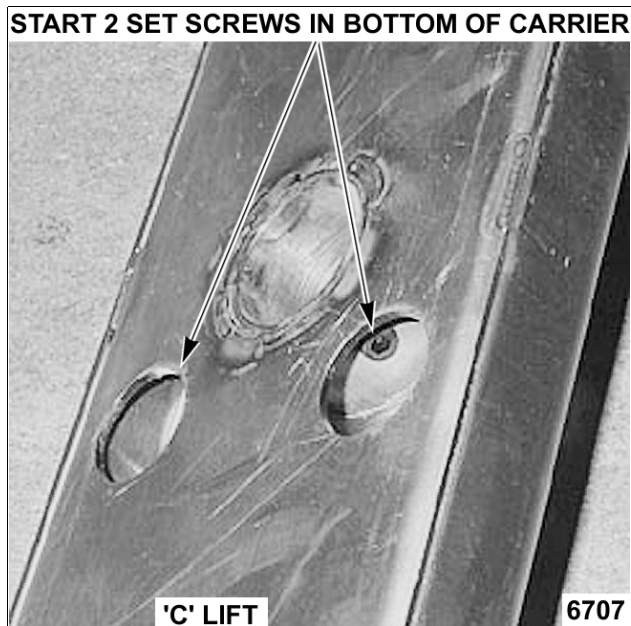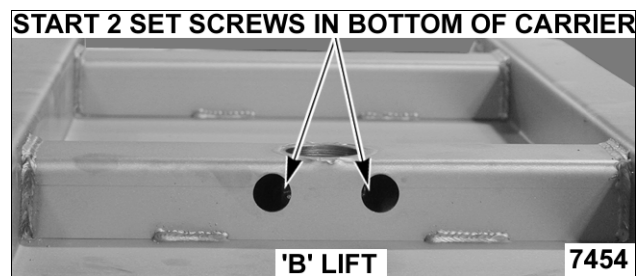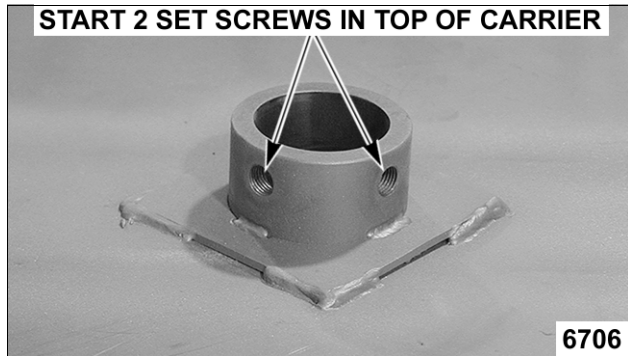

- B. Slide the carrier onto the lift mechanism shaft and install the washer and snap ring.

NOTE: Do Not allow the lift mechanism shaft to move upward. Hold shaft down from top of oven.

- C. Snug the set screws to hold the carrier in place.


3. Remove shipping tie from rotator assembly.



**HOOD ASSEMBLY
UPDATED NOVEMBER 2006**

1. Set hood on the floor in front of oven (if hood supplied). Remove only the necessary protective plastic from the hood.
 - A. Attach side panels with 10-32 screws 2 screw holes to the front, and ensure that the 3 screw holes are to the rear on each side panel.

NOTE: Notches in side panels to rear.

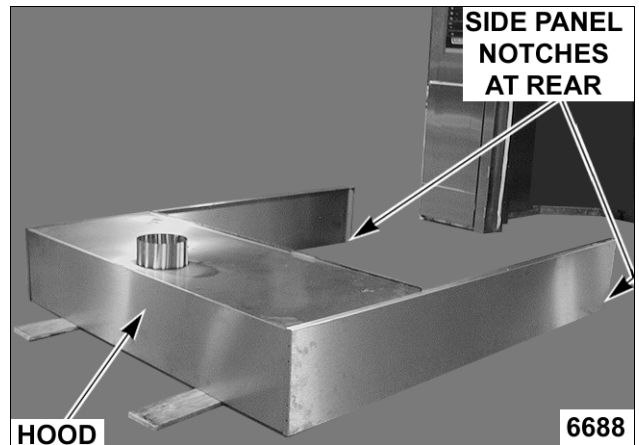


- B. Attach rear panel to each side panel with 10-32 X 3/4" screws.

NOTE: If clearance is a problem, don't install the rear panel, set hood with side panels in place first.


- C. Attach hood trim bracket on front top edge of oven.




- D. Set hood in place on top of oven. Secure side panels with #10 Tek screws into top of oven.

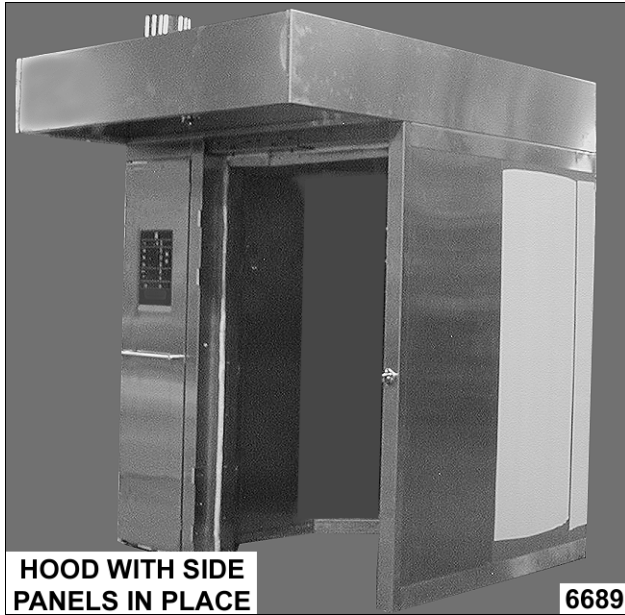

- E. If not attached in previous steps, attach rear panel of hood.
2. Connect the over pressure vent (Right side of hood) using SM-TH #10-3/4" screws.

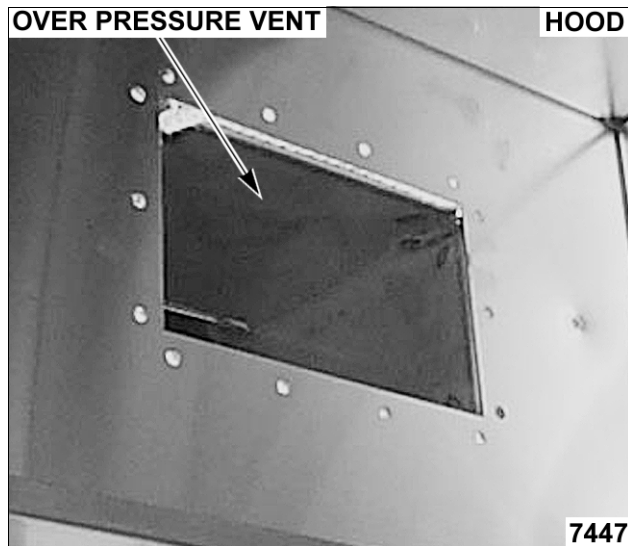

3. Customer is responsible for having a flue pipe connected to the center hood connection. See SPECIFICATIONS.

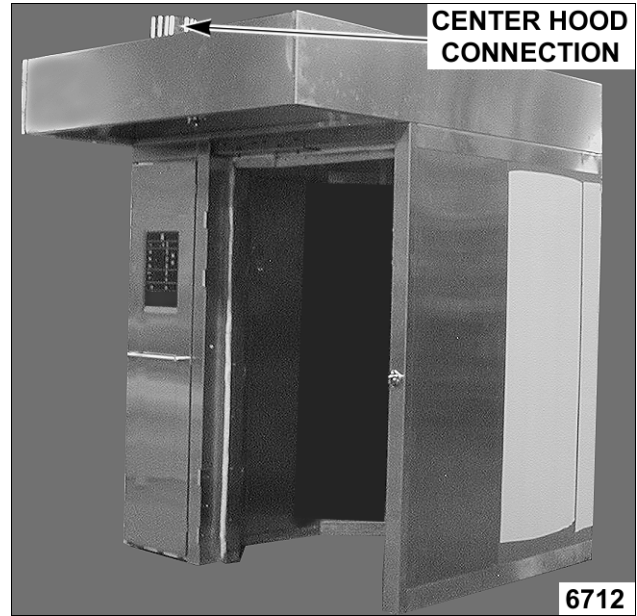


SINGLE POINT VENTING UPDATED OCTOBER 2008

Gas Ovens


1. Install exhaust collar and duct with 1/4-20 X 1/2" flanged head screws between draft inducer and hood.

NOTE: After aligning the duct use a Tek screw to hold duct in place with collar. Single Rack ovens have a hole located on top. Double Rack ovens have a hole located on bottom inside hood to secure before attaching baffle.

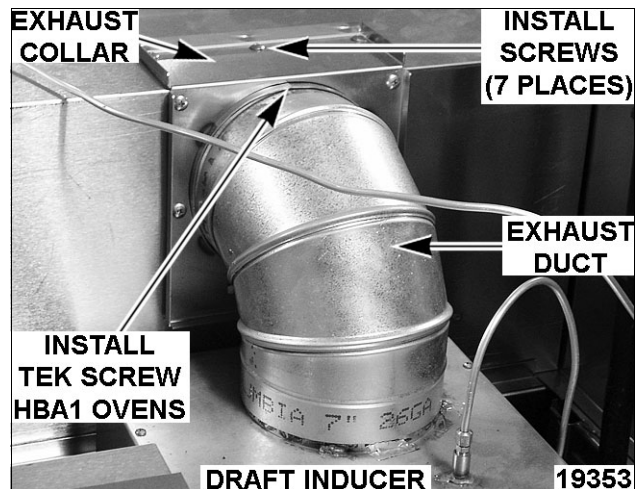

2. Seal exhaust duct connection seams at draft inducer and exhaust collar with aluminum duct tape.
3. Connect the hood exhaust tube at hood exhaust pressure switch. Switch location on side of control panel inside control compartment. Leave tubing coiled in control compartment.

NOTE: Defer connecting the tube to the flue connection until start up.

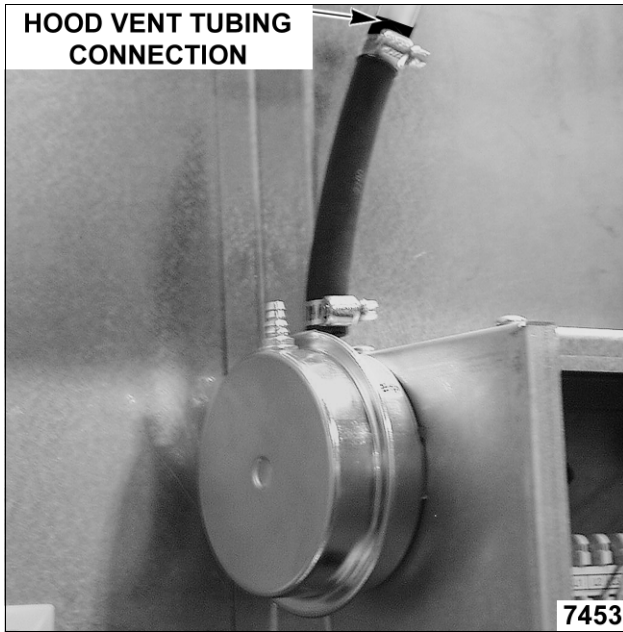


**CAULK OVEN
UPDATED NOVEMBER 2006**

1. Caulk around oven with gray RTV silicone.



**AIR BAFFLE & GREASE
FILTERS
UPDATED OCTOBER 2008**

1. Install perforated air baffle with 1/4-20 acorn nuts.

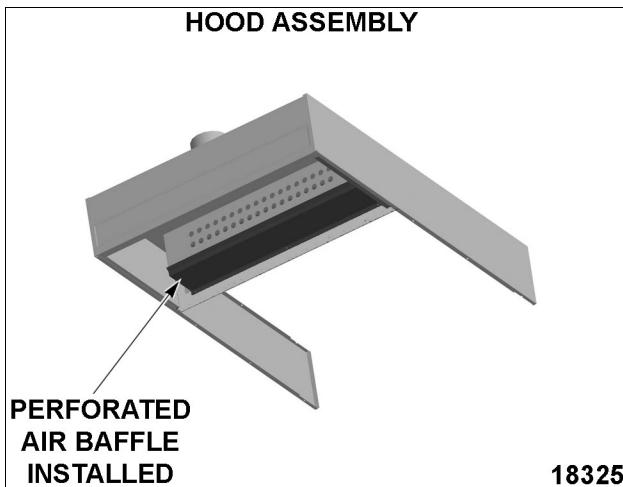

2. Install grease filters for type 1 hood or install plenum panel for type 2 hood.

**INITIAL START-UP
UPDATED OCTOBER 2008**



⚠ WARNING Disconnect the electrical power to the machine and follow lockout / tagout procedures. There may be multiple circuits. Be sure all circuits are disconnected.

NOTE: Remove all protective plastic sheeting from oven surfaces and wipe down to remove all fingerprints, prior to heating oven.

Power and Plumbing Connections


NOTE: All utility connections by others.

Verify the following:


- Gas supply line shut-off valve is in the OFF position (Gas Ovens Only).
- Gas supplied matches data plate and gas valve on oven (Gas Ovens Only).
- Gas valve is in the OFF position (Gas Ovens Only).

- Electrical connections have been made by electrician. 120V control, high voltage, and powered roof ventilator (external device).


MODELS HBA1G, BXA1G

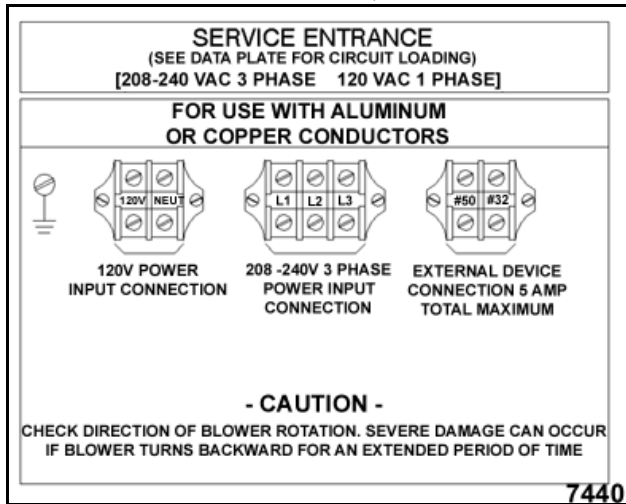


EXPORT MODELS HBA2G, BXA2G, HBA2E, BXA2E, HBA1G, BXA1G, HBA1E, & BXA1E

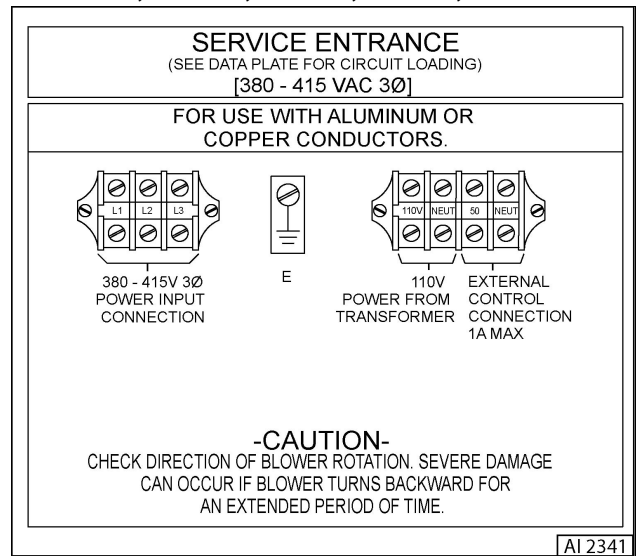

MODELS HBA2G, BXA2G, HBA2E, BXA2E, HBA1E, & BXA1E

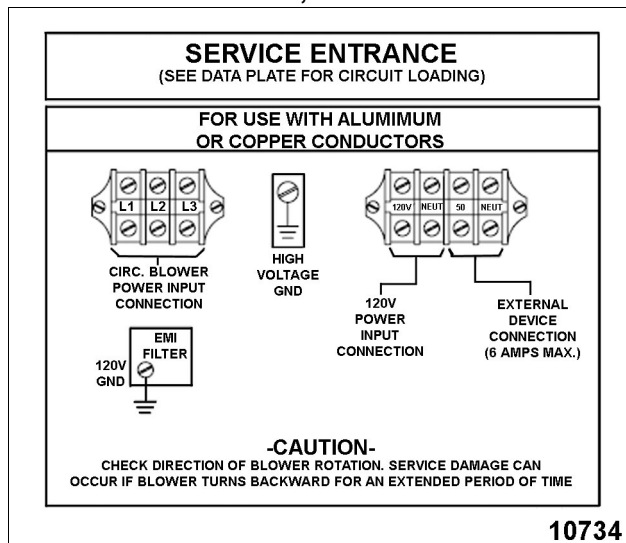

- Turn the under voltage and 3 phase heating element circuit breakers ON (Electric Oven Only).

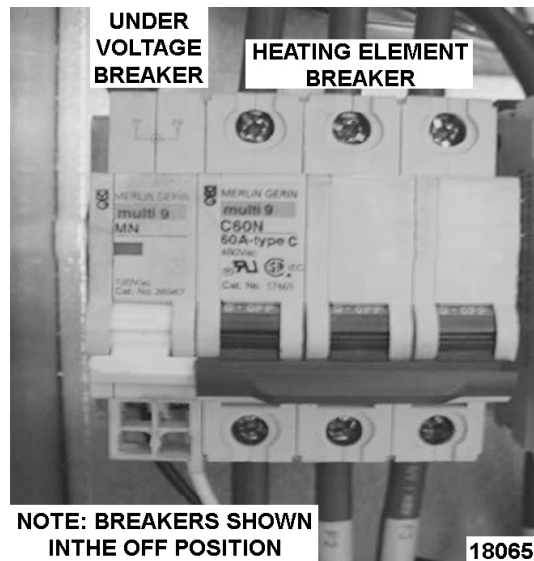


- Drain connected (with air gap) by plumber and opposite end of drain plugged.
- Water line is connect by plumber to flow restrictor located on top left rear corner of oven.
- Water shut off is installed in supply line.

NOTE: If a water filtration unit is installed in supply line, verify that a filter cartridge is installed in unit (performed by customer).

NOTE: Refer to oven installation checklist and complete during initial start-up.

1. Connect hood exhaust pressure switch tubing to hood exhaust connection.

NOTE: Make sure that there is a point in the tubing that is higher than flue pipe connection before tubing is routed to the hood exhaust pressure switch. This will help prevent the tube from clogging.

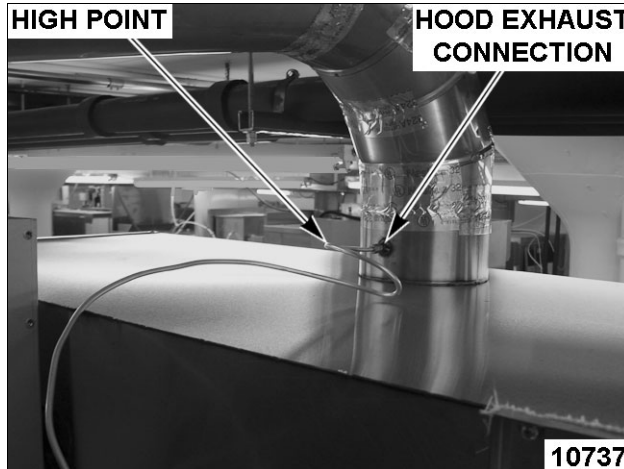

2. Close oven door.
3. Turn oven power ON. Use DOWN ARROW keys select lowest bake temperature so oven will not initiate a call for heat.
4. Verify operation of roof mounted ventilator.

NOTE: Verify plenum panel or grease filters installed.

- A. Remove vacuum line near hood exhaust pressure switch and connect incline manometer or equivalent.

- 1) Single-point venting (All Ovens) - Minimum reading should be:

RACK OVEN	STANDARD HOOD	GREASE HOOD
HBA1G & BXA1G	-0.4" W.C. -10.2 mm W.C. -0.10 kPa	-0.6" W.C. -15.2 mm W.C. -0.15 kPa
HBA1E & BXA1E	-0.4" W.C. -10.2 mm W.C. -0.10 kPa	-0.6" W.C. -15.2 mm W.C. -0.15 kPa
HBA2G & BXA2G	-0.4" W.C. -10.2 mm W.C. -0.10 kPa	-0.6" W.C. -15.2 mm W.C. -0.15 kPa
HBA2E & BXA2E	-0.4" W.C. -10.2 mm W.C. -0.10 kPa	-0.6 W.C. -15.2 mm W.C. -0.15 kPa

NOTE: Standard hood reading of -0.3" W.C., -7.6 mm W.C., or -0.08 kPa is acceptable if air volume is verified as noted in specifications.

- B. Disconnect manometer and reconnect vacuum line onto hood exhaust pressure switch.

5. Verify air louvers are set at factory settings.
6. Verify that rack carrier height will accept racks when loading and no drag when rack is in the raised position.


NOTE: Racks expand when hot. There should be approximately 1/2" clearance from bottom of carrier to top of rack. Check at least two racks to verify rack acceptance into carrier.

7. Verify that rack is level and rotating properly when door is closed; and rack stops in the correct loading position when door is opened.
8. Verify that baking compartment circulation blower is turning in direction indicated on motor. If not, disconnect power and switch any two of the three phase lead wires.
9. Verify steam system operation.
 - A. Set oven control to have 1 plus minutes on bake timer display.
 - B. Set steam time for 20 seconds.
 - C. Press START key to begin timer countdown.
 - 1) Water solenoid should energize.
 - D. Press STOP key to silence beeper.
10. Ignition Sequence Check (Gas Ovens Only).

NOTE: Ignition module makes three attempts to light burner before locking out.

NOTE: Remove power from ignition control module by turning main circuit breaker to oven off.

- A. Turn gas valve off to test ignition sequence check.
- B. Set oven to call for heat by pressing bake temperature display UP ARROW key, until HEAT ON LED illuminates.

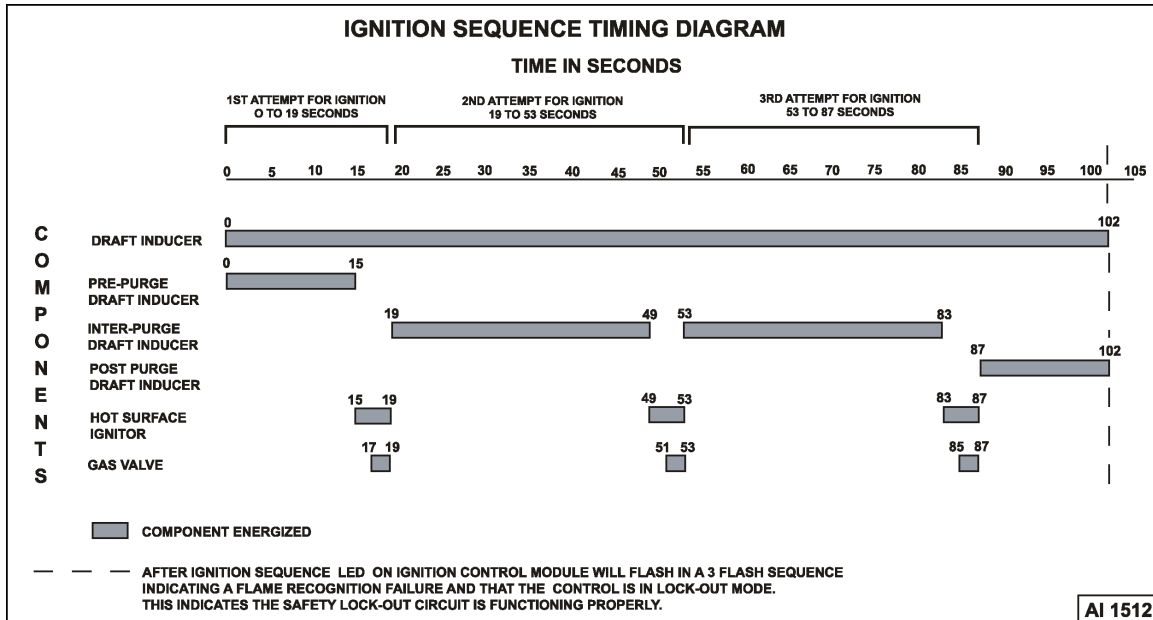

1st ATTEMPT

- A. Draft inducer energized for 15 seconds pre-purge cycle.
- B. Hot surface igniter glows indicating that it is energized.
- C. 2 seconds after igniter was energized, gas valve solenoid is energized.
- D. After igniter has been energized for 4 seconds, flame sensor will not have recognized a flame.
 - 1) Power is removed from igniter and gas valve.

2nd ATTEMPT

- E. 30 second inter-purge cycle.
- F. Hot surface igniter glows indicating that it is energized.
- G. 2 seconds after igniter was energized, gas valve solenoid is energized.
- H. After igniter has been energized for 4 seconds, flame sensor will not have recognized a flame.
 - 1) Power is removed from igniter and gas valve.

3rd ATTEMPT

- I. 30 second inter-purge cycle.
- J. Hot surface igniter glows indicating that it is energized.
- K. 2 seconds after igniter was energized, gas valve solenoid is energized.
- L. After igniter has been energized for 4 seconds, flame sensor will not have recognized a flame.
 - 1) Power is removed from igniter and gas valve.
- M. After three tries for ignition and the burner has not lit, there will be an additional 15 second purge time.
- N. LED on ignition control will flash in a 3 flash sequence indicating a flame recognition failure and that the control is in lock-out mode.
- O. This indicates the safety lock-out circuit is functioning properly.
- P. Open the door for 5 seconds will reset the ignition module.

8. Gas Pressure Adjustment (Gas Ovens Only).

- A. Connect a manometer or equivalent to inlet and outlet pressure taps on gas valve.
- B. Turn gas supply ON to oven and check for leaks between gas valve and supply line shut-off valve.
- C. Verify that the static line pressure to the oven does not exceed 14" W.C. (1/2 psig, 35.6 cm W.C., 3.5 kPa)

NOTE: If static line pressure exceeds 14" W.C. (1/2 psig, 35.6 cm W.C., 3.5 kPa) the customer must supply and install a line pressure regulator to drop the pressure below 14" W.C., 35.6 cm W.C., 3.5 kPa

- D. Turn gas valve ON.
- E. Purge the air from the gas supply line.
- F. Set the oven to call for heat.

NOTE: It may take several ignition attempts to light burner initial time.

- G. With oven burner flame established and with the burners lit for all other equipment that are common to supply line, check supply flow pressure.

GAS SUPPLY LINE PRESSURE

HBA1G & BXA1G		
	NATURAL GAS	PROPANE GAS
BTU/HR	180,000	180,000
W.C.	5.0 -10.0"	12.0 - 14.0"
kCAL/HR	45,400	45,400
cm W.C.	12.7 - 25.4	30.5 - 35.6
Mj/HR	190	190
kPa	1.25 - 2.50	3.00 - 3.50

HBA2G & BXA2G				
	NATURAL GAS		PROPANE GAS	
BTU/HR	300,000	350,000	300,000	350,000
W.C.	5.0-14.0"	6.0-14.0"	10.0"- 14.0"	12.0- 14.0"
kCAL/HR	75,600	88,200	75,600	88,200
cm W.C.	12.7 - 35.6	15.3 - 35.6	30.5 - 35.6	30.5 - 35.6
Mj/HR	317	370	317	370
kPa	1.25 - 3.50	1.50 - 3.50	2.50 - 3.50	3.00 - 3.50

- H. With a burner flame established, adjust manifold pressure as indicated on the oven data plate.


NOTE: Following chart is for reference only. If the manifold pressure must be adjusted to accommodate the installation altitude you must contact Bakery Product Support for a corrected data plate.

ALTITUDE CORRECTION CHART								
ELEVATION IN FT.	HBA1G / BXA1G		HBA1G / BXA1G		HBA2G / BXA2G		HBA2G / BXA2G	
	Natural Gas		Propane Gas		Natural Gas		Propane Gas	
	Orifice #53 Orifice Dia. 0.0595		Orifice #63 Orifice Dia. 0.037		Orifice #49 Orifice Dia. 0.073		Orifice #56 Orifice Dia. 0.046	
	Oven Rating BTU/Hr	Manifold Pressure "W.C.	Oven Rating BTU/Hr	Manifold Pressure "W.C.	Oven Rating BTU/Hr	Manifold Pressure "W.C.	Oven Rating BTU/Hr	Manifold Pressure "W.C.
0 (sea level)	180,000	3.5	180,000	10.0	300,000	3.0	300,000	8.0
3000	158,400	2.7	158,400	7.7	300,000	3.0	300,000	8.0
3500	154,800	2.6	154,800	7.3	300,000	3.0	300,000	8.0
4000	151,200	2.4	151,200	7.0	294,000	2.7	294,000	7.4
4500	147,600	2.3	147,600	6.7	287,000	2.6	287,000	7.1
5000	144,000	2.2	144,000	6.4	280,000	2.5	280,000	6.7
5500	140,400	2.1	140,400	6.0	273,000	2.4	273,000	6.4
6000	136,800	2.0	136,800	5.7	266,000	2.2	266,000	6.1
ORIFICE DIA. MUST CHANGE 6500 FT. ABOVE SEA LEVEL								
	Orifice #55 Orifice Dia. 0.052		Orifice #66 Orifice Dia. 0.033		Orifice #52 Orifice Dia. 0.0635		Orifice #60 Orifice Dia. 0.04	
6500	133,200	3.2	133,200	8.6	259,000	3.7	259,000	10.1
7000	129,600	3.1	129,600	8.1	252,000	3.5	252,000	9.5
7500	126,000	2.9	126,000	7.7	245,000	3.3	245,000	9.0
8000	122,400	2.7	122,400	7.3	238,000	3.1	238,000	8.5
8500	118,800	2.6	118,800	6.8	231,000	2.9	231,000	8.0
9000	115,200	2.4	115,200	6.4	224,000	2.8	224,000	7.5
9500	111,600	2.3	111,600	6.0	217,000	2.6	217,000	7.1
10,000	108,000	2.1	108,000	5.7	210,000	2.4	210,000	6.6

9. Initial heating of oven (All Ovens).
 - A. Press the VENT key to open baking chamber vent.
 - B. Leave loading door ajar approximately 2" to evacuate smoke and prevent tarnishing of oven interior, but not open far enough to prevent operation of oven.
 - C. Set the oven control baking temperature to 300°F (150°C.) and bake timer for 30 minutes.
 - D. After time elapses, press STOP key to silence beeper.
 - E. Fully open loading door to verify that baking compartment circulation blower de-energizes.
 - F. Set the oven control baking temperature to 400°F (200°C.) and bake timer for 30 minutes. Leave loading door ajar approximately 2".
 - G. After time elapses, silence the beeper and allow oven to heat for an additional 30 minutes with loading door closed.
10. Combustion analysis (Gas Ovens Only).
 - A. Allow oven to cool to 300°F (150°C.).

- B. Set oven temperature to 450°F (230°C.) and with burner flame established, insert combustion analyzer meter into air sampling hole and take combustion measurements O₂ and CO air free readings.


NOTE: Insert probe 8" into chamber.

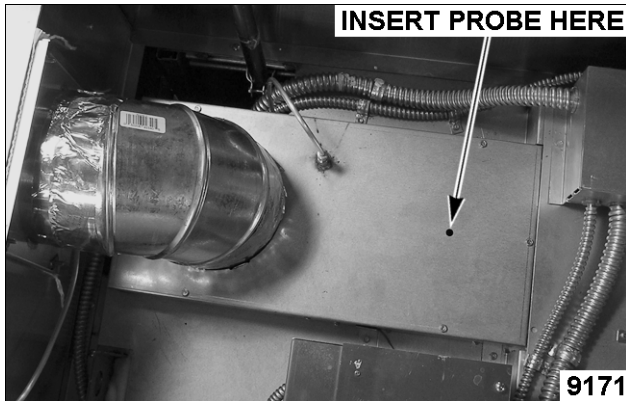

O ₂ : (Range 6% to 10%)
CO Air Free: Not to exceed 0.04% (400PPM)

- 1) If reading can not be obtained, adjust the draft inducer baffle and retest for combustion.

NOTE: If combustion readings still can not be obtained, contact Bakery Product Support.

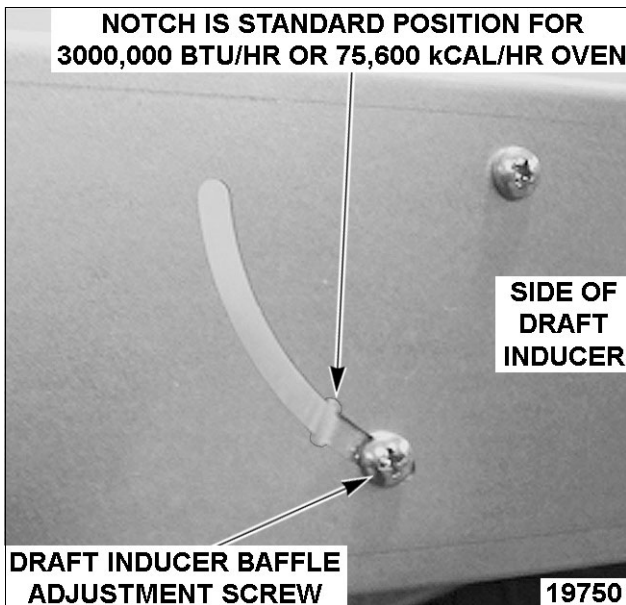

- 11. Press VENT keypad on oven control to close baking chamber vent.
- 12. Steam test.
 - A. With oven temperature at 450°F (230°C.) set 20 seconds on steam timer, 1 minute on bake timer, and press START key to initiate steam test.

- B. Check for steam leakage around and under loading door. If leakage is present, adjust door catch and/or door sweep as required. On wide view window doors adjust the door hinges.
- C. After time has expired press STOP key to silence beeper.
- D. With loading door closed. Allow oven to heat for 20 minutes at 450°F (230°C.).
- E. Set 20 seconds on steam timer, 1 minute on bake timer, and press START key to initiate steam test.
- F. After time has expired press STOP key to silence beeper.

- 13. Press VENT key to open baking chamber vent. Allow oven to vent for two minutes, then close vent.
- 14. Set oven control baking temperature below room ambient temperature and open loading door 6" to 10" to release vapors.
- 15. Cool-Down.
 - A. Press COOL DOWN key.
 - B. With loading door open, press VENT key to initiate oven cool-down.
 - C. After oven has reached a safe cool-down temperature, stop automatic cool-down by closing loading door and/or turning the oven power OFF.

FINAL CHECKS

- 1. Complete Installation Checklist and distribute copies per instructions on checklist.
- 2. Record start-up information on the label provided inside the control compartment door.