

O_PE_RA_TI_ON

HPC800 PROOFER



701 S. RIDGE AVENUE
TROY, OHIO 45374-0001

937 332-3000

www.hobartcorp.com

FORM 36710 (Mar. 2007)

TABLE OF CONTENTS

GENERAL	3
INSTALLATION	3
Unpacking.....	3
Plumbing Connections.....	3
Drain Connections	4
Electrical Connections	4
Dimensions and Service Connection Diagram.....	4
OPERATION.....	5
Proofing	5
Controls	5
Temperature	6
Humidity.....	7
Setting the Timer	8
Starting/Adjusting the Timer	8
Canceling/Stopping the Timer	8
Operating Instructions	9
Shutdown Procedures	9
CLEANING	10
MAINTENANCE	10
Service and Parts Information	10
TROUBLESHOOTING	11

OPERATION AND CARE OF HPC800 PROOFER

SAVE THESE INSTRUCTIONS

GENERAL

The HPC800 Proofer cabinet proofs racks of dough product under controlled temperatures and humidity prior to baking. The HPC800 Proofer has a 16-pan capacity that accommodates 18" x 26" (45.7 cm x 66 cm) baking trays with 3" (7.6 cm) slide spacing. Temperature and humidity can be set independently to meet your particular proofing needs. Air is circulated continuously to provide positive movement from bottom to top, creating a uniform distribution of warm, moist air.

All HPC800 Proofers have easy-to-clean stainless steel interior and exterior panels with urethane foam insulation.

The HPC800 Proofers are produced with quality workmanship and material. Proper installation, usage and maintenance of the proofer will result in years of satisfactory performance.

It is suggested that you thoroughly read this manual and carefully follow the instructions provided.

INSTALLATION

The HPC800 Proofer must be installed by authorized Hobart Bakery Systems trained service technicians.

UNPACKING

This proofer was inspected before leaving the factory. The transportation company assumes full responsibility for safe delivery upon acceptance of the shipment. Immediately after unpacking, check for possible shipping damage. If the proofer is found to be damaged, save the packaging material and contact the carrier within 15 days of delivery.

Carefully unpack the proofer and place in a work-accessible area as near to its final installed position as possible. Remove protective covering from exterior surfaces prior to placing proofer in final location.

PLUMBING CONNECTIONS

WARNING: PLUMBING CONNECTIONS MUST COMPLY WITH APPLICABLE SANITARY, SAFETY AND PLUMBING CODES.

The proofer should have its own water supply line, separate from the oven.

The proofer water supply should have a hardness of 4 to 6 grains per gallon, pH of 6.5 to 8.0 and chlorides less than 30 PPM. Water condition outside of these requirements may void the warranty. Please consult your local water company and/or water condition dealer before installing proofer.

Connect the cold water supply to the 1/4" NPT incoming water connection located at the rear of the proofer. Water supply should have a pressure of 30 to 75 psi.

DRAIN CONNECTIONS

Connect a 1/2" drain line to the 1/2" NPT drain connection located at the rear of the proofer. Route the drain line to a floor drain, allowing a minimum 1" air gap between the drain line outlet and floor drain.

ELECTRICAL CONNECTIONS

WARNING: ELECTRICAL AND GROUNDING CONNECTIONS MUST COMPLY WITH THE APPLICABLE PORTIONS OF THE NATIONAL ELECTRICAL CODE AND/OR OTHER LOCAL ELECTRICAL CODES.

WARNING: DISCONNECT THE ELECTRICAL POWER TO THE UNIT AND FOLLOW LOCKOUT / TAGOUT PROCEDURES.

WARNING: APPLIANCES EQUIPPED WITH A FLEXIBLE ELECTRIC SUPPLY CORD ARE PROVIDED WITH A THREE-PRONG GROUNDING PLUG. THIS PLUG MUST BE CONNECTED INTO A PROPERLY GROUNDED THREE-PRONG RECEPTACLE. IF THE RECEPTACLE IS NOT THE PROPER GROUNDING TYPE, CONTACT AN ELECTRICIAN. DO NOT REMOVE THE GROUNDING PRONG FROM THIS PLUG.

DIMENSIONS AND SERVICE CONNECTION DIAGRAM

Electrical Data	
Volts	120
Hertz	60
Amps	14
Phase	1


Service Connection Points

Power ▲

Water ●

Proofer Drain ■

[PL-58303]

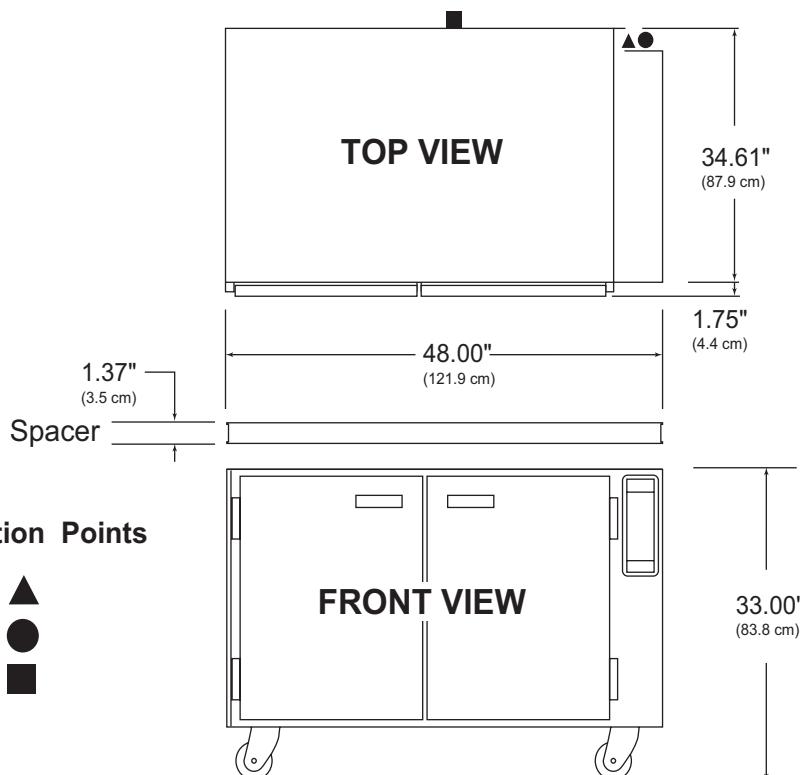

OPERATION

PROOFING

Controlled temperature and humidity in the proofer promotes yeast fermentation, which generates gas and causes the dough to rise. Proofing takes from 45 to 60 minutes, depending on the product. A temperature setting of 95°F (35°C) and humidity at 85% are typical but will vary slightly, depending on the product being proofed. To dry-proof, set the humidity to the lowest setting.

CONTROLS

TEMPERATURE WINDOW - Displays the current or set temperature. The LED dot will be lit when the heat cycle is running. The maximum setting is 115°F (46°C).

HUMIDITY WINDOW - Displays the current or set humidity. The LED dot will be lit when water is being injected into the proofer cavity.

TIMER WINDOW - Displays the current or set timer. The LED dot will flash to indicate the timer is running.

TIMERS ARROW BUTTON - Press to select a timer (1, 2 or 3). The indicator above the number will be lit to show which timer is in use.

TEMP BUTTON - Press to adjust or set the temperature. When the button indicator is lit, the temperature displayed is the set temperature. When the button indicator is not lit, the temperature displayed is the current cavity temperature.

HUM BUTTON - Press to adjust or set the humidity. When the button indicator is lit, the humidity displayed is the set humidity. When the button indicator is not lit, the humidity displayed is the current cavity humidity.

TIMER START/STOP BUTTON - Press to select timer function and to start/stop timer operation. The button indicator is lit when timer function is entered.

UP or DOWN ARROW - Press to set the temperature, humidity or timer.

POWER ON/OFF - Press to turn unit on/off.

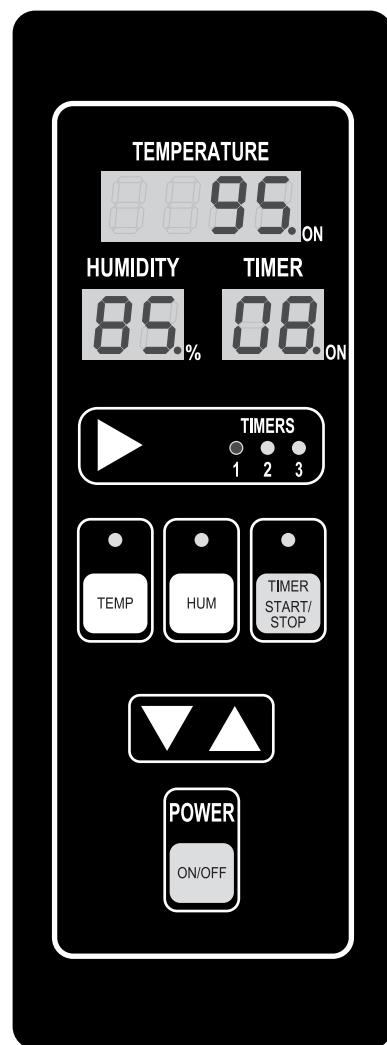


Fig. 1

TEMPERATURE

1. Press the POWER ON/OFF button to turn on the proofer.
2. If the unit is set to display the actual temperature (Fig. 2), the button indicator LED will not be illuminated.

Actual Temperature Displayed

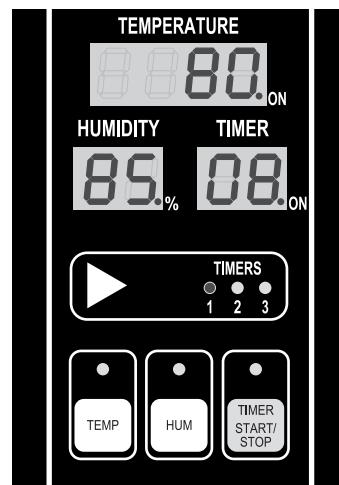


Fig. 2

3. If the unit is set to display the set temperature (Fig. 3), the button indicator LED will be illuminated. Pressing and holding the TEMP button will display the actual temperature.

Set Temperature Displayed



Fig. 3

Setting the Temperature

1. Press the TEMP button to adjust the set temperature. The button indicator LED will flash and the set temperature will be displayed for 5 seconds.
 2. Press the up or down arrow buttons to adjust the set point while the button indicator LED is flashing.
 3. After pressing the arrow button, wait 5 seconds to allow the new temperature setting to save. The indicator LED will stop flashing. The TEMP display reverts back to actual or set temperature mode.
- NOTE:** The temperature display will increment by 1° each time the arrow button is pressed. If you hold down the arrow button for more than 1 second, the temperature display will increment by 5° until released.

NOTE: If other setups (humidity or timers) are entered within the 5 seconds of idle time, the set temperature will be saved.

HUMIDITY

1. If the unit is set to display the actual humidity (Fig. 4), the button indicator LED will not be illuminated.

Actual
Humidity
Displayed

HUM Button
LED Not
Illuminated

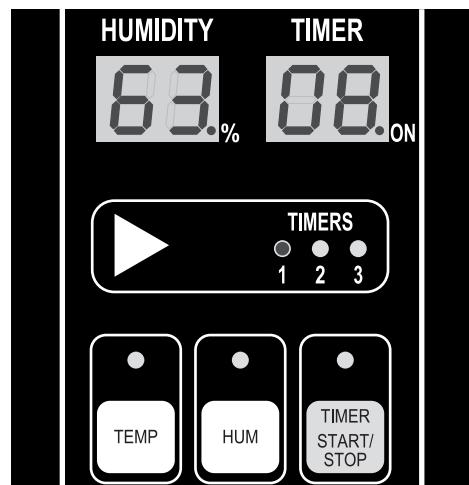


Fig. 4

2. If the unit is set to display the set humidity (Fig. 5), the button indicator LED will be illuminated. Pressing and holding the HUM button will display the actual relative humidity.

Set Humidity
Displayed

HUM
Button LED
Illuminated

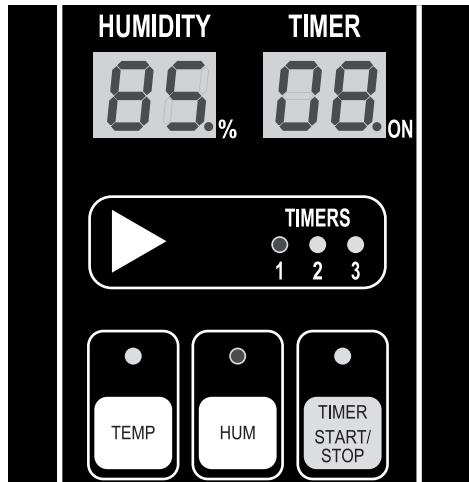


Fig. 5

Setting the Humidity

1. Press the HUM button to adjust the set humidity. The button indicator LED will flash and the set humidity will be displayed for 5 seconds.
2. Press the up or down arrow buttons to adjust the set point while the button indicator LED is flashing.

NOTE: The humidity display will increment by 1% each time the arrow button is pressed. If you hold down the arrow button for more than 1 second, the humidity display will increment by 5% until released.

3. After pressing the arrow button, wait 5 seconds to allow the new humidity setting to save. The indicator LED will stop flashing and remain off. The humidity display reverts back to actual or set as previously selected.

NOTE: If other setups (temperature or timers) are entered within the 5 seconds of idle time, the set humidity will be saved.

SETTING THE TIMER

NOTE: The timer display will initially show "00" in the display window.

1. Press the TIMER START/STOP button to select the timer function. The button indicator LED will illuminate (Fig. 6) and the timer display will show the current setting.

NOTE: If the TEMP or HUM buttons are pressed while the timer is in setup mode, the timer function will be canceled.

2. Press the arrow button next to the timers LED indicators to select a timer (1, 2 or 3). The timer display will show the timer running if the LED dot on the display is on, or the last time set for that timer.
3. Press the up or down arrow buttons to adjust the timer setting. The timer display will show 0 to 60 minutes.
4. Press the TIMER START/STOP button or the arrow button next to the timers LED indicators to save the set time.

NOTE: The timer setting will also save if no button is pressed for 3 seconds.

STARTING/ADJUSTING THE TIMER

1. After setting the timer, press the TIMER START/STOP button to start the timer operation. The LED dot on the timer display will flash to indicate the timer is operating.
2. Press the up or down arrow buttons to adjust the timer setting while the timer is in countdown mode.

NOTE: The timer will pause if the TIMER START/STOP button is pressed while the timer is running.

3. Press the TIMER START/STOP button to resume timer running.

CANCELING/STOPPING THE TIMER

1. Press and hold the down arrow until the timer display reaches "00". This initiates a stop timer.

NOTE: When the timer completes the time cycle, the buzzer pulses a short beep and the timer display flashes "00".

2. Press the TIMER START/STOP button to silence the timer.

NOTE: The temperature or humidity can be changed while the timer is running. See Setting the Temperature or Setting the Humidity.



Actual Timer
Displayed
(LED dot flashing)

Timer 1 Selected

TIMER
START/STOP
Button LED
Illuminated

Fig. 6

OPERATING INSTRUCTIONS

1. Press POWER ON/OFF button (Fig. 7). All displays are now illuminated.
2. Set temperature (as required).
3. Set humidity (as required).
4. Allow cold unit to heat up and balance humidity for 15-20 minutes before putting any product in the proofer.
5. Load product using standard 18" x 26" (45.7 cm x 66 cm) pans. Only load as much product as needed for one oven bake.
6. Set and start timer (as required). (Additional product may be added to proofer after allowing a lag time of the typical bake cycle from start of previous batch.)
7. If timer is used, a buzzer will sound and the control panel will flash to indicate the timer has reached "00".
8. Push TIMER START/STOP to silence alarm.
9. Remove product and prepare for oven bake.

SHUTDOWN PROCEDURES

1. Remove all product.
2. Press POWER ON/OFF. All displays will not be illuminated.
3. The fan will continue to run for 15-20 minutes after power off. Crack doors during this time frame to help dry out proofer.
4. After fan shuts down, the proofer may be cleaned. See Cleaning.

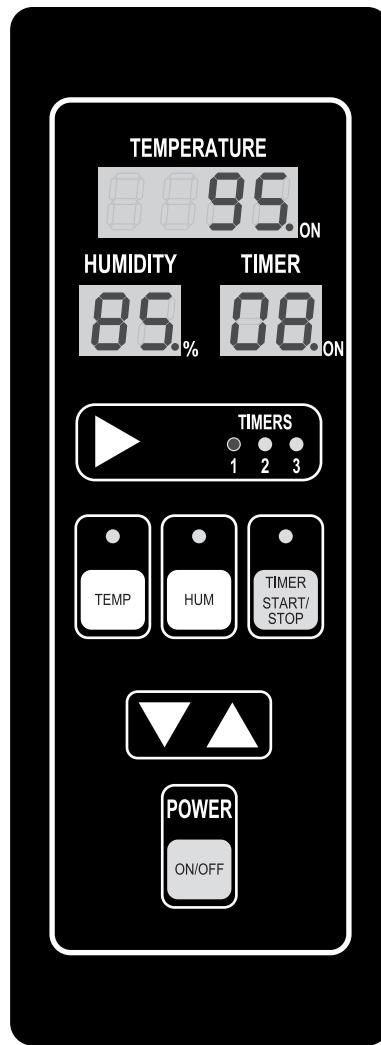


Fig. 7

CLEANING

1. Using a clean cloth moistened in warm, soapy water, wash the stainless steel interior of the cabinet. Rinse with clean water and dry with a clean cloth.
2. Clean the outside daily with a clean, damp cloth.
3. Use care when cleaning around sensitive interior parts, such as probes and sensors.
4. Do not use cleaners containing grit, abrasive materials, bleach, harsh chemicals or chlorinated cleaners. Do not use steel wool on stainless steel surfaces. Never spray down the proofer with water, steam or power wash.
5. Be cautious with new or improved cleaning formulas; use only after being well tested in an inconspicuous place.

MAINTENANCE

WARNING: DISCONNECT THE ELECTRICAL POWER TO THE MACHINE AND FOLLOW LOCKOUT / TAGOUT PROCEDURES.

SERVICE AND PARTS INFORMATION

Contact your authorized service office for any repairs or adjustments needed on this equipment.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Controller does not turn on after POWER ON/OFF button is pressed.	1. Unit not plugged in. 2. Control panel fuse blown.	1. Check power cord at outlet. 2. Contact your authorized service office.
Temperature display flashes "00".	Sensor problem.	Contact your authorized service office.
Temperature display flashes "Err".	Sensor problem.	Contact your authorized service office.
Temperature display flashes "OUtP".	Sensor problem.	Contact your authorized service office.
Keypad does not respond.	Problem with membrane.	Contact your authorized service office.
Buzzer does not sound when timer counts down.	Problem with buzzer.	Contact your authorized service office.

NOTES